

CX80 Vehicle Dock

Model CX80-VD-SRH, CX80-VD-WL

Quick Start Guide

CX80-VD-EN-QS Rev A 04/18

Out of the Box

Make sure that your shipping box contains these items:

- CX80 Vehicle Dock (CX80-VD-SRH, CX80-VD-WL)
- Quick start guide and regulatory compliance sheet


If any of these items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return the Vehicle Dock for service or if you want to store the charger while not in use.

⚠

Caution: We recommend the use of Honeywell accessories and power adapters. Use of any non-Honeywell accessories or power adapters may cause damage not covered by the warranty.

Mise en garde : Il est recommandé d'utiliser les périphériques, les cordons d'alimentation et les adaptateurs secteur conçus par Honeywell. L'utilisation de tout périphérique, cordon d'alimentation ou adaptateur secteur d'une autre marque est susceptible de provoquer des dommages non couverts par la garantie.


Front Features

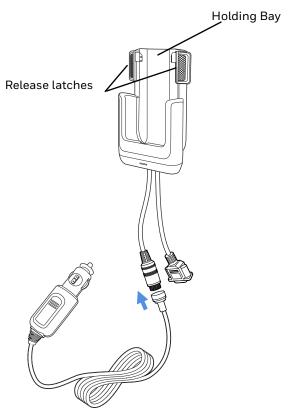

Connect Power

The vehicle that you connect the Vehicle Dock to should supply 2 A to the CX80. The operating temperature is -20 °C to 50 °C (- 4 °F to 122 °F).

- 1. Connect the vehicle dock power cable to the power adapter cable and screw the two cables together.
- 2. Plug the power adapter into the power port on the vehicle.
- 3. (Optional) Connect a device to the vehicle dock through the serial port connector.

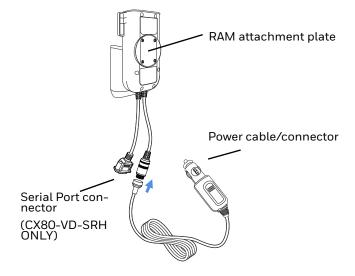

Charge the CX80



▲ Caution: Make sure that all components are dry prior to using the computers and batteries with accessories. Using wet components may cause damage not covered by the warranty.

Mise en garde : Assurez-vous que tous les composants sont secs avant de connecter les terminaux/batteries à des périphériques. L'insertion de composants humides risque de provoquer des dommages non couverts par la garantie.

Insert the CX80 with battery inserted into the vehicle dock until the latches click.



Mount the Vehicle Dock

You can mount the vehicle dock to your vehicle with a RAM mount.

Mounting hardware required:

- RAM mount
- Appropriate screws and nuts.

Support

To search our knowledge base for a solution or to log into the Technical Support portal and report a problem, go to www.hsmcontactsupport.com.

User Documentation

For the user guide and other documentation, go to www.honeywellaidc.com.

Limited Warranty

For warranty information, go to www.honeywellaidc.com and click Get Resources > Product Warranty.

Patents

For patent information, see www.hsmpats.com.

Trademarks

Android and Google and other marks are trademarks of Google Inc.

Disclaimer

Honeywell International Inc. ("HII") reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. HII disclaims all responsibility for the selection and use of software and/or hardware to achieve intended results.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

Copyright $\textcircled{\sc c}$ 2018 Honeywell International Inc. All rights reserved.