

VARIO V

Operating Manual



Edition: 08/25

Copyright

Copyright by Carl Valentin GmbH

Subject to modifications.

All rights, including those regarding the translation, are reserved.

No part of this document may be reproduced in any form (print, photocopy, or any other method) or edited, copied, or distributed electronically without written permission from Carl Valentin GmbH.

Trademarks

All named brands or trademarks are registered brands or registered trademarks of their respective owners and may not be separately labelled. It must not be concluded from the missing labelling that it is not a registered brand or a registered trademark.

Carl Valentin uses Free and Open Source Software within its products. For more information see www.carl-valentin.de/opensource.

Topicality

Information on the scope of delivery, appearance, performance, dimensions, and weight reflect our knowledge at the time of printing.

Due to constant further development of our products discrepancies between documentation and product can occur.

Please check www.carl-valentin.de for the latest update.

Terms and Conditions

Deliveries and services are effected under the General Conditions of Business of Carl Valentin GmbH

Licences

- CE** Low-Voltage Directive (2014/35/EU)
 Electromagnetic Compatibility Directive (2014/30/EU)
 RoHS Directive (2011/65/EU)



Carl Valentin GmbH

Neckarstraße 78 – 86 u. 94
78056 Villingen-Schwenningen

Phone +49 7720 9712-0
E-Mail info@carl-valentin.de
Internet www.carl-valentin.de

Table of Contents

1	Introduction.....	5
1.1	General Instructions	5
1.2	Intended Use	5
1.3	Important Notes	6
1.4	Connector Pin Assignment (Printer Rear)	7
2	Safety Instructions	9
2.1	Operating Conditions	10
3	Technical Data	15
3.1	Control Inputs and Outputs	18
4	Installation.....	27
4.1	Set up the Label Printer.....	27
4.2	Connect the Label Printer.....	28
4.3	Switch the Label Printer On and Off.....	28
4.4	Initial Operation of the Label Printer.....	29
5	Load Media.....	31
5.1	Load Label Roll.....	31
5.2	Load Transfer Ribbon.....	35
5.3	Increase the Clamping Force for Ribbon Roll	37
6	Function Menu	39
6.1	Operation Panel.....	39
6.2	Keyboard Assignment (Text Entry / Customized / SD Card)	40
6.3	Menu Structure	42
6.4	Print Settings	46
6.5	Label Layout	47
6.6	Device Settings.....	49
6.7	Network	53
6.8	Password.....	54
6.9	Interface.....	56
6.10	Emulation.....	57
6.11	Date & Time.....	58
6.12	Service Functions	59
6.13	Main Menu	63
7	Options	65
7.1	Cutter	65
7.2	Dispenser I/O.....	67
7.3	WLAN	69
7.4	Scanner	70
8	SD Card / USB Memory Stick	73
8.1	General Information.....	73
8.2	Display Structure	73
8.3	Navigation.....	74
8.4	Define User Directory	75
8.5	Load Layout.....	76
8.6	File Explorer	77
8.7	Firmware Update	82
8.8	Filter.....	82

9	Maintenance and Cleaning	83
9.1	General Cleaning.....	84
9.2	Cleaning the Transfer Ribbon Drawing Roller.....	84
9.3	Cleaning the Pressure Roller	85
9.4	Cleaning the Printhead.....	86
9.5	Cleaning the Label Photocell.....	87
9.6	Replacing the Printhead (General).....	88
9.7	Replacing the Printhead	89
9.8	Adjusting the Printhead	90
10	Error correction	91
11	Additional information	103
11.1	Column Printing	103
11.2	Hotstart	104
11.3	Backfeed/Delay	106
11.4	Photocells	108
12	Touch-Screen Display	109
12.1	Menu Structure	109
12.2	Touch-Screen Display Structure	115
12.3	Indication of Menus	116
12.4	User-Defined Info Field	117
12.5	Favorites List	119
12.6	Parameter Input.....	121
12.7	Navigation Zones.....	123
12.8	Maintenance Zone.....	124
12.9	Process Data	129
12.10	Memory Menu.....	131
12.11	Information Zone	133
12.12	Change to Foil Keyboard.....	133
13	Environmentally-Friendly Disposal	135
14	Index	137

1 Introduction

1.1 General Instructions

Basic information and warning references with the corresponding signal words for the danger level are as follows specified in this manual:



DANGER identifies an extraordinarily great and immediate danger which could lead to serious injury or even death.



WARNING identifies a possible danger could lead to serious bodily injury or even death if sufficient precautions are not taken.



WARNING of cutting injuries.
Pay attention that cutting injuries caused by blades, cutting devices or sharp-edged parts are avoided.



WARNING of hand injuries.
Pay attention that hand injuries caused by closing mechanical parts of a machine/equipment are avoided.



WARNING of hot surfaces.
Pay attention so as not to come into contact with hot surfaces.



CAUTION indicates a potentially dangerous situation which could lead to moderate or light bodily injury or damage to property.



NOTICE gives you tips. They make a working sequence easier or draw attention to important working processes.



Gives you tips on protecting the environment.



Handling instruction



Optional accessories, special fittings

Datum

Information in the display

1.2 Intended Use

The label printer is a state-of-the-art device which complies with the recognized safety-related rules and regulations. Despite this, a danger to life and limb of the user or third parties could arise and the label printer or other property could be damaged while operating the device.

The label printer may only be used while in proper working order and for the intended purpose. Users must be safe, aware of potential dangers and must comply with the operating instructions. Faults, in particular those which affect safety, must be remedied immediately.

The label printer is solely intended to print suitable media which have been approved by the manufacturer. Any other or additional use is not intended. The manufacturer/supplier is not liable for damage resulting from misuse. Any misuse is at your own risk.

Intended use includes heeding the operating manual, including the maintenance recommendations/regulations specified by the manufacturer.

1.3 Important Notes

The label printer can be used in thermal as well as in thermal transfer applications.

The label printer is equipped with eight vector, six bitmap and six proportional fonts. It can be printed inverse, in italic format or 90 degrees turned fonts.

The handling of our durable label printers is easy and comfortable. The parameter settings are made with the keys of the foil keyboard. At each time the graphic display shows the current status.

Time-saving firmware update is possible by interface. As default, the print module is equipped with a serial, USB and Ethernet interface. The print module automatically recognizes by which interface it is controlled.

1.4 Connector Pin Assignment (Printer Rear)

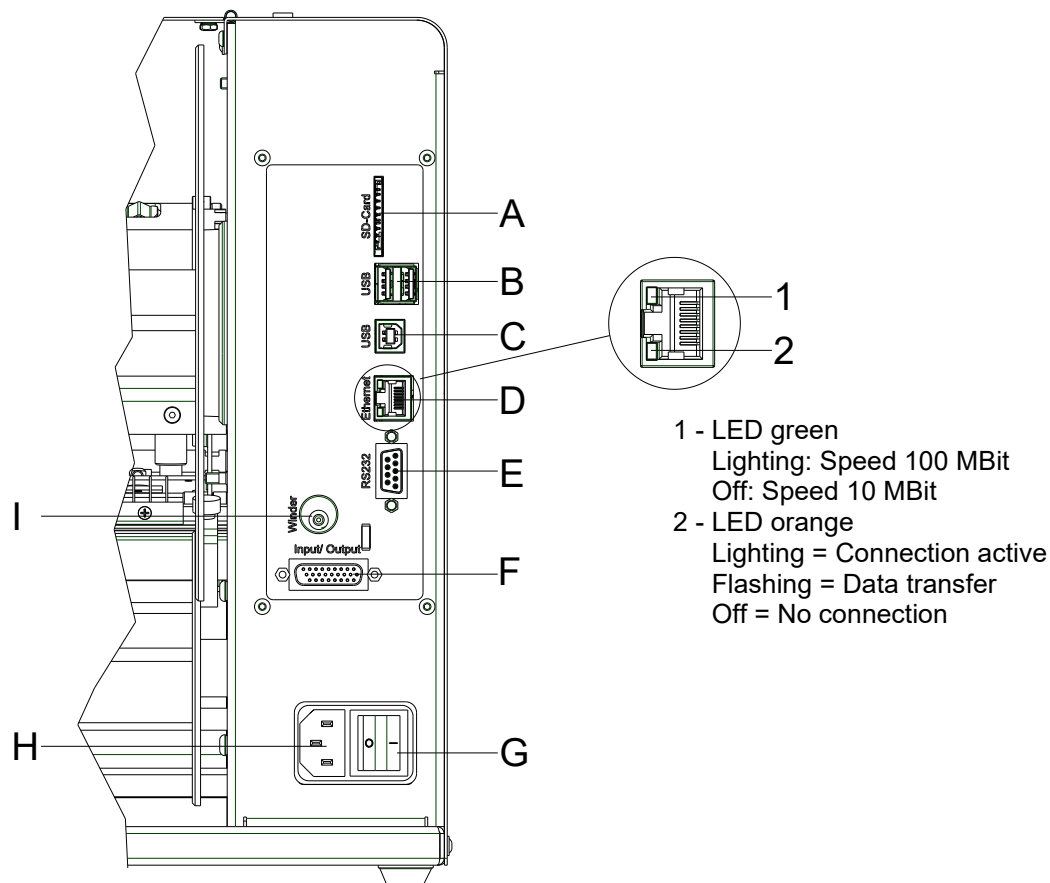


Figure 1

- A Plug-in for SD card
- B 2x USB host
- C USB 2.0 Hi-Speed Device (for connection PC)
- D Ethernet 10/100 interface
- E Serial interface RS-232
- F External output/input (option)
- G Switch On/Off
- H Power supply
- I Winder connection



CAUTION!

The label printer can be damaged by non-compliant winders.

⇒ Attach only winders of Carl Valentin.

2 Safety Instructions

The print module is designed for power supply systems of 100 ... 240 V AC. Connect the print module only to electrical outlets with a ground contact.

Couple the label printer to devices using extra low voltage only.

Before making or undoing connections, switch off all devices involved (computer, printer, accessories etc.).

Operate the label printer in a dry environment only and do not get it wet (sprayed water, mist etc.).

Maintenance and servicing work can only be carried out by trained personnel.

Operating personnel must be trained by the operator on the basis of the operating manual.

If the label printer is operated with the cover open, ensure that clothing, hair, jewellery and similar personal items do not contact the exposed rotating parts.

The print unit and parts of it (e.g. printhead) can get hot during printing. Do not touch the printhead during operation. Cool down the print unit before changing material, removal or adjustment.

Never use highly inflammable consumables.

There is a risk of injury at the tear-off edge. If the tear-off edge is not used, attach the edge protection profile.

Carry out only the actions described in these operating instructions. Any work beyond this may only be performed by the manufacturer or upon agreement with the manufacturer.

Unauthorized interference with electronic modules or their software can cause malfunctions.

Other unauthorized work or modifications to the direct print module can endanger operational safety.

Always have service work done in a qualified workshop, where the personnel have the technical knowledge and tools required to do the necessary work.

There are warning stickers on the direct print modules that draw your attention to dangers. Therefore the warning stickers are not to be removed as then you and others cannot be aware of dangers and may be injured.



DANGER!

Danger to life and limb from power supply!

⇒ Do not open the casing.

2.1 Operating Conditions

Before initial operation and during operation these operating conditions have to be observed to guarantee safe and interference-free service of our printers.

Therefore please carefully read these operating conditions.

Shipment and storage of our printers are **only** allowed in original packing.

Installation and initial operation of printer is only allowed if operating conditions were **fulfilled**.

Initial operation, programming, operation, cleaning and service of our printers are only recommended after careful study of our manuals.

Operation of printer is only allowed by especially trained persons.



NOTICE!

Perform trainings regularly.

Content of the training are chapter 2.1 (Operating Conditions), chapter 5 (Load Media) and chapter 9 (Maintenance and Cleaning).

These indications are also valid for someone else's equipment supplied by us.

Only use original spare and exchange parts.

Please contact the manufacturer with respect to spare/wear parts.

Conditions for installation place

The installation place of printer should be even, free of vibration and currents of air are to be avoided.

The printers have to be installed to ensure optimal operation and servicing.

Installation of power supply

The installation of the power supply to connect our printers has to be effected according to the international rules and regulations, especially the recommendations of one of the three following commissions:

- International Electronic Commission (IEC)
- European Committee for Electro technical Standardisation (CENELEC)
- Verband Deutscher Elektrotechniker (VDE)

Our printers are constructed according to VDE and have to be connected to a grounded conductor. The power supply has to be equipped with a grounded conductor to eliminate internal interfering voltage.

Technical data of power supply

Power line voltage and power line frequency: See type plate

Allowable tolerance of power line voltage:
+6 % ... -10 % of nominal value

Allowable tolerance of power line frequency:
+2 % ... -2 % of nominal value

Allowable distortion factor of power line voltage: $\leq 5\%$

Anti-Interference measures:

In case your net is infected (e.g. by using thyristor controlled machines) anti-interference measures have to be taken. You can use one of the following possibilities:

- Provide separate power supply to our printers.
- In case of problems please connect capacity-decoupled isolation transformer or similar interference suppressor in front of our printers.

**NOTICE!**

This is a machine of type A. This machine can cause interferences in residential areas; in this case it can be required from operator to accomplish appropriate measures and be responsible for it.

Connecting lines to external machines

All connecting lines have to be guided in shielded lines. Shielding has to be connected on both sides to the corner shell.

It is not allowed to guide lines parallel to power lines. If a parallel guiding cannot be avoided a distance of at least 0.5 m has to be observed.

Temperature of lines between: $-15 \dots +80\text{ }^{\circ}\text{C}$.

It is only allowed to connect devices which fulfil the request 'Safety Extra Low Voltage' (SELV). These are generally devices which are checked corresponding to EN 62368-1.

Installation of data lines

The data cables must be completely protected and provide with metal or metallised connector housings. Shielded cables and connectors are necessary, in order to avoid radiant emittance and receipt of electrical disturbances.

Allowable lines

Shielded line:

4 x 2 x 0,14 mm² (4 x 2 x AWG 26)

6 x 2 x 0,14 mm² (6 x 2 x AWG 26)

12 x 2 x 0,14 mm² (12 x 2 x AWG 26)

Sending and receiving lines have to be twisted in pairs.

Maximum line length:

Interface V 24 (RS-232C): max. 3 m (with shielding)

USB: max. 3 m

Ethernet: max. 100 m

Air convection

To avoid inadmissible heating, free air convection has to be ensured.

Limit values

Protection according IP: 20

Ambient temperature °C (operation): Min. +5 Max. +35

Ambient temperature °C (storage): Min. -20 Max. +60

Relative air humidity % (operation): Max. 80

Relative air humidity % (storage): Max. 80

(bedewing of printers not allowed)

Guarantee

We do not take any responsibility for damage caused by:

- Ignoring our operating conditions and operating manual.
- Incorrect electric installation of environment.
- Building alterations of our printers.
- Incorrect programming and operation.
- Not performed data protection.
- Using of not original spare parts and accessories.
- Natural wear and tear.

When (re)installing or programming our printers please control the new settings by test running and test printing. Herewith you avoid faulty results, reports and evaluation.

Only specially trained staff is allowed to operate the printers.

Control the correct handling of our products and repeat training.

We do not guarantee that all features described in this manual exist in all models. Caused by our efforts to continue further development and improvement, technical data might change without notice.

By further developments or regulations of the country illustrations and examples shown in the manual can be different from the delivered model.

Please pay attention to the information about admissible print media and the notes to the printer maintenance, in order to avoid damages or premature wear.

We endeavoured to write this manual in an understandable form to give you as much information as possible. If you have any queries or if you discover errors, please inform us to give us the possibility to correct and improve our manual.

3 Technical Data

	Vario V 103/8 T	Vario V 104/8	Vario V 107/12	Vario V 107/24	Vario V 108/12 T
Print resolution	203 dpi	203 dpi	300 dpi	600 dpi	300 dpi
Max. print speed	250 mm/s	250 mm/s	250 mm/s	100 mm/s	250 mm/s
Print width	104 mm	104 mm	105.7 mm	105.7 mm	108.4 mm
Passage width	110 mm	110 mm	110 mm	110 mm	110 mm
Printhead	Flat Type ¹	Flat Type ²	Flat Type ²	Flat Type ²	Flat Type ¹
Labels					
Labels, continuous rolls or fan-fold	paper, cardboard, textile, synthetics				
Max. material weight	220 g/m² (larger on demand)				
Min. label width	15 mm				
Min. label height	Standard: 6 mm Cutter/dispenser mode: 15 mm				
Max. label height	6000 mm	6000 mm	3000 mm	1000 mm	3000 mm
Max. roll diameter	internal unwinder: 200 mm internal rewinder: 100 mm				
Core diameter	40 mm / 75 mm (option)				
Winding	outside or inside				
Label sensor	standard: transmission option: reflexion from bottom or top				
Transfer Ribbon					
Ink	outside or inside				
Max. roll diameter	Ø 80 mm				
Core diameter	25.4 mm / 1"				
Max. length	450 m				
Max. width	110 mm				
Dimensions (mm)					
Width x height x depth	230 x 310 x 450				
Weight	15 kg				
Electronics					
Processor	TI Sitara ARM Cortex A8, 1GHz 32kB ICache, 32kB DCache up to 2000 Mips				
RAM	512 MB				
Slot	for SD card				
Battery cache	for Real-Time clock (storage of data with shut-down)				
Warning signal	acoustic signal when error				
Interfaces					
Serial	RS-232C (up to 115200 Baud)				
USB	2.0 High Speed Slave				
Ethernet	10/100 Base T, LPD, RawIP-Printing, DHCP, HTTP, FTP				
2 x USB Host	on the back for: keyboard, USB memory stick				
WLAN (option)	USB WLAN stick (not yet available)				
Operation Data					
Power supply	100 ... 240 V AC / 50-60 Hz				
Max. power consumption	350 VA				
Nominal current	4 A				
Operating temperature	5 ... 35 °C				
Humidity	max. 80 % (non condensing)				

¹ for thermal direct

² for thermal transfer

Operation Panel	Vario V 103/8 T	Vario V 104/8	Vario V 107/12	Vario V 107/24	Vario V 108/12 T
Keys	test print, function menu, quantity, SD card, feed, enter, 4 x cursor, numeric keypad				
LCD display	graphic display 132 x 64 pixel				
Touch-Screen Display (Option)					
Operating functions	Favorites, function menu, memory card, print start, test print, feed, about menu				
Colour display	800 x 480 pixel, screen size 7"				
Settings					
	date, time, shift times 20 language settings (others on demand) label and device parameters, interfaces, password protection, variables				
Monitoring					
Stop printing if	end of ribbon / end of labels				
Status report	extensive status print with information about settings e.g. print length counter, runtime counter, photocell interface and network parameters printout of all internal fonts and all supported bar codes				
Fonts					
Font types	6 Bitmap fonts 8 Vector fonts/TrueType fonts 6 proportional fonts other fonts on demand				
Character sets	Windows 1250 up to 1257, DOS 437, 850, 852, 857, UTF-8 all West and East European Latin, Cyrillic, Greek and Arabic (option) characters are supported other character sets on demand				
Bitmap fonts	size in width and height 0,8 ... 5,6 zoom 2 ... 9 orientation 0°, 90°, 180°, 270°				
Vector fonts/TrueType fonts	size in width and height 1 ... 99 mm variable zoom orientation 0°, 90°, 180°, 270°				
Font attributes	depending on character font bold, Italic, Inverse, Vertical				
Font width	variable				
Bar Codes					
1D bar codes	2/5 Industrial, Codabar, Code 128, Code 128A, Code 128B, Code 2/5 interleaved, Code 39, Code 39 extended, Code 93, EAN 13, EAN 8, EAN Add-on, GS1-128, Identcode, ITF 14, Leitcode, Pharmacode, PLANET (Postal Alpha Numeric Encoding Technique), PostNet, PZN 7, PZN 8, UPC-A, UPC-E, USPS Intelligent Mail				
2D bar codes	Aztec Code, CODABLOCK F, DataMatrix, GS1 DataMatrix, MAXICODE, PDF 417, QR Code				
Composite bar codes	GS1 DataBar Expanded, GS1 DataBar Limited, GS1 DataBar Omnidirectional, GS1 DataBar Stacked, GS1 DataBar Stacked Omnidirectional, GS1 DataBar Truncated				
	all bar codes are variable in height, module width and ratio. orientation 0°, 90°, 180°, 270°. Optionally with check digit and human readable line.				
Software					
Configuration	ConfigTool				
Process control	Loftware				
Label software	Labelstar Office Lite, Labelstar Office				
Windows driver	Windows 8.1® - Windows 10® 32/64 Bit, Windows 11® Windows Server 2016® - Windows Server 2022®				

Standard equipment

- Real time clock with printout date and time
Automatic daylight saving time
Storage of data with shut-down
- Variables: link field, counter, date/time, currency and shift variable, SD data
- Integrated unwinder
(max. outer diameter 200 mm)
- Thermal and thermal transfer version
- Ethernet interface
- CVPL protocol and ZPL II® protocol
- Label photocell (transmission)
- Slot for SD card

Optional equipment

- 7" touch-screen display
- Tear-off edge
- Cutting unit
- Dispenser unit with photocell
- Dispenser unit without photocell
- Label photocell (reflexion from bottom or top)
- External rewinder for labels PR 45V
- External unwinder for labels PA 50A
- WLAN interface
- Dispenser I/O
- Scanner

3.1 Control Inputs and Outputs

By means of a maximum of 16 control inputs and outputs which, in the following, are also referred to as ports, different functions of the printer system can be triggered and operating states can be displayed.

The ports are provided by means of a D-Sub bushing (26pin HD) at the rear panel of the printer system and are galvanically isolated from protective earth (PE) by means of an optocoupler semi-conductor route.

Each port can be configured as input and as output. This function however, is predefined in the printer software and cannot be changed by the user.

The following parameters can be changed and set by using the menu: debounce times and high or low active.

Printer, internal circuitry

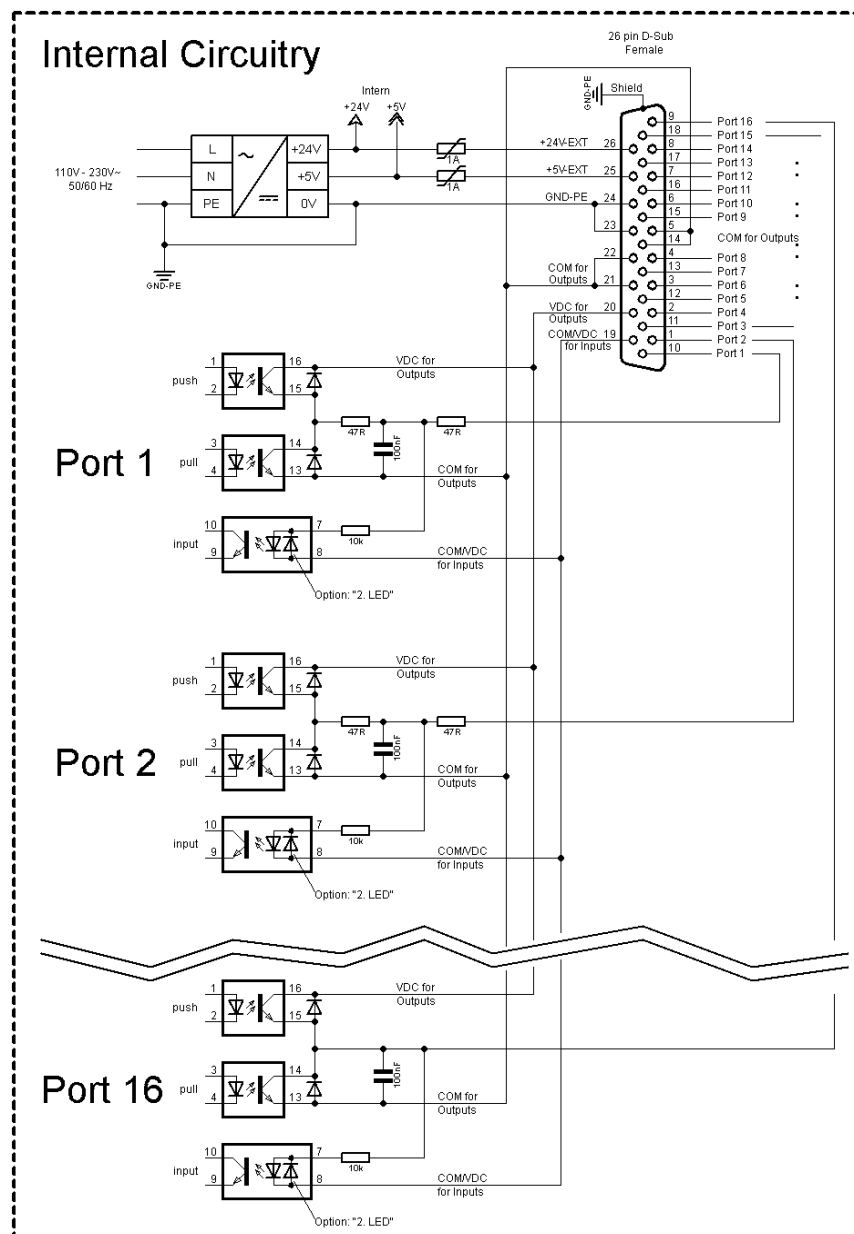


Figure 2

Configuration of D-Sub socket

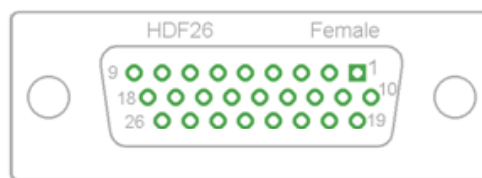


Figure 3

Cable identification

Number	Color
1	white
2	brown
3	green
4	yellow
5	grey
6	pink
7	blue
8	red
9	black
10	violet
11	grey-pink
12	red-blue
13	white-green
14	brown-green
15	white-yellow
16	yellow-brown
17	white-grey
18	grey-brown
19	white-pink
20	pink-brown
21	white-blue
22	brown-blue
23	white-red
24	brown-red
25	white-black
26	brown-black

Port 1 to Port 16 = Assignment for I/O Profile *Std_Label*

Identification	Pin	Description / Function
Port 1	10	Print start and cut (Input)
Port 2	1	Reprint last printed label (Input)
Port 3	11	Counter Reset (Input)
Port 4	2	Option applicator only: Start application (Input)
Port 5	12	Error reset (Input)
Port 6	3	Cancel all print jobs (Input)
Port 7	13	No function
Port 8	4	No function
Port 9	15	Error (Output)
Port 10	6	Print order activ (Output)
Port 11	16	Dispenser photocell: Label exists at dispenser photocell (Output)
Port 12	7	Single print (Output)
Port 13	17	Ready (Output)
Port 14	8	Option applicator only: Ready for application (Output)
Port 15	18	Option scanner only: Bar code not readable (Output)
Port 16	9	Prior warning for transfer ribbon end (Output)
COM/VDC for Inputs	19	Common reference potential of all control inputs. 'COM/VDC for Inputs' is usually connected with the (-) terminal of the control voltage and the control inputs are switched to active (+). By means of the option '2nd LED', 'COM/VDC for Inputs' can optionally be connected with the (+) terminal of the control voltage. Then, the control inputs are switched to active (-).
VDC for Outputs	20	Common supply connection of all control outputs. 'VDC for Outputs' must be connected with the (+) terminal of the control voltage. Never leave 'VDC for Outputs' open even if no output is used.
COM for Outputs	5,14 21,22	Common reference potential of all control outputs. 'COM for Outputs' must be connected with the (-) terminal of the control voltage. Never leave 'COM for Outputs' open even if no output is used.
GND-PE	23,24	'GND-PE' is the reference potential of the '+5 VDC EXT' and '+24 VDC EXT' voltages provided by the printer system. 'GND-PE' is printer internally connected with protective earth (PE).
+ 5 VDC EXT	25	5 Volt DC output for external use. Max. 1 A. This voltage is provided from direct print module and can be used e.g. as control voltage. Never apply any external voltage to this output.
+ 24 VDC EXT	26	24 Volt DC output for external use. Max. 1 A. This voltage is provided from direct print module and can be used e.g. as control voltage. Never apply any external voltage to this output.

Port 1 to Port 16 = Assignment for I/O Profile *StdFileSelLabel*

Identification	Pin	Description / Function
Port 1	10	Print start and cut (Input)
Port 2	1	Error reset (Input)
Port 3	11	Number of the file to load Bit 0 (Input)
Port 4	2	Number of the file to load Bit 1 (Input)
Port 5	12	Number of the file to load 2 (Input)
Port 6	3	Number of the file to load 3 (Input)
Port 7	13	Number of the file to load 4 (Input)
Port 8	4	Number of the file to load 5 (Input)
Port 9	15	Error (Output)
Port 10	6	Print order active (Output)
Port 11	16	Dispenser photocell: Label exists at dispenser photocell (Output)
Port 12	7	Printing (Output)
Port 13	17	Ready (Output)
Port 14	8	No function
Port 15	18	Option scanner only: Bar code not readable (Output)
Port 16	9	Transfer ribbon prior warning (Output)

Port 1 to Port 16 = Assignment for I/O Profile *AppI*

Identification	Pin	Description / Function
Port 1	10	Print start and cut (Input)
Port 2	1	Reprint last printed label (Input)
Port 3	11	Counter reset (Input)
Port 4	2	Option applicator only: Start application (Input)
Port 5	12	Error reset (Input)
Port 6	3	Cancel all print jobs (Input)
Port 7	13	No function
Port 8	4	No function
Port 9	15	Error (Output)
Port 10	6	Print order active (Output)
Port 11	16	Dispenser photocell: Label exists at dispenser photocell (Output)
Port 12	7	Printing (Output)
Port 13	17	Ready (Output)
Port 14	8	Option applicator only: Ready for application (Output)
Port 15	18	Option applicator only: Pad is in printing position (Output)
Port 16	9	Transfer ribbon prior warning (Output)

Port 1 to Port 16 = Assignment for I/O Profile *Std_Machine*

Identification	Pin	Description / Function
Port 1	10	Print start (Input)
Port 2	1	No function
Port 3	11	No function
Port 4	2	Option applicator only: Start application (Input)
Port 5	12	No function
Port 6	3	No function
Port 7	13	Label advance warning (Input)
Port 8	4	External release signal (Input)
Port 9	15	Error (Output)
Port 10	6	No function
Port 11	16	No function
Port 12	7	Single print (Output)
Port 13	17	Ready (Output)
Port 14	8	Option applicator only: Ready for application (Output)
Port 15	18	No function
Port 16	9	Transfer ribbon end / Label end (Output)

Port 1 to Port 16 = Assignment for I/O Profile *Appl_Machine*

Identification	Pin	Description / Function
Port 1	10	Print start (Input)
Port 2	1	No function
Port 3	11	No function
Port 4	2	Option applicator only: Start application (Input)
Port 5	12	No function
Port 6	3	Cancel all print jobs (Input)
Port 7	13	Label advance warning (Input)
Port 8	4	External release signal (Input)
Port 9	15	Error (Output)
Port 10	6	No function
Port 11	16	Option applicator only: Pad in final position below (Output)
Port 12	7	Single print (Output)
Port 13	17	Ready (Output)
Port 14	8	Option applicator only: Ready for application (Output)
Port 15	18	Option applicator only: Pad is in printing position (Output)
Port 16	9	Transfer ribbon end / Label end (Output)

Technical data

Plug Connector	
Type	D-Sub connector High Density 26-pin. / connector
Manufacturer	W+P-Products
Reference number	110-26-2-1-20
Output Voltages (connected with GND-PE)	
+ 24 V / 1 A	Fuse: Polyswitch / 30 V / 1 A
+ 5 V / 1 A	Fuse: Polyswitch / 30 V / 1 A
Port 1 - 15	
Input	
Tension	5 VDC ... 24 VDC
Impedance	$47\Omega + (100\text{nF} \parallel 10\text{ k}\Omega)$
Output	
Tension	5 VDC ... 24 VDC
Impedance	$47\Omega + (100\text{nF} \parallel 10\text{ k}\Omega \parallel 47\Omega)$
Current max.	High +15 mA Low -15 mA
Port 16	
Input	
Tension	5 VDC ... 24 VDC
Impedance	$100\text{nF} \parallel 10\text{ k}\Omega$
Output	
Tension	5 VDC ... 24 VDC
Impedance	$100\text{nF} \parallel 10\text{ k}\Omega$
Current max.	High +500 mA (Darlington BCP56-16) Low - 500 mA (Darlington BCP56-16)
Optocoupler	
Output	TCMT4106, CTR 100 % - 300 %, Vishay or TLP281-4(GB), CTR 100 % - 600 %, Toshiba
Input	TCMT4106, CTR 100 % - 300 %, Vishay or TLP281-4(GB), CTR 100 % - 600 %, Toshiba
Input Option 2nd LED	TCMT4600, CTR 80 % - 300 %, Vishay or TLP280-4, CTR 33 % - 300 %, Toshiba

Example 1

Device connection to a machine with S7-300 SPS.

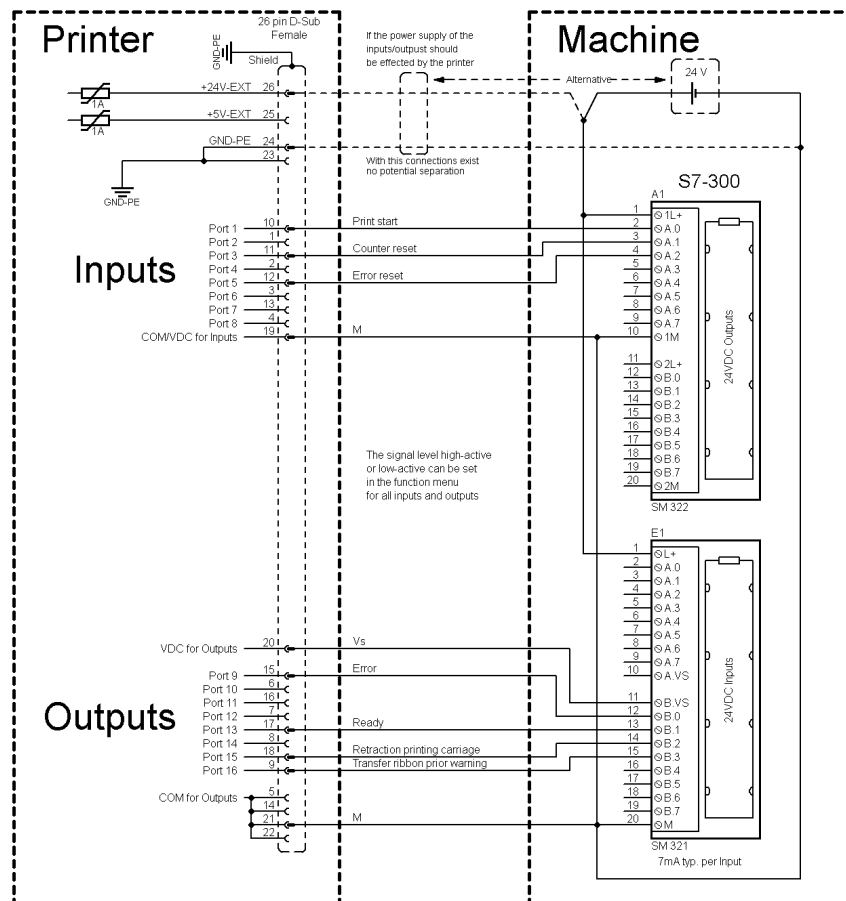


Figure 4

Example 2

Device connection to an operating panel.

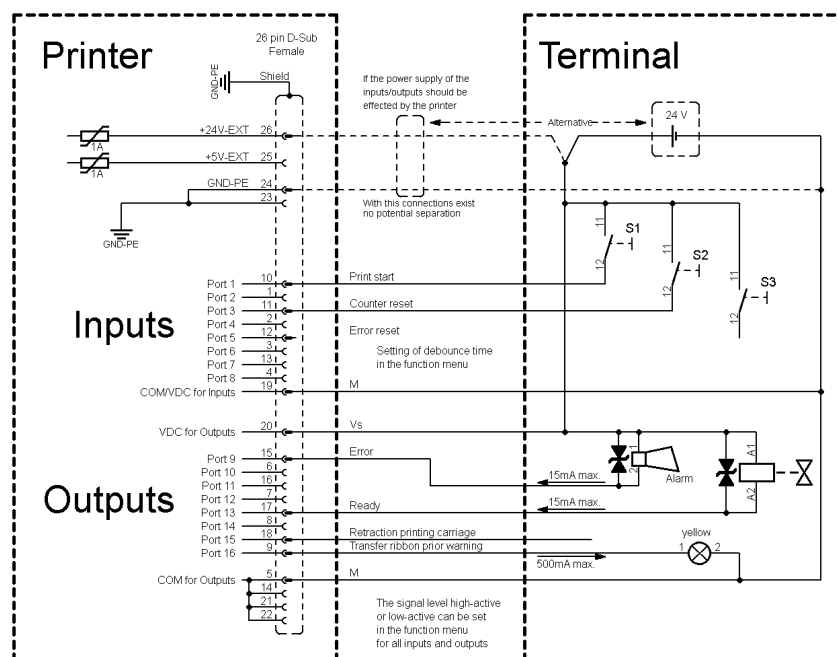
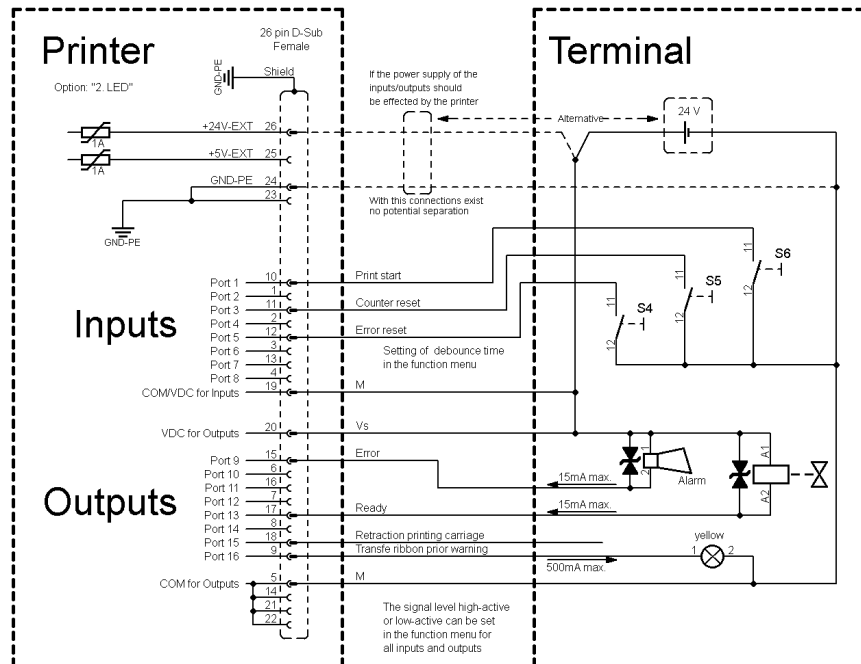


Figure 5

Example 3

Device connection version if 'Option: 2. LED'.

**Figure 6****Precautions**

When connecting a reed contact with a control input, the contact must have a switching capacity of min. 1 A in order to prevent the contact from sticking due to the inrush current. As an alternative, a suitable resistor can be connected in series.

If one of the printer's internal voltages '+5 VDC EXT' or '+24 VDC EXT' is used, an external fuse e.g. 0.5 AF, should be additionally installed to protect the printer electronics.

In the event of an inductive load, an antiparallel connected diode, for instance, must be used to discharge the induction energy.

In order to minimise the influence of leakage currents at control outputs, a resistor must, depending on what is connected, be installed in parallel with the load.

In order to avoid any damages to the printing system, the max. output currents must not be exceeded or outputs shorted.

4 Installation

Unpack the label printer

- ⇒ Lift the label printer on the bottom and remove the printer from the carton.
- ⇒ Check the label printer for transport damages.
- ⇒ Check delivery for completeness.

Scope of delivery

- Label printer.
- Power cable.
- Empty core, mounted on the transfer ribbon rewinder.
- Tear-off edge (printers with the option tear-off edge only).
- Dispensing edge (printers with the option dispenser only).
- Cutter unit (printers with the option cutter only).
- Product Safety Guide.



NOTICE!

Retain the original packaging for subsequent transport.

4.1 Set up the Label Printer



CAUTION!

The label printer and the print media can be damaged by moisture and water.

- ⇒ Set up the label printer only in a dry place protected from sprayed water.
- ⇒ Set up the label printer on a level, vibration-free and air draught-free surface.
- ⇒ Open the cover of label printer.
- ⇒ Remove the foam transportation safeguards near the printhead.

4.2 Connect the Label Printer

Connect to power supply

The label printer is equipped with a versatile power supply unit. The device may be operated with a mains voltage of 100 ... 240 V AC / 50-60 Hz without any adjustments or modifications.



CAUTION!

The label printer can be damaged by undefined switch-on currents.

⇒ Set the power switch to '0' before plugging in the label printer.

⇒ Insert the power cable into the power connection socket.

⇒ Insert the plug of power cable into a grounded electrical outlet.

Connect to a computer or to a computer network



NOTICE!

Insufficient or missing grounding can cause faults during operation.

Ensure that all computers and connection cables connected to the label printer are grounded.

⇒ Connect the label printer to a computer or network with a suitable cable.

4.3 Switch the Label Printer On and Off

After all connections are completed, switch on the label printer.

The main menu appears showing the printer type, current date and time.

4.4 Initial Operation of the Label Printer

After switching on the label printer the main menu appears which shows the printer type, current date and time.

Insert label material and transfer ribbon (see chapter 5. Load Media, page 31).

Go to the menu *Label layout*, select the menu item *Measure label* and start measuring (see chapter 6.5 Label Layout, page 47).

Press the key  to finish measuring.



NOTICE!

To enable correct measuring, at least two completed labels have to be passed through (not for continuous labels).

During measuring the label and gap length small differences can occur. Therefore the values can be set manually in menu *Label layout/Label and Gap*.

5 Load Media

5.1 Load Label Roll

**NOTICE!**

As for the electrostatic unloading the thin coating of the thermal printhead or other electronic parts can be damaged, the label material should be antistatic. The use of wrong materials can lead to printer malfunctions and the guarantee can expire.

**Load label roll in
rewind mode**

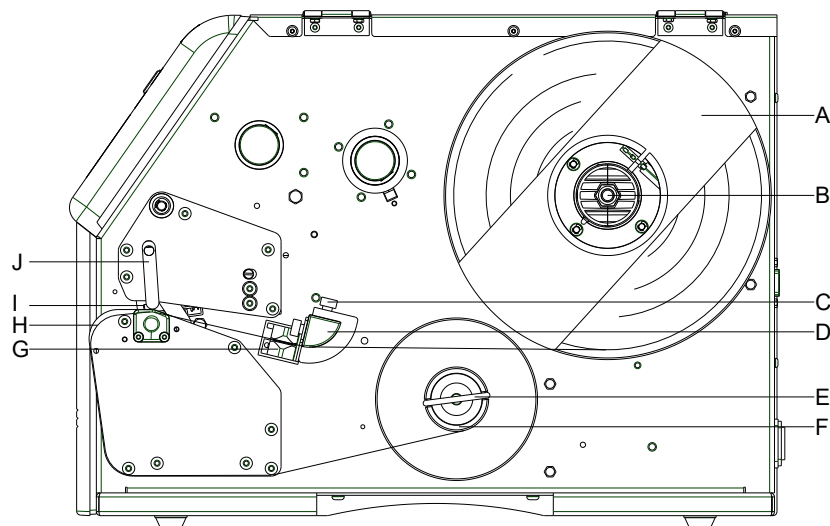


Figure 7

**NOTICE!**

In rewind mode the labels are wound up internally after printing for later use.

1. Open the printer cover.
2. Open the printhead (I) by turning the pressure lever (J) anticlockwise.
3. Remove the outside label mounting plate (A).
4. Load the label roll with inner winding onto the unwinding roll (B).
5. Attach again the label mounting plate (A).
6. Lead the label material below the label guiding (D). Take care that the material runs through the photocell (G).
7. Place the labels around the front sheet (H) and lead them below the mechanics to the rear.
8. Clamp the label material, with the handle (E) designated for it, at the rewinding roll (F).

9. To move the printhead (I) down, turn the pressure lever (J) in clockwise direction until it locks.
10. Adjust the limit stops (C) of the label guiding roll to the width of material.
11. Close the printer cover.

Load label roll in tear-off mode

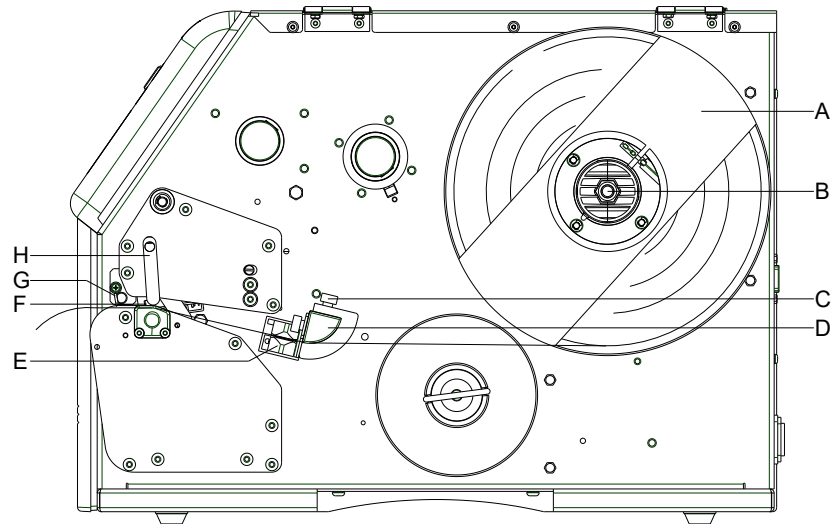


Figure 8

1. Open the printer cover.
2. Open the printhead (F) by turning the pressure lever (H) anticlockwise.
3. Remove the outside label mounting plate (A).
4. Load the label roll with inner winding onto the unwinding roll (B).
5. Attach again the label mounting plate (A).
6. Lead the label material below the label guiding (D). Take care that the label runs through the photocell (E).
7. To move the printhead (F) down, turn the pressure lever (H) in clockwise direction until it locks.
8. In front of the printhead the tear off edge (G) is visible.
9. Enter the offset value in menu *Printer Initialisation/Tear off* (see chapter 6.4, page 46).
10. Adjust the limit stops (C) of the label guiding to the width of material.
11. Close the printer cover.

Load label roll in cutter mode



CAUTION!

Risk of injury, particularly during maintenance, the cutter blades are sharp!

- ⇒ The cutter may only be used when it is mounted on the printer!
- ⇒ The cutter may only be used when the cover plate (A) is installed!
- ⇒ Do not try to cut any materials which exceed the maximum width or thickness specifications.
- ⇒ Do NOT touch the area of the moving blades!

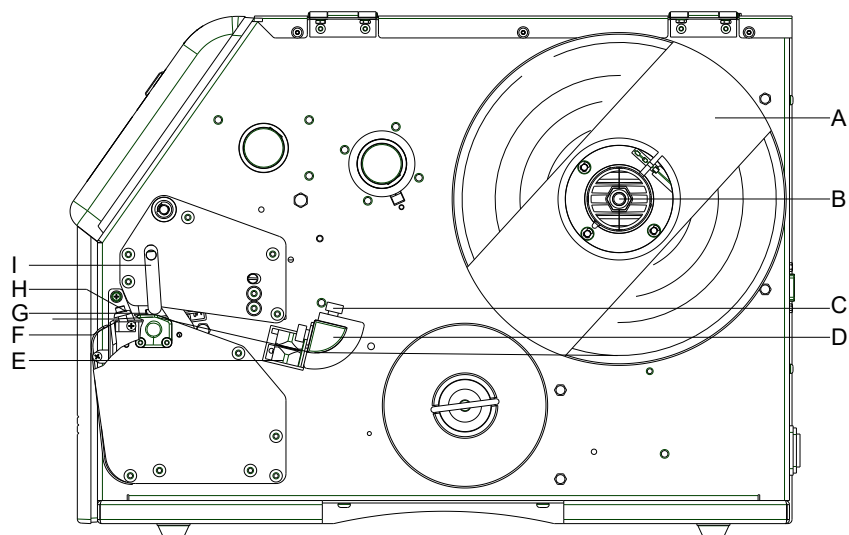
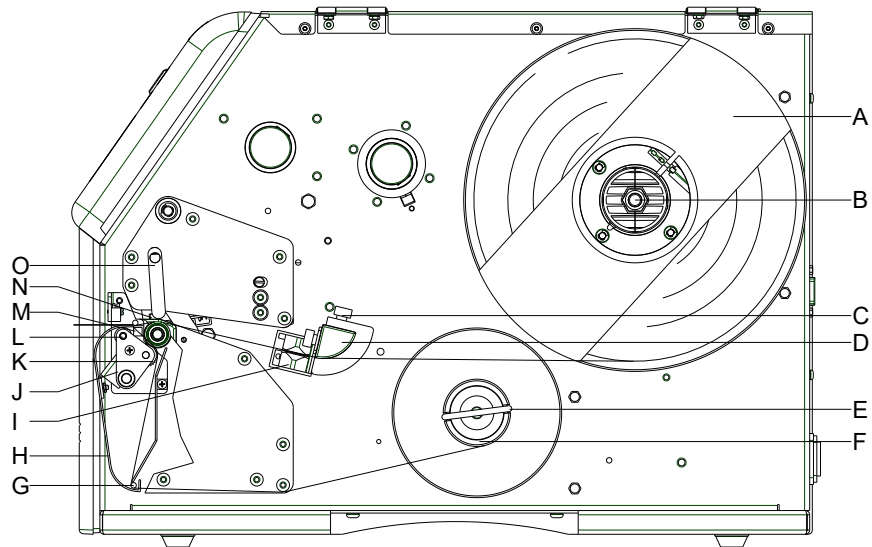


Figure 9

1. Open the printer cover.
2. Open the printhead (G) by turning the pressure lever (I) anticlockwise.
3. Remove the outside label mounting plate (A).
4. Load the label roll with inner winding onto the unwinding roll (B).
5. Attach again the label mounting plate (A).
6. Lead the label material below the label guiding (D) and the printhead (G).
Take care that the label runs through the photocell (E).
7. Lead the label material between the inserting angle (F) and the cutter ledge (H).
8. To move the printhead (G) down, turn the pressure lever (I) in clockwise direction until it locks.
9. Adjust the limit stops (C) of the label guiding to the width of material.
10. Close the printer cover.

**Load label roll in
dispenser mode****Figure 10**

1. Open the printer cover.
2. Remove the cover plate (H) by turning it to the front.
3. Open the printhead (N) by turning the pressure lever (O) anticlockwise.
4. Remove the outside label mounting plate (A).
5. Load the label roll with inner winding (minimum label height = 15 mm) onto the unwinding roll (B).
6. Attach again the label mounting plate (A).
7. Lead the label material below the label guiding (D) and printhead (N). Take care that the labels run through the photocell (I).
8. Lift the dispensing whip (J) to the front/bottom by pulling the shaft at the side (L) to the inside.
9. To move the printhead (N) down, turn the pressure lever (O) in clockwise direction until it locks.
10. Adjust the limit stops (C) of the label guiding to the width of material.
11. Strip some labels from the backing paper and lead the paper over the dispensing ledge (M) and behind the plastic roll (K).
12. Press again the dispensing whip (J) to the top and lock it.
13. Place the backing paper around the shaft (G) and fix it with the clamp (E) at the rewinding unit (F).
14. Enter the offset value in menu *Dispenser I/O/Offset* (see chapter 7.2, page 67).
15. Close the printer cover.

5.2 Load Transfer Ribbon



NOTICE!

For the thermal transfer printing method it is necessary to load a ribbon, otherwise when using the printer in direct thermal print it is not necessary to load a ribbon. The ribbons used in the printer have to be at least the same width as the print media. In case the ribbon is narrower than the print media, the printhead is partly unprotected and this could lead to early wear and tear.

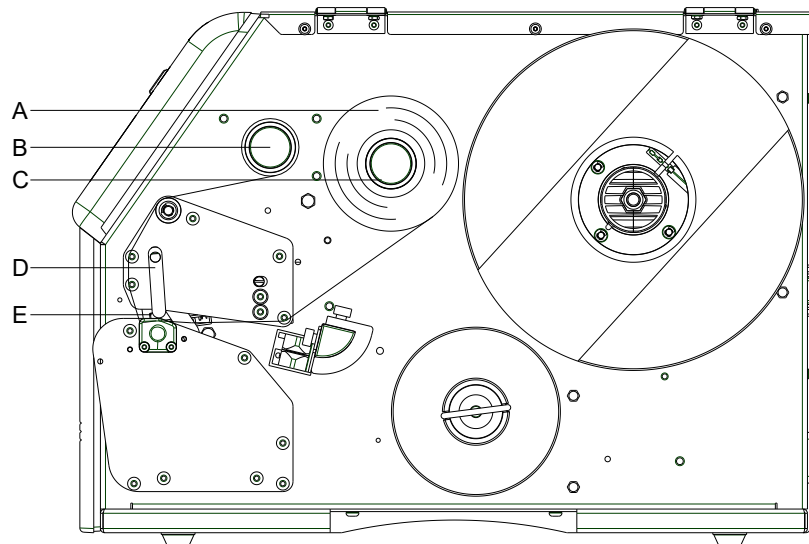


Figure 11



NOTICE!

Before a new transfer ribbon roll is loaded, the printhead must be cleaned using printhead and roller cleaner (97.20.002). The handling instructions for the use of Isopropanol (IPA) must be observed. In the case of skin or eye contact, immediately wash off the fluid thoroughly with running water. If the irritation persists, consult a doctor. Ensure good ventilation.

1. Open the printer cover.
2. Open the printhead (E) by turning the pressure lever (D) anticlockwise.



CAUTION!

Risk of scraping when inserting the transfer ribbon res. when removing the used transfer ribbon!

⇒ Be careful with the spring steel plate edges!

3. Load the transfer ribbon roll (A) with outer winding onto the unwinding roll (C).
4. Place an empty ribbon roll on the rewinding roll (B).
5. Lead the transfer ribbon below the printhead.

6. Fix the ribbon with an adhesive tape in rotating direction at the empty roll of the rewinding roll (B).
7. To move the printhead (E) down, turn the pressure lever (D) in clockwise direction until it locks.
8. Close the printer cover.

**NOTICE!**

As for the electrostatic unloading the thin coating of the thermal printhead or other electronic parts can be damaged, the transfer ribbon should be antistatic.

The use of wrong materials can lead to printer malfunctions and the guarantee can expire.

**CAUTION!**

Impact of electrostatic material on people!

⇒ Use antistatic transfer ribbon because electrostatic discharge can occur when removing.

5.3 Increase the Clamping Force for Ribbon Roll



NOTICE!

The use of high-quality transfer ribbon with a cardboard core is recommended. A sample ribbon roll is included in the scope of delivery. The spring plates of the transfer ribbon roll on the rewinding/unwinding unit are designed to this quality at the factory.

Delivery state of the spring plates of the transfer ribbon roll

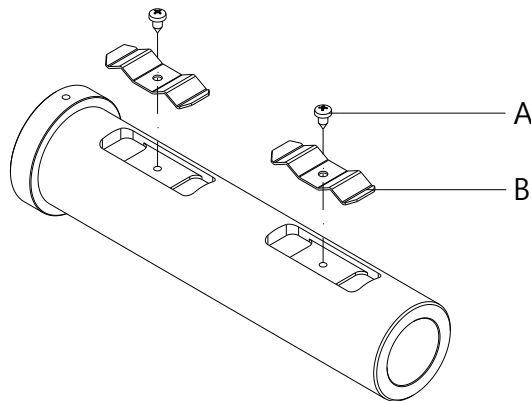


Figure 12

If other transfer ribbons are used, it can occur that the clamping force of the spring plates (B) is not sufficient, to position the rolls surely and to protect it against rotating.

Increase the clamping force

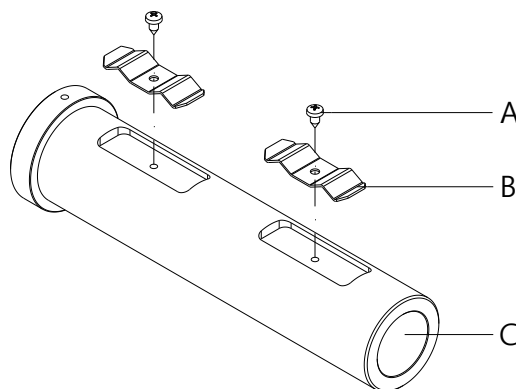


Figure 13

1. Remove the screws (A) and spring plates (B).
2. Turn the transfer ribbon roll (C) 180° until the other two alternative grooves are visible.
3. Fasten the spring plates (B) with the screws (A).
4. Insert the transfer ribbon roll (C) and empty cardboard core on the rewinding/unwinding unit. Check firm position!

6 Function Menu

6.1 Operation Panel



①	The top line of the graphic display shows the printer type.
②	The graphic display shows information about the current status of the printer and the print order, reports errors and shows the printer settings in the menus.
III	Back to the main menu. Start a test print. Delete a stopped print order.
F	Change to the function menu. In function menu: one menu item back.
▢	Change to the quantity (number of pieces) menu. Press the keys ▲ and ▼ to select the number of labels that should be printed.
SD	Change to the menu of the SD card.
→	In main menu: feed of one label. In function menu: skip to the next menu item.
●	Confirm settings and modifications. Stop and continue current print orders. Delete a stopped print order with the key III. No further label of the print order is printed.
◀	Return to the previous input field. Press the keys ▲ and ▼ to change the values.
▶	Skip to the next input field. Press the keys ▲ and ▼ to change the values.
▲	Increase the figure at the cursor position.
▼	Decrease the figure at the cursor position.
C	Delete the complete entry.
E	Confirm the entry. After confirmation of settings, return to the main menu.

6.2 Keyboard Assignment (Text Entry / Customized / SD Card)

The foil keyboard of the printing system is equipped with an alphanumeric character block which allows the user to enter parameters and customised variables without the connection of an external keyboard. Each key contains letters and similar to the use of a mobile phone (like sms) a direct and time-saving input is possible.

The mode is displayed in the first line at the right position so the user can control in which input mode is selected.

As the input is almost done with characters from one mode, the characters are divided in different groups. Following input modes are available:

Symbol	Mode
0	Standard, starting with figures
M	Starting with capital letters
m	Starting with small letters
A	Input Alt
a	Input Alt, is switched off after one character

Mode 0

This mode is displayed as default. At first the figure which corresponds to the key is displayed, then all capital and afterwards the small letters.

Mode M

At first all capital, then the small letters and at last the corresponding figure.

Mode m











At first all small letters, then the figure and at last the capital letters.

Mode A


This mode can be used for the creation of special characters. The desired character can be displayed by the assigned number by entering the ANSI code. Please note that the ANSI code has to consist of three digits, i.e. you have possible to enter a zero first.





Mode a


Same as mode A. After input of the selected ANSI code the machine, however, changes back to the previously selected input mode.



Key	Meaning	Function
	Main menu	Back to the main menu. Activate test print. Delete stopped print order.
	Up	For customized variables, change between the single entries.
	Down	For customized variables, change between the single entries.
	Funktion menu	No function.
	Vorschub	Entry confirmation. Change to the main menu.
	Start/Stopp	Confirmation/end of entry.
	Memory	Entry mode selection.
	Quant	Delete the character at the cursor position. If the cursor is behind the last character, the last one is deleted. Character is only deleted if it was before entered by the character block.
	Backwards	Cursor one position to the left.
	Forwards	Cursor one position to the right.
0 - 9	Character block	Entry of desired data.
C	Function key	Delete the complete entry. The entry is only deleted if it was entered by the character block.
E	Function key	Confirm the entry. After confirmation of settings, return to the main menu.

6.3 Menu Structure

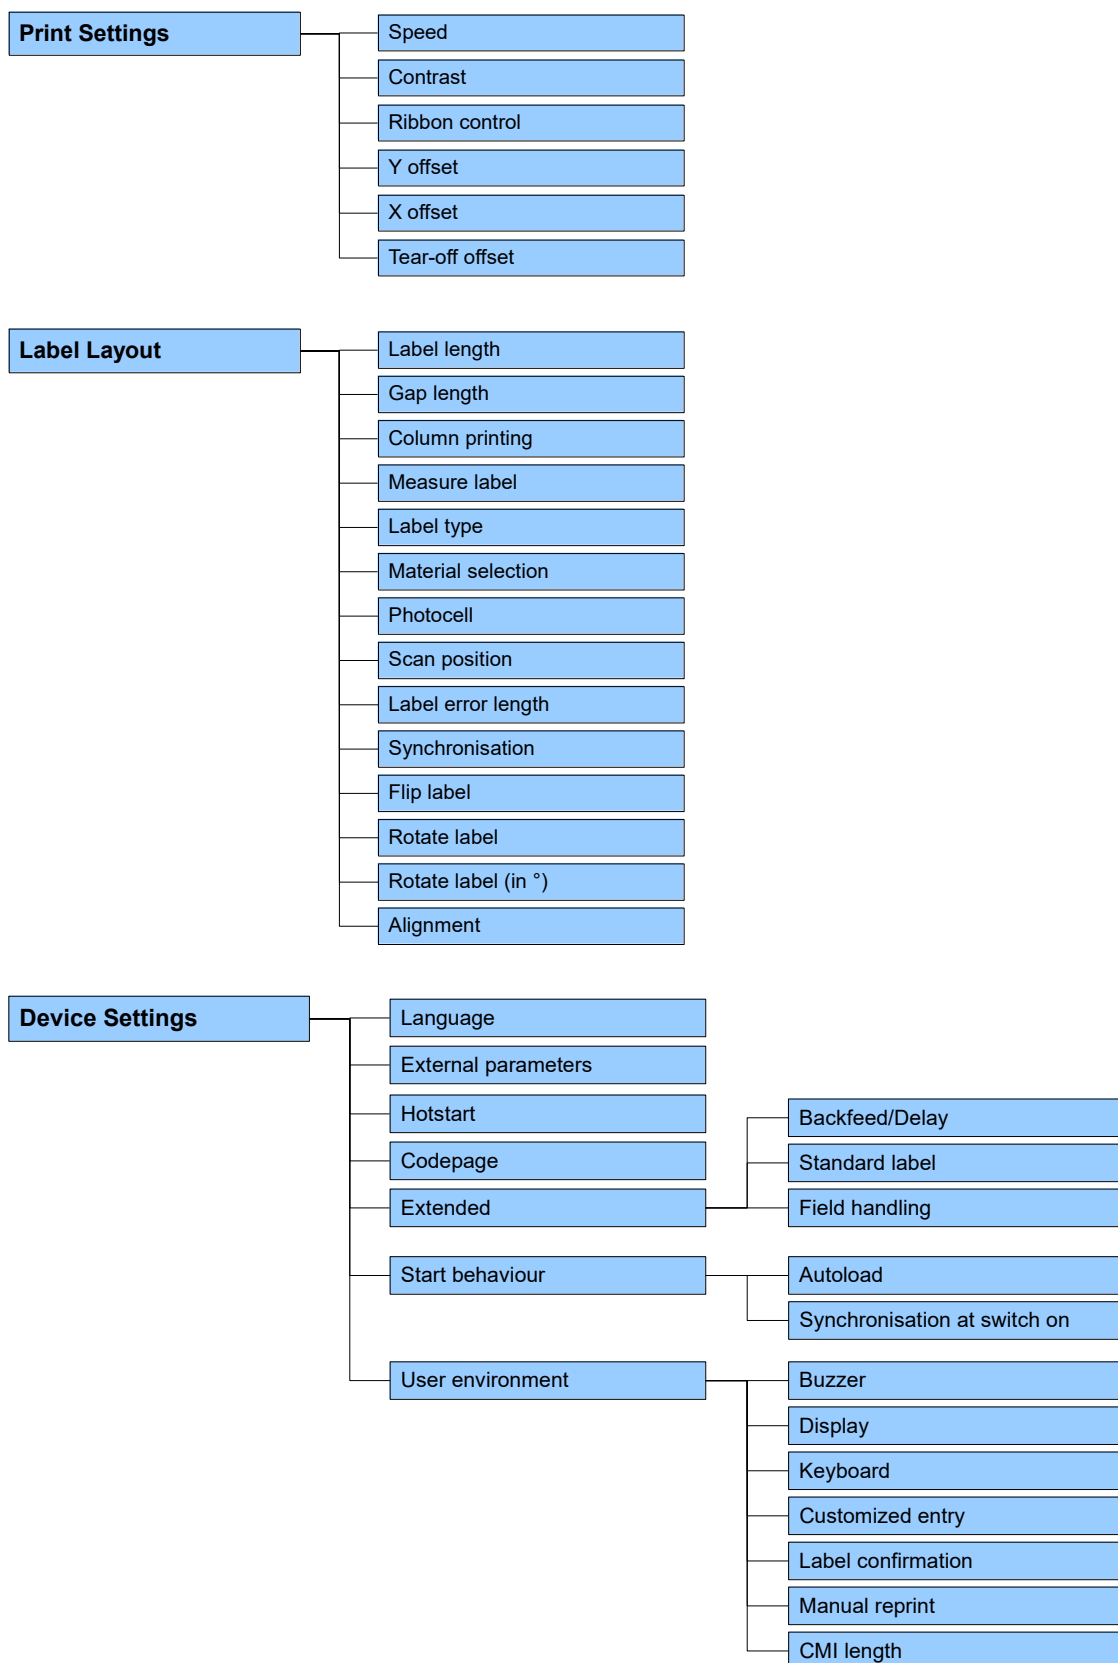

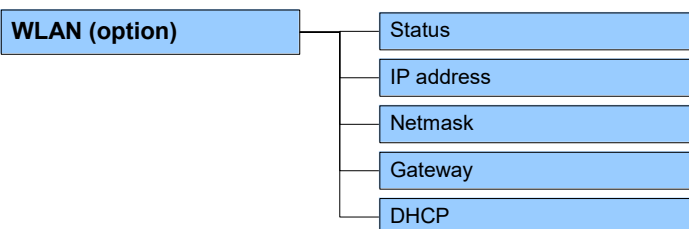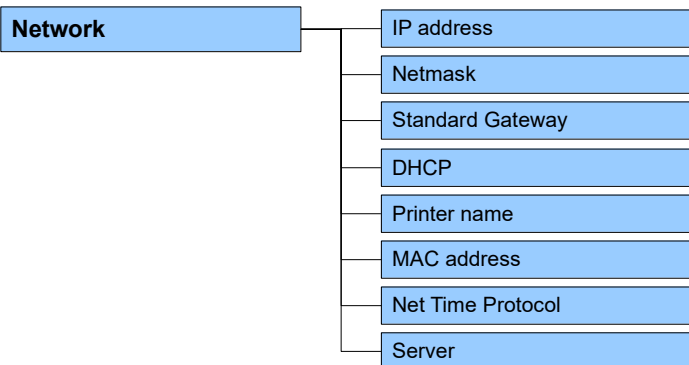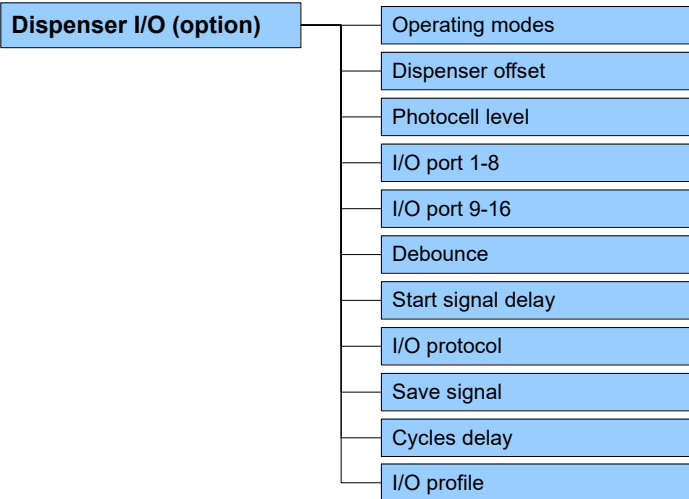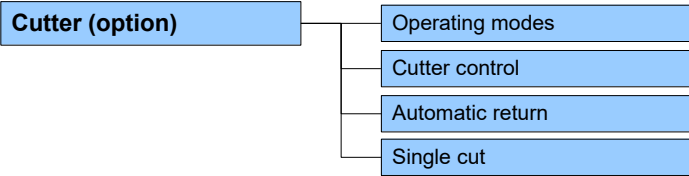

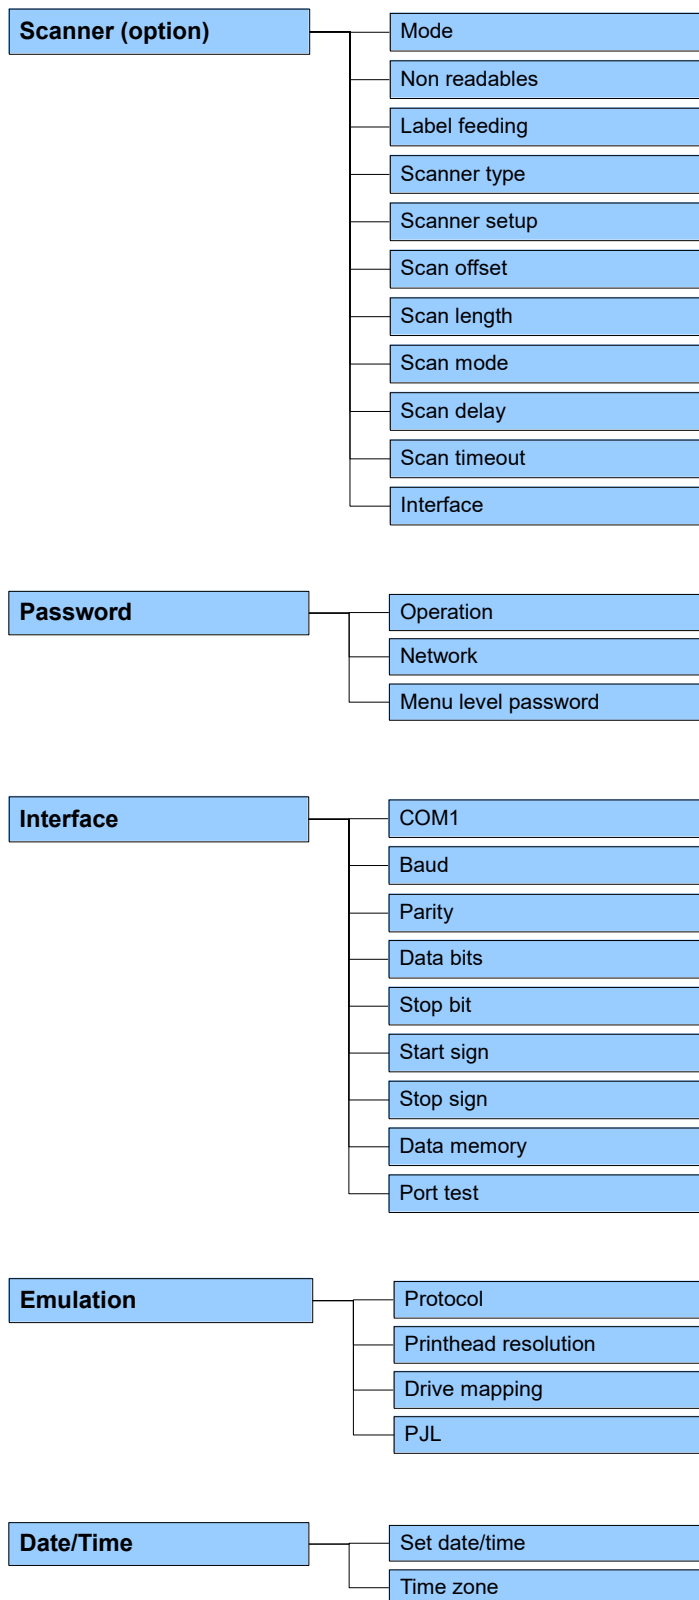

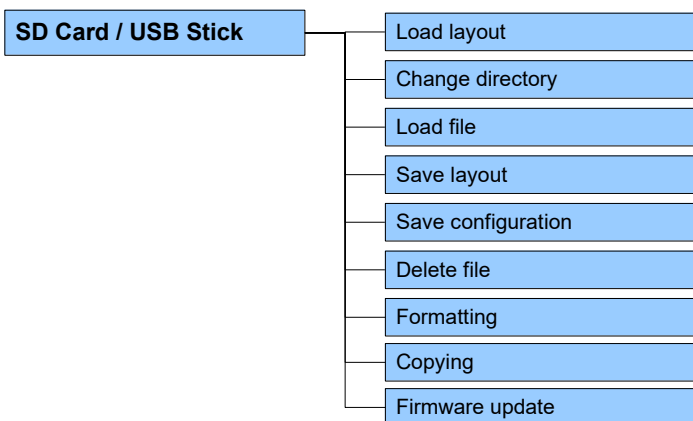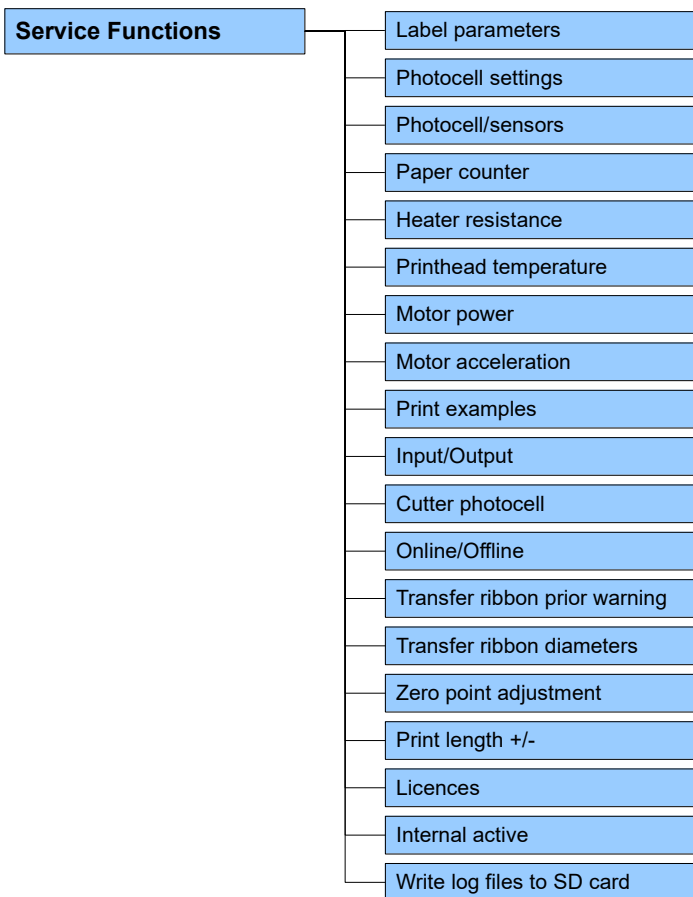


6.4 Print Settings

Switch on the label printer and the display shows the main menu.

Press the key  to access the function menu.

Press the key  to select the menu *Print settings*.

Speed

Indication of print speed in mm/s (see chapter Technical Data, page 15). The print speed can be determined for each print order anew. The setting of print speed affects also the test prints.

Contrast

Indication of value to set the print intensity when using different materials, print speeds or printing contents.

Value range: 10 % ... 200 %.

Step size: 10 %.

Press the key  to move to the next menu item.

Ribbon control

Examination if the transfer ribbon roll is to end or if the ribbon was torn at the unwinding roll. The current print order is interrupted and an Error Message appears at the printer display.

Off: The ribbon control is deselected, i.e. the printer continues without an error message.

On, weak sensibility (default): The printer reacts at approx. 1/3 more slowly to the end of the transfer ribbon.

On, strong sensibility: The printer reacts immediately to the end of the transfer ribbon.

Press the key  to move to the next menu item.

Y displacement

Indication of initial point displacement in mm.

Displacement of the complete print in paper direction. With positive values the print in paper direction starts later.

Value range: -30.0 ... +90.0.

Press the key  to arrive the next menu item.

X displacement

Displacement of the complete print transverse to the paper direction.

The displacement is possible only up to the edges of the printing zone and is determined by the width of the focal line in printhead.

Value range: -90.0 ... +90.0.

Press the key  to move to the next menu item.

Tear-off


Indication of value to which the last label of a print order is moved forward and is moved back to the beginning of label at a new print start. Labels can be torn off after terminating the print order without a label loss by tearing up.


Default value: 12 mm.

Value range: 0 ... 50.0 mm.

6.5 Label Layout

Switch on the label printer and the display shows the main menu.

Press the key  to access the function menu.

Press the key  until the menu *Label layout* menu is displayed.

Press the key  to select the menu.

Label length

Indication of label length in mm
(see chapter Technical Data, page 15).

Gap length

Indication of distance between two labels in mm
(not for continuous labels).
Minimum value: 1 mm.


Press the key  to move to the next menu item.

Column printing

Indication of width of one label as well as how many labels are placed side by side (see chapter 11.1 Column Printing, page 103).


Press the key  to move to the next menu item.

Measure label

Press the key  to start measuring. The printer stops automatically after termination of measuring. The determined values are displayed and saved.

Press the key  to move to the next menu item.

Label type

Generally adhesive labels are set. Press the key  to select continuous labels. If the menu item *Label length/Gap length* contains a gap value, this value is added to the label length..

Press the key  to move to the next menu item.

Material selection

Selection of the used label and transfer ribbon material.

Press the key  to move to the next menu item.







Photocell

Selection of the used photocell.

The selection of one of the following photocell types is possible:
transmission photocell normal and inverse, reflexion photocell normal and inverse
(see chapter 11.4 Photocells, page 108).


Scan position (AP)


Entry of percental label length by that the label end is searched.
Marks onto the label can be skipped.

	Press the key  to move to the next menu item.
Label error length	<p>In case an error occurs, indication after how many mm a message appears in the display. Value range: 1 mm ... 999 mm.</p>
Synchronization	<p>On: If a label is missed on the liner an error message is displayed. Off: Missing labels are ignored, i.e. it is printed into the gap.</p> <p>Press the key  to move to the next menu item.</p>
Flip label	<p>The axis of reflection is in the middle of the layout. If the label width was not transferred to the printer, automatically the default label width i.e. the width of the printhead is used. It is recommended to use labels with the same width as the printhead. Otherwise this can cause problems in positioning.</p> <p>Press the key  to move to the next menu item.</p>
Rotate label	<p>According to standard the label is printed ahead with a rotation of 0°. If the function is activated, the label is rotated by 180° and printed in reading direction.</p> <p>Press the key  to move to the next menu item.</p>
Rotate label (in °)	<p>Corresponding to the parameter Rotate label, the label can be turned in 90° steps.</p> <div> NOTICE! Only printer internal objects (text, lines and barcodes) can be turned. The rotation of graphics is not possible.</div> <p>Press the key  to move to the next menu item.</p>
Alignment	<p>The adjustment of label is effected only after <i>Flip/Rotate label</i>, i.e. the adjustment is independent of the functions <i>Flip label</i> and <i>Rotate label</i>. Left: The label is aligned at the left-most position of printhead. Centre: The label is aligned at central point of printhead. Right: The label is aligned at right-most position of printhead.</p>

6.6 Device Settings

Switch on the label printer and the display shows the main menu.

Press the key  to access the function menu.

Press the key  until the menu *Device settings* is displayed.

Press the key  to select the menu.

Printer language

Selection of language in which you want to display the text in the printer display.

At the moment the following languages are available: German, English, French, Spanish, Portuguese, Dutch, Italian, Danish, Finnish, Polish, Greek, Czech, Hungarian, Russian, Chinese (option), Ukrainian, Turkish, Swedish, Norwegian, Estonian, Romanian.

Press the key  to move to the next menu item.

External parameters

Label dimension only: The parameters for label length, gap length and label width can be transferred to the printer. All other parameter settings are to be made directly at the printer.

On: Sending parameters such as print speed and contrast via our label creation software to the printer. Parameters which are set directly at the printer before are no longer considered.

Off: Only settings made directly at the printer are considered.

Press the key  to move to the next menu item.

Hotstart

On: Continue an interrupted print order after switching on the printer anew.

Off: After switching off the printer the complete data is lost (see chapter 11.2 Hotstart, page 104).

Press the key  to move to the next menu item.

Codepage

Indication of the font used in the printer. The following possibilities are available:

Codepage 1252 West European (former ANSI)

Codepage 437 English

Codepage 850 Western European

Codepage 852 Slavic

Codepage 857 Turkish

Codepage 1250 Central and East European

Codepage 1251 Cyrillic

Codepage 1253 Greek


Codepage 1254 Turkish

Codepage 1257 Baltic

WGL4

Please find the tables referring to the above mentioned character sets on www.carl-valentin.de/Downloads.

**Device Settings
Extended**

Press the key  to select the menu item.

Press the key  to move to the next menu item.

Backfeed

The backfeed was optimised in the operating modes dispenser (optional) and cutter (optional). Now, when driving into the offset, the following label is 'pre-printed' if possible and therefore the backfeed of label is no necessary and time can be saved.


Delay

The adjustable deceleration time is only for mode 'backfeed automatic' of importance (see chapter 11.3 Backfeed/Delay, page 106).

Press the key  to move to the next parameter.

Standard label

On: If a print order is started without previous definition of label, the standard label is printed.

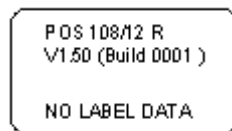

Off: If a print order is started without previous definition of label, an error message appears in the display.

Press the key  to move to the next parameter.

Field handling

Off: The complete print memory is deleted.


Keep graphic: A graphic res. a TrueType font is transferred to the printer once and stored in the printer internal memory. For the following print order only the modified data is transferred to the printer. The advantage is the saving of transmitting time for the graphic data. The graphic data created by the printer itself (internal fonts, bar codes, ...) is generated only if they were changed. The generating time is saved.

Delete graphic: The graphics res. TrueType fonts stored in the printer-internal memory is deleted but the other fields are kept.


Restore graphic: At the end of the print order the printed order can again be started at the printer. All graphics and TrueType fonts are again printed.

**NOTICE!**

Exception: With column printing always full columns must be printed (number of pieces always multiple of the columns). Deleted columns are not restored.


Press the key  to return to the previous menu item.

Start Behaviour

Press the key  to select the menu item.

Autoload

On: A label which was loaded once from SD card can be loaded again automatically after a restart of printer.

Procedure: The used label is saved onto SD card. The label is loaded from SD card and printed. After switching the printer Off and again On, the label is loaded from SD card automatically and can be printed again. Press the key  to start the print with input of number of labels.

**NOTICE!**

The last loaded label from SD card is always again loaded after a restart of printer.

Off: After a restart of printer the last used label must be again loaded manually from SD card.

**NOTICE!**

A common use of the functions Autoload and Hotstart is not possible. For a correct Autoload procedure the Hotstart must be deactivated in the printer.


Press the key  to move to the next parameter.

Synchronization at print start


Off: The synchronization is disabled, i.e. the measuring and label feed have to be released manually.

Measure: After switching on the printer, the loaded label is automatically measured.

Feed: After switching on the printer the label is synchronized to the beginning of label. For this one or multiple labels are advanced.

Press the key  to return to the previous menu item.

User Environment

Press the key  to select the menu item.

Buzzer

On: An acoustic signal is audible when pressing a key.
Value range: 1 ... 7.

Off: No signal is audible.







Display

Setting of display contrast.
Value range: 45 ... 75.

Press the key  to move to the next parameter.


Keyboard layout


Selection of region for the desired keyboard layout. The following possibilities are available: German, English, French, Greek, Spanish, Swedish, US American, Russian.

Customized entry	<p>Press the key  to move to the next parameter.</p> <p>Off: No question appears at the display. In this case the stored default value is printed.</p> <p>On: The question referring the customized variable appears once before the print start at the display.</p> <p>Auto: The questions referring the customized variable and the quantity query appear after every printed layout.</p> <p>Auto without quantity query: The question referring the customized variable appears after every layout without additional query for the quantity.</p>
Label confirmation	<p>Press the key  to move to the next parameter.</p> <p>On: A new print order is only printed after confirmation at the device. An already active continuing print order is printed as long as the confirmation is effected at the device.</p> <p>Off: No query appears at the display of control unit.</p>
Manual reprint	<p>Press the key  to move to the next parameter.</p> <p>Yes: I In case an error occurred and printer is in stopped mode then you can reprint the last printed labels by means of keys  and .</p> <p>No: Only blank labels were advanced.</p>
CMI length	<p>Press the key  to move to the next parameter.</p> <p>If the print is interrupted in the label, at the printhead this could lead to a small interruption in the printout, showing a fine white line onto the label. To avoid this, a value for the minimum backfeed can be set (0 – 1 mm) at which the label material is moved backwards. At the next print start the free range is overprinted. The setting of CMI length has only an influence at the selection of backfeed mode 'optimised backfeed'.</p>

6.7 Network

Switch on the label printer and the display shows the main menu.

Press the key  to access the function menu.

Press the key  until the menu *Network* is displayed.

Press the key  to select the menu.

IP address

Each participant must have a 32-bit address. The IP address is separated by full stops and arranged into four parts. Each part has a number range of 0 ... 255.

Press the key  to move to the next menu item.

Network mask

In connection with the IP address of the printer, the netmask determines which IP addresses this device searches in the own network.

Press the key  to move to the next menu item.

Standard gateway

The IP address of the network gateway. If the IP address was referred to by DHCP then DHCP is indicated in brackets.

Press the key  to move to the next menu item.

DHCP

DHCP permits the automatic referring of the network parameters IP address, network mask and standard gateway of a DHCP server which must be installed in the network.

Press the key  to move to the next menu item.

Printer name

The name of the installed printer in the network. The printer name in connection with DHCP can be used to respond to the printer. If DHCP is active and the name of the printer is changed, the printer logs out itself at the DHCP server and afterwards the printer logs in again. After changing the printer name, the printer can have a new IP address.

Press the key  to move to the next menu item.

MAC address

The MAC address (Media Access Control) is the hardware address of each individual network adapter and serves for the clear identification of the printer in network.

Press the key  to move to the next menu item.

Network Time Protocol

NTP Active

On: The NTP function is active

Off: The NTP function is deactivated, i.e. no synchronisation takes place.

NTP Serv IP Addr: IP address of the NTP server.

NTP Serv Name: A name can be entered as an alternative or in addition to the IP address. If both are specified, the server with the best connection is selected and the other is used as backup.

NTP Status:

Disabled: No connection to NTP server or the NTP function is switched off. Switch on NTP and check availability of NTP IP address and/or NTP name.

Example:
1 2 u 150 256 -0.0s

- 1. value:** (1): NTP connection: <0: Error; 0: No NTP connection; 1: NTP connection established
- 2. value:** (2): Server stratum (see general NTP documentation on the internet)
- 3. value:** (u): Server type (u: unicast, b: broadcast, l: local clock, s: symmetric peer)
- 4. value:** (150): Seconds counter since last update
- 5. value:** (256): Update interval in seconds
- 6. value:** (-0.0s): Time deviation in seconds

NTP Sync Now (Synchronise NTP now):

When executing this action, an immediate time synchronisation is performed. This function is used to test the function of the NTP server.

Example

Change the time, select the function NTP Sync Now and confirm. The NTP client will set the time correctly again.

Date/Time:

With this function, the NTP function can be tested and controlled.


Press the key  to move to the next menu item.


Server

All servers can be enabled or disabled, except those on ports 9100 / 9099.

6.8 Password

Switch on the label printer and the display shows the main menu.






Press the key  to access the function menu.





Press the key  until the menu *Password* is displayed.

Press the key  to select the menu.



With a password different functions can be blocked for the operator. There are different applications with which such a password protection can be used reasonably. To receive a most flexible password protection, the printer functions will be divided into several function groups.

Because of these different function groups the password protection is very flexible. The printer can be adjusted best to its actual order, as only certain functions are blocked.

	Operation Entering a 4-digit numeric password. Press the key  to move to the next menu item.
Password	
Protection configuration	Printer settings can be changed (contrast, speed, operating mode, ...). The password protection prevents modifications at the printer settings.
	Press the key  to move to the next menu item.
Protection favorites	The password protection prevents the access to the favorites.
	Press the key  to move to the next menu item.
Protection memory card	With the functions of the memory card, labels can be stored, loaded, etc. The password protection has to decide if no access or only readable access on SD card is allowed. No protection: No password protection Userview only: Only reading access Protected: Access blocked
	Press the key  to move to the next menu item.
Protection Printing	In case the printer is connected to a PC, it can be useful, that the user is not able to produce a print manually. So the password protection prevents that prints can be produced manually. Press the key  to move to the next menu item. In order to execute a blocked function, first of all the valid password has to be entered. If the correct password is entered then the desired function can be executed.


	Network
Password	Entering a 15-digit password. The password can consists of alphanumeric and special characters. Press the key  to move to the next menu item.
Protection HTTP	The communication by HTTP can be avoided.
	Press the key  to move to the next menu item.
Protection Telnet	The settings of the Telnet service cannot be changed.
	Press the key  to move to the next menu item.
Protection remote access	The password protection prevents the remote control of the printer. Press the key  to move to the next menu item. In order to execute a blocked function, first of all the valid password has to be entered. If the correct password is entered then the desired function can be executed.


Menu level password

An additional password can be required to carry out service work. The 4-digit password can be set by using the keys  and . The settings can be changed by using *ConfigTool*.

6.9 Interface

Switch on the label printer and the display shows the main menu.

Press the key  to access the function menu.

Press the key  until the menu *Interface* is displayed.

Press the key  to select the menu.

COM1 / Baud / P / D / S

COM1:

0 - serial interface Off.

1 - serial interface On.

2 - serial Interface On, no error message occurs in case of a transmission error.

Baud:

Indication of bits which are transferred per second (speed of data transfer).

Value range: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200.

P = Parity:

N - No parity

E - Even

O - Odd

Please observe that the settings correspond to those of the printer.

D = Data bits:

Setting of data bits.

Value range: 7 or 8 Bits.

S = Stop bits:

Indication of stop bits between bytes.

Value range: 1 or 2 stop bits.

Press the key  to move to the next menu item.

Start sign / End sign

SOH: Start of data transfer block → Hex format 01

ETB: End of data transfer block → Hex format 17

Two different start / en signs can be set. The settings are normally SOH = 01 HEX and ETB = 17 HEX. Several host computers cannot process these signs and therefore SOH = 5E HEX and ETB = 5F cannot be set.

Press the key  to move to the next menu item.

Data memory

Standard: After starting a print order the printer buffer receives data as long as it is filled.




Advanced: During a current print order data is received and processed.

Off: After starting a print order no more data is received.

Press the key  to move to the next menu item.


Port test


Check whether the data are transferred via the interface.

Press the key  and  to select standard (on). Press the key  and the data sent via any port (COM1, USB, TCP/IP) is printed.

6.10 Emulation

Switch on the label printer and the display shows the main menu.

Press the key  to access the function menu.

Press the key  until the menu *Emulation* is displayed.


Press the key  to select the menu.

Protocol

CVPL: Carl Valentin Programming Language

ZPL: Zebra® Programming Language

Change between CVPL protocol and ZPL II® protocol.

Press the key  to confirm the selection.

The printer performs a restart and ZPL II® commands are transformed into CVPL commands internally by the printer and then executed by the printer.

In menu Protocol, press the key  to move to the next menu item.

Printhead resolution

At activated ZPL II® emulation the printhead resolution of the emulated printer must be set, e.g. 11.8 Dot/mm (= 300 dpi).



NOTICE!

If the printhead resolution of the Zebra® printer differs from that of the Valentin printer, then the size of objects (e.g. texts, graphics) complies not exactly.

Press the key  to move to the next menu item.

Drive mapping

The access to Zebra® drives

B: SD card

E: Flash drive

R: RAM disk (standard drive, if not indicated)

is rerouted to the corresponding Valentin drives

A: SD

R: RAM disk

U: not occupied

This can be necessary if the available space on the RAM disk (at present. 512 KByte) is not sufficient or if bitmap fonts are downloaded to the printer and be stored permanently.



NOTICE!

As the printer build-in fonts in Zebra® printers are not available in Valentin printers, this can cause small differences in the text image.


Press the key  to move to the next menu item.


PJL (Printer Job Language)

The processing of PJL commands (Hewlett Packard® Print Job Language) can be switched On/Off. Status information relating to the print order can be queried.

6.11 Date & Time





Switch on the label printer and the display shows the main menu.


Press the key  to access the function menu.

Press the key  until the menu *Date/Time* is displayed.


Press the key  to select the menu.

Setting of date and time

The upper line of display shows the current date, the second line the current time. Press the key  or  to move to the next input field. Press the key  or  to increase or decrease the figures at the cursor position.

Press the key  to move to the next menu item.


Time Zone

Press the key  to confirm the menu item.




Region

Press the key  or  to select the region.

The following possibilities are available: Europe, Pacific, Africa, America, Asia, Atlantic, Australia.

Press the key  to confirm the selection. Then you move to the next submenu.

City

Press the key  or  to select the city. Press the key  to confirm, the selection.

6.12 Service Functions



NOTICE!

So that the distributor res. the printer manufacturer in case of service can offer fast support, the printer is equipped with the menu *Service functions*.

Necessary information such as selected parameters can be taken directly from the printer. More details such as version of firmware or font are shown from the *Main menu*.

Switch on the label printer and the display shows the main menu.

Press the key to access the function menu.

Press the key until the menu *Service functions* is displayed.

Press the key to select the menu.

Label parameters

Indication of label parameters in Volt.

A: Indication of minimum value.

B: Indication of maximum value.

C: Indication of trigger level. The value is ascertained while measuring and can be changed.

Press the key to move to the next menu item.

Photocell configuration

This function enables definition of photocell levels.

In case of problems while positioning or measuring of label, levels for label photocell can be set manually. Make sure that a large hub as possible (above the label >3 V, above the gap <1 V) is set.

Press the key to move to the next menu item.

Photocell parameters

DLS: Indication of transmission photocell level in Volt.

RLS: Indication of reflexion photocell level in Volt.

SLS: Indication of peel off photocell level in Volt.

TR: Indication of transfer ribbon photocell status (either 0 or 1).

Press the key to move to the next menu item.

Paper counter








D: Indication of printhead attainment in meters.

G: Indication of printer attainment in meters.

Press the key to move to the next menu item.

Heater resistance

To achieve a high print quality, the indicated Ohm value must be set after replacing the printhead.

	Press the key  to move to the next menu item.
Printhead temperature	<p>Indication of printhead temperature. The printhead temperature corresponds normally to the room temperature. In case the maximum printhead temperature is exceeded, the current print order is interrupted and an error message appears at the printer display.</p> <p>Press the key  to move to the next menu item.</p>
Motor Power	<p>Setting how much power the feed motor must provide under high load. A modification is recommended if the material used is not fed correctly or if there are displacements in the printout.</p> <p>Eco: Reduced torque of the feed motor. The setting is suitable for low print speeds and light label rolls.</p> <p>Normal: The setting is suitable for print speeds up to 300 mm/s in conjunction with the option applicator.</p> <p>Maximum: Maximum torque of the feed motor. The setting is suitable for maximum available speed and heavy label rolls in conjunction with a label dispenser.</p> <p>Press the key  to move to the next menu item.</p>
Motor Acceleration	<p>The parameter setting specifies how quickly the feed motor should accelerate.</p> <p>Value range: 1 ... 5 Default: 2</p> <p>Press the key  to move to the next menu item.</p>
Print examples	<p>Settings: Printout of all printer settings such as speed, label and transfer ribbon material.</p> <p>Bar codes: Printout of all available bar code types.</p> <p>Fonts: Printout of all available font types.</p> <p>Press the key  to move to the next menu item.</p>
Input	<p>Indication of input signal level which depends on the set <i>I/O Profile</i> (see page 69).</p> <p>0 = Low 1 = High</p> <p>Press the key  to move to the next menu item.</p>
Output	<p>Indication of signal level which depends on the set <i>I/O Profile</i> (see page 69).</p> <p>0 = Low 1 = High</p> <p>Press the key  to move to the next menu item.</p>
I/O Status	<p>Relevant results are counted and registered in RAM memory. The protocols get lost after switching off the device.</p> <p>RInt = Real Interrupts The start input impulses are counted directly at the Interrupt.</p> <p>Dbnc = Debounced The start input impulses that are longer than the set debounce time are counted. Only these start impulses can lead to a print. If a start impulse is too short, no print is released. This is recognized by the fact that RInt is counted, Dbnc not.</p>

NPrn = Not Printed

The debounced start input impulses that have not lead to a print are counted. Causes: no active print order, print order stopped (manually or because of an error) or the printing system is still active with the processing of a print order.

PrtStrtReset = The counters are reset.

PrtStrtTime = Measured length of the last start impulse in ms.

Press the key  to move to the next menu item.

Cutter photocell


- 1 – Printer is equipped with a cutter
- 2 – Printer is not equipped with a cutter

Cutter Home (cutter in home position)


- 1 – The cutter is in the initial position and ready for the cutting procedure.
- 0 – The cutter is not in the initial position. Before you are going to release a cutting procedure you first have to place the cutter in its initial position.

Press the key  to move to the next menu item.

Online / Offline

This function is activated e.g. if the transfer ribbon is to be changed. It is avoided that a print order is processed although the module is not ready. If the function is activated then press the key  to change between Online and Offline mode. The respective state is indicated in the display.

Standard: Off

Online: Data can be received by interface. The keys of the foil keyboard are only active, if you changed in the Offline mode with the key .

Offline: The keys of the foil keyboard are still active but received data are not processed. If the module is again in Online mode then new print orders can be again received.

Press the key  to move to the next menu item.

Transfer ribbon advance warning

Before the end of transfer ribbon, a signal is sent by the control output.

Warning diameter

Setting of transfer ribbon advance warning diameter.

In case you enter a value in mm then a signal appears via control output when reaching this diameter (measured at transfer ribbon roll).

Ribbon advance warning mode

Warning: When reaching the transfer ribbon advance warning diameter, the corresponding I/O output is set.

Reduced print speed: Speed on which the printing speed is to be reduced.

Error: The printing system stops when reaching the transfer ribbon advance warning diameter with the message 'too less ribbon'.


Reduced print speed

Setting of the reduced print speed in mm/s. This can be set in the limits of the normal print speed.

Current diameters

Roll diameter: Indication how much transfer ribbon is still on the transfer ribbon roll. For a correct display some labels must be reprinted.

Time left: Indication during a current print order, how long it can be printed with the existing transfer ribbon.

Press the key  to move to the next menu item.

Zero point adjustment in Y direction

Indication of value in 1/100 mm.

After replacing the printhead - the print cannot be continued at the same position on the label, the difference can be corrected in printing direction.

**NOTICE!**

The value for zero point adjustment is set ex works. After replacing the printhead, only service personnel are allowed to set this value anew.

Press the key  to move to the next menu item.

Zero point adjustment in X direction

Indication of value in 1/100 mm.

After replacing the printhead - the print cannot be continued at the same position on the label, the difference can be corrected across the printing direction.

**NOTICE!**

The value for zero point adjustment is set ex works. After replacing the printhead, only service personnel are allowed to set this value anew.

Press the key  to move to the next menu item.

Print length +/-

Indication of print layout correction in percent.

By mechanical influences (e.g. label roll size) the print layout can be printed increased and reduced to its original size.

Value range: +10.0 % ... -10.0 %

Press the key  to move to the next menu item.

Licences

Verification of the software licence.

Press the key  to move to the next menu item.

Write log files to memory card

The printer logs different events internally. In case of service, the error cause can be located faster.

With this command, different log files are saved on an existing storage medium (memory card). After the 'Finish' message the storage medium can be removed.

The files are in directory 'log':

LogMemErr.txt: Logged errors with additional information such as date/time and file name/line number (for developers).

LogMemStd.txt: Logging of selected events.

LogMemNet.txt: Data latest send via port 9100.

Parameters.log: All printer parameters in human readable form.


TaskStatus.txt: Status of all printer tasks.

The files *LogMemErr.txt* and *LogMemStd.txt* are written in circle, i.e. old contents are overwritten. The entry logged last is marked with „---“.

6.13 Main Menu

Switch on the label printer and the display shows the main menu. The main menu shows information such as printer type, current date and time, version number of firmware and the used FPGA.

The selected display is shown for a short time, then the indication returns to the first information.

Press the key  to move to the next information display.

7 Options

7.1 Cutter

**CAUTION!**

Risk of injury, particularly during maintenance, the cutter blades are sharp!

- ⇒ Switch off the printer before attaching the cutter!
- ⇒ The cutter may only be used when it is mounted on the printer!
- ⇒ The cutter may only be used when the cover plate (A) is installed!
- ⇒ Do not try to cut any materials which exceed the maximum width or thickness specifications.
- ⇒ Do NOT touch the area of the moving blades!

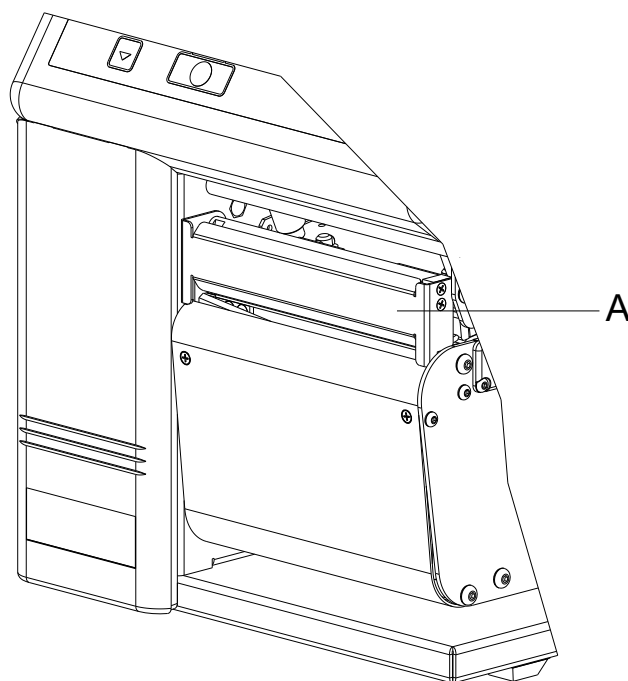




Figure 14

Switch on the label printer and the display shows the main menu.

Press the key  to access the function menu.

Press the key  until the menu *Cutter* is displayed.

Press the key  to select the menu.




NOTICE!

The menu item cutter is only displayed if the printer recognizes the option via cutter photocell when switching on the printer.

In the upper line of display, the cutter mode can be selected.

In the line below, the cutter offset (approx. 20 mm) can be set.

Press the key  to move to the next operating mode.

Operating modes

Off:

The print order is processed without cutting.

Without backfeed:

A cut is effected after each label.

We recommend using this operating mode if no data which is to print is in the upper part of the label.

With backfeed:

A cut is effected after each label.

Interval with final cut:


A cut is effected after a fixed number of labels which you have to enter at the print start and additionally at the end of the print order.

Interval without final cut:

A cut is effected after a fixed number of labels which you have to enter at the print start. At the end of the printer order no cut is effected except when the set interval comes to the end of the print order.

Final cut:

A cut is only effected at the end of the print order.

Select the desired cutter operating mode, then press the key  to select additional functions.

Cutter control

Automatic: After each printed label a cut is released.

Extern: A cut is released by an external I/O. External can only be selected if the label printer is equipped with option external I/O Nach jedem gedruckten Etikett wird ein Schnitt ausgelöst.


Press the key  to move to the next menu item.

Automatic return

On: The label is pulled back immediately after the cut.

Off: The label is pulled back only before the next print.

Single cut

In case you are in the main menu or a print order has been stopped you can release a single cut by pressing the key .

The type of the single cut depends on the set cutter mode and off

7.2 Dispenser I/O



NOTICE!

In order to operate the printer in dispenser mode a print order has to be started and the printer has to be in 'waiting' mode.

Switch on the label printer and the display shows the main menu.

Press the key to access the function menu.

Press the key until the menu *Dispenser I/O* is displayed.

Press the key to select the menu.

Dispenser offset

In the upper line of display, the operating mode can be selected.

In the line below, the dispenser I/O offset (approx. 20 mm) can be set.

Press the key to move to the next operating mode.

Operating modes

Off:

It is printed without the labels are dispensed.

I/O static:

The input signal evaluated, i.e. it is printed as long as the signal exists. The number of labels which was entered at the print start is printed.

The set dispenser offset is not taken into consideration.

I/O static continuous:

For description of this operating mode, see I/O static.

Continuous means that it is printed as long as new data is transferred via interface

The set dispenser offset is not taken into consideration.

I/O dynamic:

The external signal is evaluated dynamically, i.e. is the printer in 'waiting' mode a single label is printed at each signal changing. After the print the set dispenser offset is executed, i.e. a backfeed is effected.

I/O dynamic continuous:

For description of this operating mode, see I/O dynamic.

Continuous means that it is printed as long as new data is transferred via interface.

Photocell:


The printer is controlled via photocell. The printer prints automatically a label if the user takes away the label at the dispensing ledge. The print order is finished when the target number of labels is reached.

Photocell continuous:

For description of this operating mode, see Photocell.

Continuous means that it is printed as long as new data is transferred via interface.

Additional parameters for Dispenser I/O

After selection of desired Dispenser I/O operating mode, press the key  to select additional parameters.

Dispenser photocell

- First value = Indication of the current sensor level. This indication is for checking purposes and cannot be modified.
- Second value = Indication if a label (value = 1) or if no label (value = 0) was found. This indication is for checking purposes if the set switch level leads to a correct label recognition.
- Third value = Indication of switch level (Default: 1.2).
- Fourth value = Transmission power of label sensor [1..255]
Depending on label material (color) the sensor level can be adapted in order to permit a safe label recognition (Default: 80).

**NOTICE!**

The modification of this value is only taken into consideration for the operating modes *Photocell* and *Photocell continuous*.

Press the key  to move to the next parameter.

I/O Port 1-8 and I/O Port 9-16

Definition of port functions:
2 sign show the current setting for each port.

I/O Port 1-8

I+I+I+I+N+N+N+N+

Port 1 2 3 4 5 6 7 8

because of space reasons, the port number cannot be indicated)

The first sign specifies the following:

- I** = Port operates as Input
- O** = Port operates as Output
- N** = Port has no function (not defined)

These settings cannot be modified.

The second sign specifies the following:

- +** = Active signal level is 'high' (1)
- = Active signal level is 'low' (0)
- x** = Port is deactivated
- &** = Function is executed at each change of the signal level
- s** = Status can be enquired/influenced by interface






The printer-internal function is deactivated.

The modification of the signal level is only taken into consideration for the operating modes I/O static, I/O dynamic, I/O static continuous and I/O dynamic continuous.

Press the key  to move to the next parameter.

Debounce


Indication of debounce time of the dispenser input. The setting range of the debounce time is between 0 and 100 ms.
In case the start signal is not clear then you can debounce the input by means of this menu item.

	Press the key  to move to the next parameter.
Start signal delay	Indication in time per second of the delay for the start signal. Value range: 0.00 ... 9.99.
	Press the key  to move to the next parameter.
I/O protocol	Indication of interface at which the modifications of input signals and output signals (I/O) are sent.
	Press the key  to move to the next parameter.
Save signal	<p>On: The start signal for the next label can already be released during printing the current label. The signal is registered from the printer. The printer starts printing the next label immediately after finishing the current one. Therefore time can be saved and performance be increased.</p> <p>Off: The start signal for the next label can only be released if the current label is printed to the end and the printer is again in 'waiting' state (output 'ready' set). If the start signal was released already before, so this is ignored.</p>
	Press the key  to move to the next parameter.
Cycles/Delay	Indication of number of labels that are printed per start signal and the delay in ms between each label. Value range - Cycles: 1 ... 9 Value range - Delay: 0 ... 3000 ms
	Press the key  to move to the next parameter.
I/O Profile	Selection of the available configurations <i>Std_Label</i> (factory setting), <i>StdFileSelLabel</i> , <i>Appl</i> , <i>Std_Machine</i> or <i>Appl_Machine</i> (see chapter 3.1, page 18).

7.3 WLAN*

Switch on the label printer and the display shows the main menu.

Press the key  to access the function menu.

Press the key  until the menu *WLAN* is displayed.

Press the key  to select the menu.

The menu item WLAN can only be selected if a WLAN card was recognized at switching on the printer.


For more information, please see the separate manual.

* not yet available

7.4 Scanner

Switch on the label printer and the display shows the main menu.

Press the key **F** to access the function menu.

Press the key  until the menu *Scanner* is displayed.

Press the key  to select the menu.

Mode

- 0 Off
- 1 Mode 1 (data comparison)
i.e. bar code date which was read by the scanner is compared with the printed data.
- 2 Mode 2 (check readability)
i.e. it is only checked if the scanner can read the printed bar codes.
- 3 Mode 3 (check readability, graphic), i.e. it is only checked if the scanner can read the printed bar codes. This mode is to use if the bar code is available as graphic (e.g. printing with printer driver). In this case the printer cannot recognize that a bar code is placed onto the label.

NoRd = Non readables

Indication of number of successive non readables, i.e. when the printer indicates an error message.

Value range: 0 - 9

1 = the printer stops at the first label which cannot be read from the scanner and shows an error message.


0 = the printer do not stop at non-readable. A message appears at the display only.

VEtik = Label feeding

In many cases it is impossible to position the scanner directly at the printhead, and therefore with this setting a feeding can be set

Value range: 1 - 5

The illustration below clarifies the meaning of this parameter.

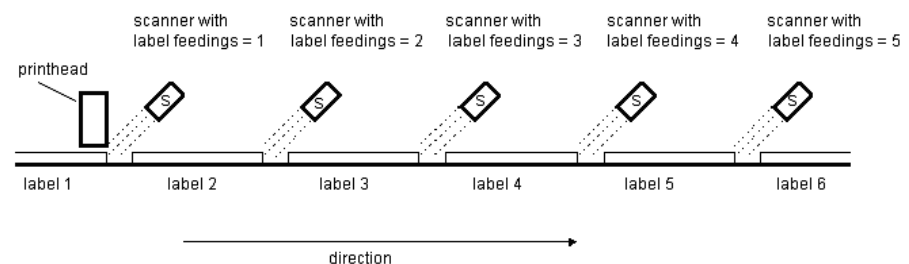

Press the key  to move to the next menu item.

Scanner type


Selection of the connected scanner type.

For more information about the different scanner models, please contact our sales department.

Press the key  to move to the next menu item.

Scanner setup

Positioning of scanner. First of all, the scanner must be connected, the appropriate scanner must be selected in the scanner type menu, the interface must be activated in the interface parameter menu and the interface parameters must be set correctly.

Press the key  to move to the next menu item.

Scan offset

Indication of value at which the label is moved so the scanner can read data onto the label.

Press the key  to move to the next menu item.

Scan length

If this parameter is set to 0 (AUTO), the switch on and off position of scanner is calculated by means of position and height of bar code onto the label.

If the parameter Scan Length is not 0, so this defines the length of scan sector. The start of scan sector is then set by the parameter Scan Offset. The following drawing shows the meaning of parameter.

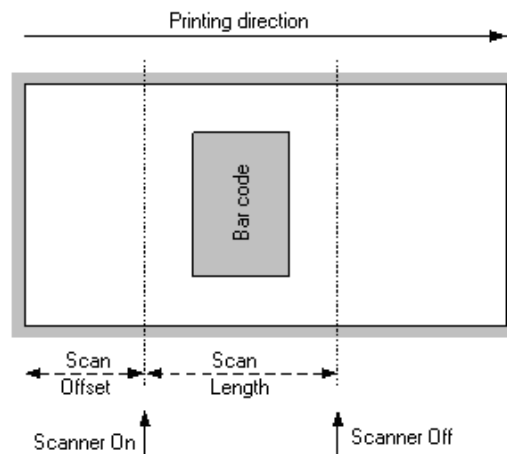


Figure 15

Press the key  to move to the next menu item.

Scan mode

With this parameter can be adjusted, at which time the scanning of the bar code is to be effected - during printing or after printing.

Press the key  to move to the next menu item.

Scan delay

In scan mode 'after print' the scanner is switched On after the label was printed. With this value the time can be specified between printing the label and switching On the scanner.

Press the key  to move to the next menu item.

Scan timeout

In scan mode 'after print' can be specified with this value the time which is available for scanning the label.

Press the key  to move to the next menu item.

Interface

To use a scanner, the COM2 interface is set to 1.

For more information, please see the separate manual.

8 SD Card / USB Memory Stick

8.1 General Information

On the back side of the label printer is the slot for the SD card and the USB port for inserting the USB memory stick.


The mass storage menu (memory menu) permits the access to SD cards or USB memory sticks attached to the printer. Among loading and saving labels simple operations of contents are possible such as delete files/directories, copy files/directories or formatting.



NOTICE!

In case of a malfunction of the original memory medium it is recommend to copy the most important data by means of a commercial Card Reader.

8.2 Display Structure

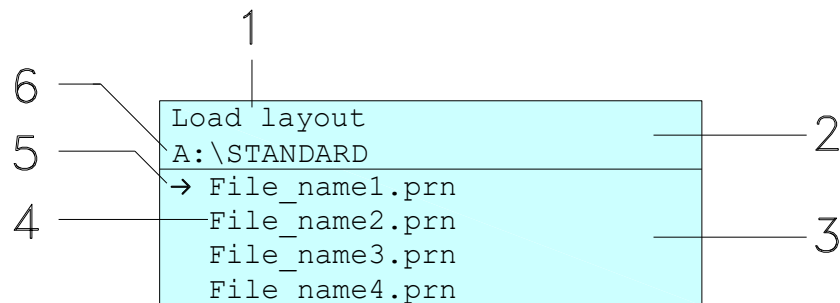

1 = Current function

2 = 2-lined header

3 = Scroll range

4 = File names / directory names

5 = Marking of the selected file (cursor)

6 = Current path (drive:\directory)

The two-line header (2) contains the current function name (1) and the current path (6).

The four-line scroll range indicates a list of files/directories. The first entry (marked with an arrow) is the active one. To this file/directory and/or these files/directories refer all actions.



NOTICE!

Three drives are available.

A:\ indicates the SD card.



















U:\ indicates the USB memory stick.

(only one stick can be inserted)

R:\ indicates the RAM (ZPL Emulation).

8.3 Navigation

The memory menu is operated with the keys of the foil keyboard of the control unit or with different function keys of an attached USB keyboard.

		Return to the previous menu.
		Function <i>Load layout</i> : Change to the File Explorer. File Explorer: Change to the 'context menu'.
		Select a file/directory if a multiple selection is possible.
		Main menu: Access to the memory menu. File Explorer: Create a new file.
		Start the current function for the active file/directory.
		Change to the superordinate directory.
		Change to the currently marked directory.
		In the current directory scroll upwards.
		In the current directory scroll downwards.


8.4 Define User Directory




NOTICE!


An user directory is to be defined:

- before using and/or navigating through the memory menu.
- if formatting of SD card is effected at PC and thus the STANDARD directory was not created automatically.

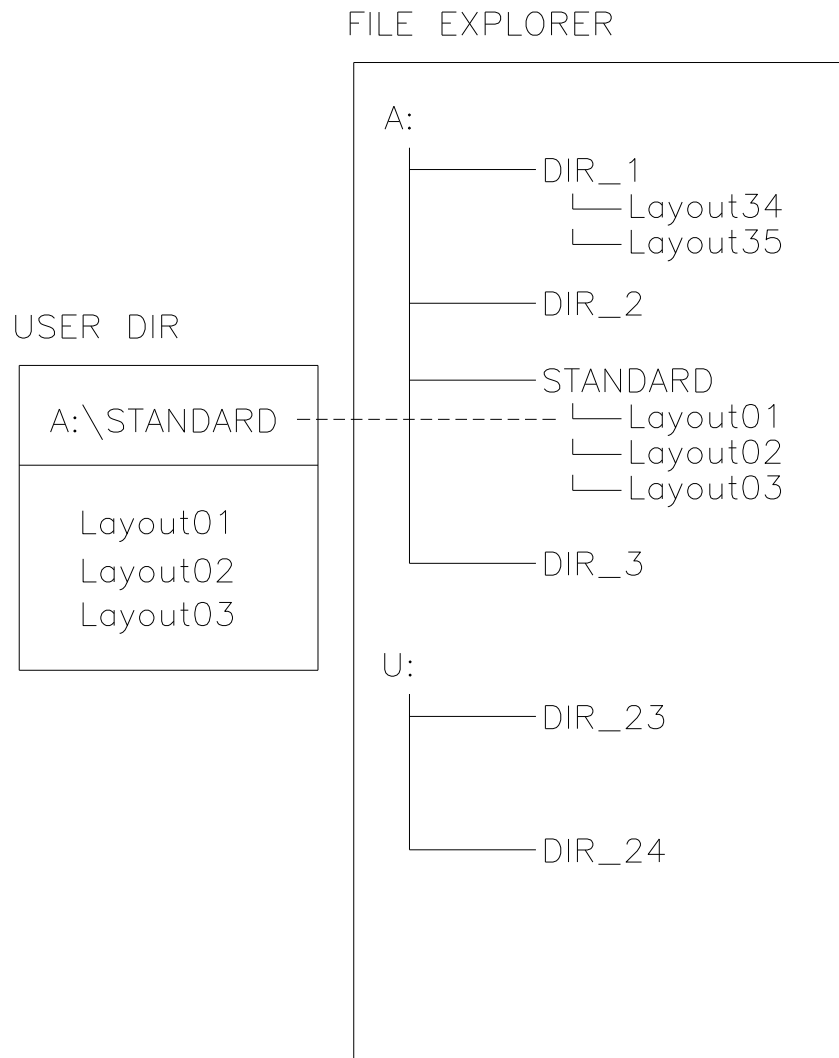

The user directory is the root directory in which the user saves usually the most frequently used files/layouts. The utilisation of the user directory permits the quick and direct access to the files saved in the defined user directory. The definition of an user directory saves thus a long search of the file to be printed.


Press the key  to access the memory menu.

Press the key  to call the File Explorer.

File Explorer A:\	Context Menu A:
[Drives] →<STANDARD> <DIR_1>	→Set as user dir Format Copy

Press the keys , , ,  to select the directory.

Press the key  to display all available functions.

Select the function *Set as user dir* and press the key  to confirm the selection.


Press the key  until the printer is back in the main menu.





At the next start of the memory menu the selected directory is displayed as user directory.


8.5 Load Layout

Loads a layout within a defined user directory. The function allows quick access to the desired layout as only layout files are displayed and directories hidden.

Load layout A:\STANDARD
→File_name1.prn File_name2.prn File_name3.prn File_name4.prn


Press the key  to access the memory menu.

Press the keys , , ,  to select the layout to be printed.

Press the key  to confirm the selection.

The printer display shows automatically the window to insert the number of copies which are to print.

Select the number of copies which are to be printed.

Press the key  to start the print order.



NOTICE!

The directory can NOT be changed here. A change of directory MUST be made in the File Explorer with the function *Change directory*.

8.6 File Explorer

The File Explorer is the file manager of the printing system. The File Explorer provides the main functions for the user interface of memory menu.


In the user directory, press the key **F** to access to the File Explorer.

Following functions are available:

- Change drive and/or directory
- Load file
- Save layout and/or configuration
- Delete file(s)
- Format SD card
- Copy file(s)

Change drive/directory

Selection of drive and/or directory in which the files are saved.

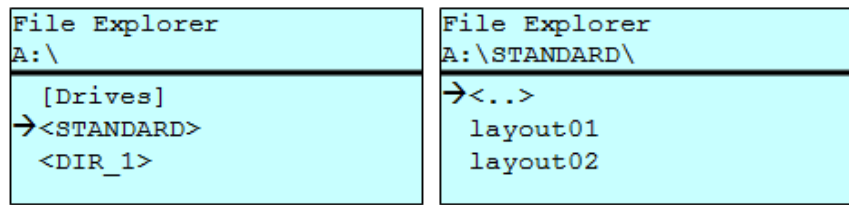

Press the key **M** to access the memory menu.

Press the key **F** to call the File Explorer.

Press the keys **↑**, **↓**, **←**, **→** to select the directory.


Press the key **Enter** to confirm the selection.


The selected directory is now displayed.



Load file


Loads a file. This can be a configuration saved before, a layout, etc.

```
Load file
A:\STANDARD\
<...>
→ layout01
   layout02
```

Press the key  to access the memory menu.

Press the key  to call the File Explorer.

Press the keys  and  to select the file.


Press the key  to load the selected file.


If the selected file is a layout, then the number of copies to print can be entered immediately.

Save layout


Saves the currently loaded layout under the selected name.

```
Save file
A:\STANDARD
→ Save layout
   Save config.
noname
```

Press the key  to access the memory menu.

Press the key  to call the File Explorer.

Press the key  to move to the menu *Save file*.


Select the function *Save layout* and press the key  to confirm the selection.


If an USB keyboard is attached a new file name for *noname* can be assigned.

Save configuration


Saves the complete, current printer configuration under the selected name.

```
Save file
A:\STANDARD
Save layout
→ Save config.
config.cfg
```

Press the key  to access the memory menu.

Press the key  to call the File Explorer.

Press the key  to change to the menu *Save file*.


Select the function *Save configuration* and press the key  to confirm the selection.


If an USB keyboard is attached a new file name for *config.cfg* can be assigned.

Delete file(s)


Deletes one or more files and/or directories irrevocably. With the deletion of a directory both the contained files and the subdirectories are deleted.


File Explorer A:\STANDARD\ layout01 *	Context menu 2 objects marked
→ layout02 *	→ Delete
layout03	Copying
layout04	


Press the key  to access to the memory menu.

Press the key  to call the File Explorer.

Press the keys  and  to select the file.

Press the key  to mark the files which are to be deleted. The marked entries are listed with *. Repeat this procedure until all desired files and/or directories are marked for deletion.

Press the key  to call the context menu.

Select the function *Delete* and press the key  to confirm the selection.

**NOTICE!**

The deleting procedure is irreversible!


Formatting


Formats irrevocably the memory card.

**NOTICE!**


USB sticks cannot be formatted at the printer!


File Explorer DRIVES	Context menu A:\
→A: 954Mb free U: No media	Set as user dir →Formatting Copy

Press the key  to access the memory menu.

Press the key  to call the File Explorer.

Select the drive which is to format with the navigation keys.


Press tkey  to call the context menu.


Select the function *Format* and press the key  to confirm the selection.



Copying


Creates a duplicate of the original file and/or the original directory to make changes independently of the original.


File Explorer	Context menu
A:\STANDARD\	2 objects marked
layout01 *	Delete
→ layout02 *	→ Copying
layout03	
layout04	


Press the key  to access the memory menu.

Press the key  to call the File Explorer.


Press the keys  and  to select the file.

Press the key  to mark the files which are to be copied. The marked entries are listed with *. Repeat this procedure until all desired files and/or directories are marked for copying.

Press the key  to call the context menu.

Select the function *Copy* and press the key  to confirm the selection.

Select Destination
DRIVES
→ A: 954Mb free

Select the target storage with the navigation keys and press the key  to confirm the selection.

8.7 Firmware Update

Procedure

On the SD card / USB memory stick a directory is created in which the necessary update files are stored (*firmware.prn*, *data.prn*). By means of the function *Load file* the file *firmware.prn* is selected/loaded. In the first step the printer executes the firmware update. After the necessary restart automatically the file *data.prn* is loaded. In this way the remaining components were updated. is After a renewed restart the update procedure is finished.

8.8 Filter

For certain functions a filter mask or a file name of a file which is to be saved can be entered. This input is indicated in the path line. The filter mask can be used to search for specific files. For example, with the input of 'L' only the files are listed whose character string starts with 'L' (regardless of upper and lower cases).

Without filter

```
Load layout
A:\STANDARD
→First_file.prn
  Layout_new.prn
  Sample.prn
  12807765.prn
```

With filter

```
Load layout
L
→Layout_new.prn
```

9 Maintenance and Cleaning



DANGER!

Risk of death by electric shock!

⇒ Disconnect the label printer from power supply before performing any maintenance work.



CAUTION!

Risk of injury when cleaning.

⇒ Pay attention to sharp edges.



NOTICE!

Before opening the housing cover, disconnect the device from the mains supply and wait for a moment until the power supply unit has discharged.

Maintenance plan

Maintenance task	Frequency
General cleaning (see chapter 9.1, page 84).	As necessary.
Clean the transfer ribbon drawing roller (see section 9.2, page 85).	Each time the transfer ribbon is changed or when the printout is adversely affected.
Clean the pressure roller (see chapter 9.3, page 85).	Each time the label roll is changed or when the printout and label transport are adversely affected.
Clean the printhead (see chapter 9.4, page 86).	Each time the transfer ribbon is changed or when the printout is adversely affected.
Clean the label photocell (see chapter 9.5, page 87).	When replacing the label roll.
Replace the printhead (see chapter 9.6, page 88).	When errors in the printout occur.



NOTICE!

The handling instructions for the use of Isopropanol (IPA) must be observed. In the case of skin or eye contact, immediately wash off the fluid thoroughly with running water. If the irritation persists, consult a doctor. Ensure good ventilation.

**WARNING!**

Risk of fire by easily inflammable label soluble!

- ⇒ When using label soluble, dust must be completely removed from the label printer and cleaned.

9.1 General Cleaning

**CAUTION!**

Abrasive cleaning agents can damage the label printer!

- ⇒ Do not use abrasives or solvents to clean the outer surface of the label printer.
- ⇒ Remove dust and paper fuzz in the printing area with a soft brush or vacuum cleaner.
- ⇒ Clean the outer surfaces with an all-purpose cleaner.

9.2 Cleaning the Transfer Ribbon Drawing Roller

A soiled drawing roller can lead to a reduced print quality and can affect the transport of material.

1. Open the printer cover.
2. Remove transfer ribbon from the label printer.
3. Remove deposits with the roller cleaner and a soft cloth.
4. If the roller appears damaged, replace it.
5. Insert again the transfer ribbon material.
6. Close the printer cover.

9.3 Cleaning the Pressure Roller

A soiled pressure roller can lead to a reduced print quality and can affect the transport of material.

**CAUTION!**

Pressure roller can be damaged!

⇒ Do not use sharp or hard objects to clean the pressure roller.

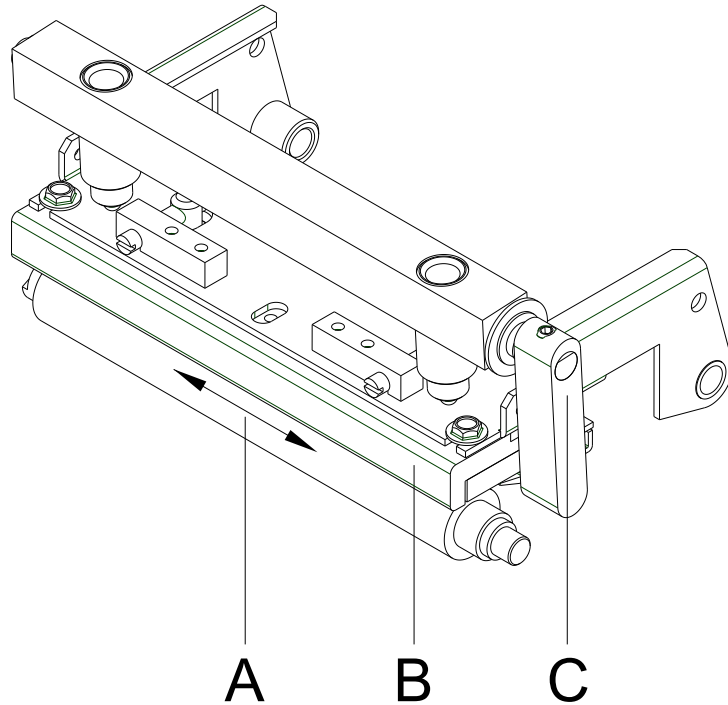


Figure 16

1. Open the printer cover.
2. Turn the lever (C) counter clockwise to lift up the printhead (B).
3. Remove labels and transfer ribbon from the label printer.
4. Remove deposits with the roller cleaner and a soft cloth.
5. Turn the roller (A) manually step by step to clean the complete roller (only possible when printer is switched off, as otherwise the step motor is full of power and the roller is kept in its position).
6. Insert again the transfer ribbon material.
7. To move the printhead down, turn the pressure lever in clockwise direction until it locks.
8. Close the printer cover.

9.4 Cleaning the Printhead



CAUTION!

Risk of injury from the hot printhead!

- ⇒ Make sure the printhead has cooled down before cleaning.

Printing can cause accumulation of dirt at printhead e.g. by colour particles of transfer ribbon, and therefore it is necessary to clean the printhead in regular periods depending on operating hours, environmental effects such as dust etc.



CAUTION!

Printhead can be damaged!

- ⇒ Do not use sharp or hard objects to clean the printhead.
- ⇒ Do not touch protective glass layer of the printhead.

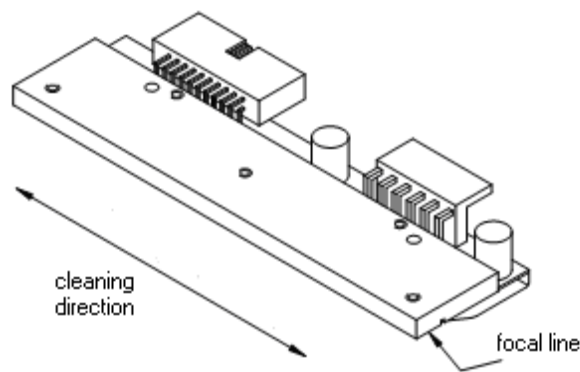


Figure 17

1. Open the printer cover.
2. Turn the lever (A, in Figure 16) counter clockwise to lift up the printhead.
3. Remove labels and transfer ribbon from the label printer.
4. Clean the printhead surface with a special cleaning pen or a cotton swab dipped in pure alcohol.
5. Before using the label printer, let the printhead dry for about two to three minutes.
6. Reload labels and transfer ribbon.
7. To move the printhead down, turn the pressure lever (A, in Figure 16) in clockwise direction until it locks.
8. Close the printer cover.

9.5 Cleaning the Label Photocell



CAUTION!

Label photocell can be damaged!

⇒ Do not use sharp or hard objects or solvents to clean the label photocell.

The label photocell can be soiled with paper dust. This may affect the label scanning.

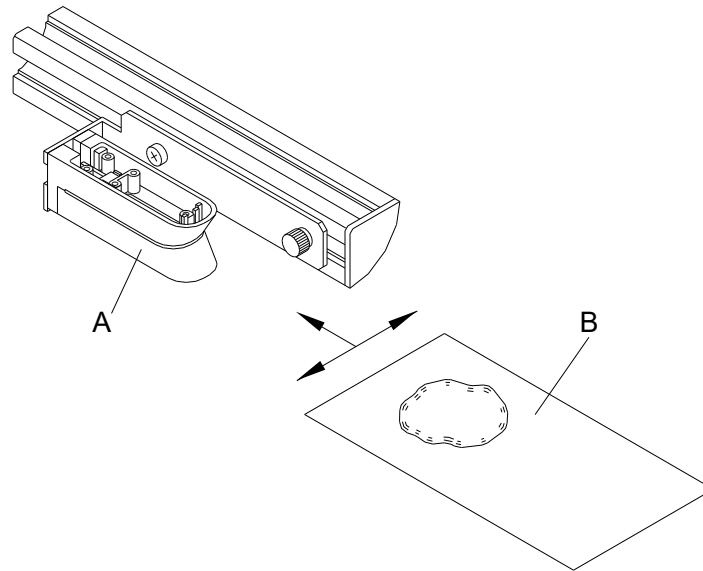


Figure 18

1. Open the printer cover.
2. Turn the lever counter clockwise to lift up the printhead.
3. Remove labels and transfer ribbon from the label printer.
4. Blow out the photocell (A) with the pressure gas spray. Observe strictly the instructions on the spray can!
5. Clean the label photocell (A) additionally with a cleaning card (B) before soaked in pure alcohol. Move the cleaning card from one side to the other (see illustration).
6. Reload labels and transfer ribbon (see chapter 5 Load Media, on page 31).
7. To move the printhead down, turn the pressure lever in clockwise direction until it locks.
8. Close the printer cover.

9.6 Replacing the Printhead (General)



CAUTION!

The printhead can be damaged by static electricity discharges and impacts!

- ⇒ Set up the printer on a grounded, conductive surface.
- ⇒ Ground your body, e.g. by wearing a grounded wristband.
- ⇒ Do not touch the contacts on the plug connections (B, C).
- ⇒ Do not touch the printing line (E) with hard objects or your hands.

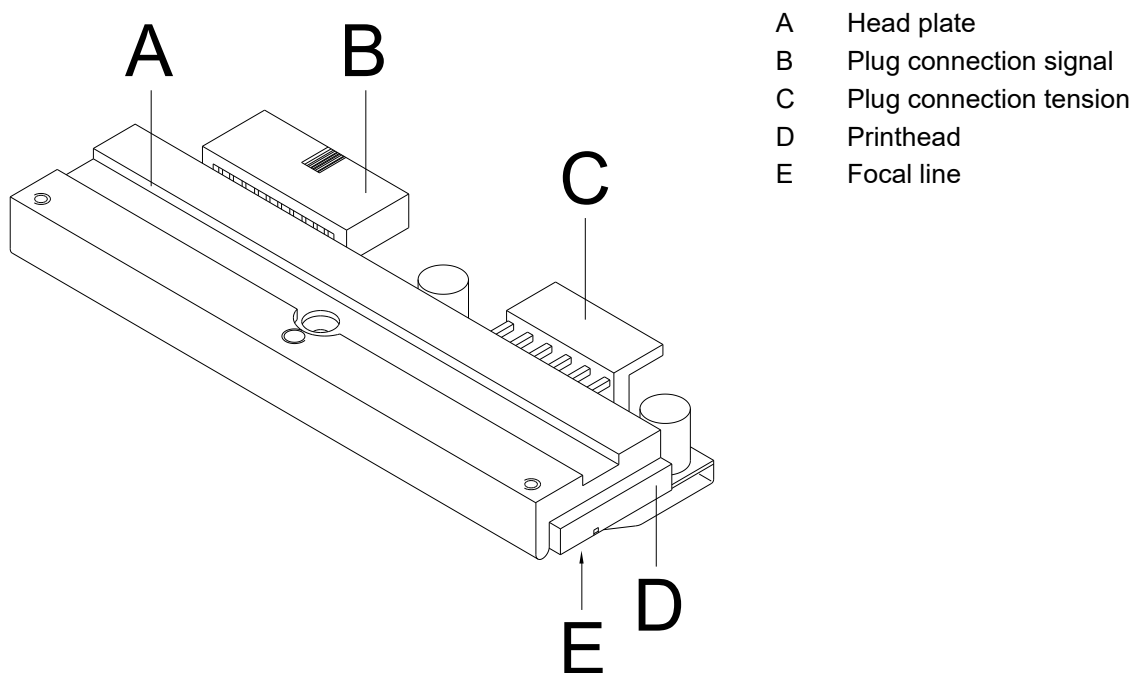


Figure 19



NOTICE!

The printhead (D) is preinstalled on a head plate (A) and aligned at the factory.



CAUTION!

Danger of abrasion when removing/installing the printhead!

- ⇒ Pay attention to the toothing when the tear-off edge is installed.

9.7 Replacing the Printhead

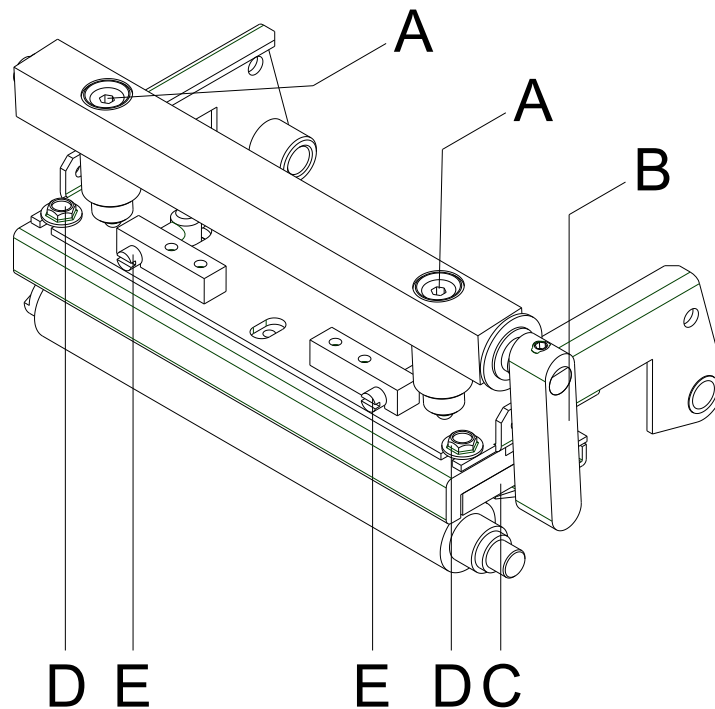


Figure 20

Removing the printhead

1. Open the printer cover.
2. Remove labels and transfer ribbon from the label printer.
3. When the printhead is closed, loosen the screws (D).
4. Turn the lever (B) counter clockwise to lift up the printhead.
5. If the printhead (C) is not disengaged on the pressure roller, continue loosen the screws (D).
6. Remove the printhead carefully to the front until you can reach the plug connections.
7. Remove the plug connections and then remove the printhead (C).

Installing the printhead

1. Attach the plug connections.
2. Position the printhead in the printhead mounting bracket in such a way that the pin is secured in the corresponding hole in the head plate.
3. Lightly keep the printhead mounting bracket on the printer roller with one finger and check for correct positioning of the printhead.
4. Tighten again the screws (D).
5. Reload labels and transfer ribbon (see chapter 5 Load Media, on page 31).
6. To move the printhead down, turn the pressure lever in clockwise direction until it locks.
7. Close the printer cover.
8. Check the resistance value on the type plate of printhead and if necessary change the value in the *Service functions/heater resistance*.

9.8 Adjusting the Printhead

Parallelism

An important characteristic for a high quality print is the parallelism of the focal line of the thermal printhead to the pressure roll. Because of the fact that the position of focal line of the printhead depends on fluctuations caused by production, it is necessary to adjust the parallelism.

1. Loosen the screws (D, Figure 20) with a hexagon key by approx. $\frac{1}{4}$ rotations.
2. Adjust the parallelism with the adjusting screws (E, Figure 20).
Clockwise = printhead moves forwards
Counter clockwise = printhead moves backwards
3. Adjust the parallelism as long as the printing result comes up to your full expectation.
4. Tighten again the screws (D, Figure 20).
5. Start a print order with approx. 10 labels and control the correct passage of transfer ribbon.

Pressure

Increasing the head contact pressure leads to an improvement of the print image density on the corresponding side and to a shifting of the ribbon feed path in the corresponding direction.



CAUTION!

Damage of printhead by unequal use!

⇒ Only change the factory settings in exceptional cases.

The selection of the smallest value can optimise the life cycle of printhead.

1. Turn the pressure screws (A, Figure 20) to change the pressure of printhead.
2. Turning the pressure screws (A, Figure 20) in clockwise direction results in a pressure increase.
3. Turning the pressure screws (A, Figure 20) counter clockwise results in a pressure decrease.

10 Error correction

Error message	Cause	Remedy
1 Line too high	Line rises up completely or partly over the upper edge of label.	Move line down (increase Y value). Check rotation and font.
2 Line too low	Line rises up completely or partly over the bottom edge of label.	Move line up (reduce X value). Check rotation and font.
3 Character set	One res. several characters of the text is res. are not available in the selected font.	Change text. Change font.
4 Unknown BC type	Selected code is not available.	Check code type.
5 Illegal rotation	Selected rotation is not available.	Check rotation.
6 CV font	Selected font is not available.	Check font.
7 Vector font	Selected font is not available.	Check font.
8 Measuring label	While measuring no label was found. Set label length is too large.	Check label length and if labels are inserted correctly. Restart measuring anew.
9 No label found	No label available. Soiled label photocell. Labels not inserted correctly.	Insert new label roll. Check if labels are inserted correctly. Clean the label photocell.
10 No ribbon	During the print order the ribbon roll becomes empty (front printhead). Defect at the transfer ribbon photocell (front photocell).	Change transfer ribbon. Check transfer ribbon photocell (service functions).
11 COM FRAMING	Stop bit error.	Check stop bits. Check baud rate. Check cable (printer and PC).
12 COM PARITY	Parity error.	Check parity. Check baud rate. Check cable (printer and PC).
13 COM OVERRUN	Loss of data at serial interface (RS-232).	Check baud rate. Check cable (printer and PC).

Error message	Cause	Remedy
14 Field number	Received line number is invalid.	Check sent data. Check connection PC - printer.
15 Length mask	Invalid length of received mask statement.	Check sent data. Check connection PC - printer.
16 Unknown mask	Transferred mask statement is invalid.	Check sent data. Check connection PC - printer.
17 Missing ETB	No end of data found.	Check sent data. Check connection PC - printer.
18 Invalid character	One res. several characters of the bar code is res. are not valid.	Change bar code data. Change font.
19 Invalid statement	Unknown transferred data record.	Check sent data. Check connection PC - printer.
20 Invalid check digit	For check digit control the entered res. received check digit is wrong.	Calculate check digit anew. Check code data.
21 Invalid SC code	Selected SC factor is invalid for EAN res. UPC.	Check SC factor.
22 Invalid number of digits	Entered digits for EAN res. UPC are invalid < 12; > 13.	Check number of digits.
23 Type check digit	Selected check digit calculation is not available in the bar code.	Check calculation of check digit. Check bar code type.
24 Invalid extension	Selected zoom factor is not available.	Check zoom factor.
25 Offset sign	Entered sign is not available.	Check offset value.
26 Offset value	Entered offset value is invalid.	Check offset value.
27 Printhead temperature	Printhead temperature is too high. Defective printhead sensing device.	Reduce contrast. Change printhead.
28 Cutter error	With cut an error occurred. Paper jam.	Check label run. Check cutter run.

Error message	Cause	Remedy
29 Invalid parameter	Entered data do not correspond to the characters allowed from the application identifier.	Check code data.
30 Application Identifier	Selected application identifier is not available in GS1-128.	Check code data.
31 HIBC definition	Missing HIBC system sign. Missing primary code.	Check definition of HIBC code.
32 System clock	Real Time Clock function is selected but the battery is empty. Defective RTC.	Change battery. Change RTC component.
33 No SD interface	Interrupted connection CPU - SD card. Defective SD card interface.	Check connection CPU - SD card interface. Check SD card interface.
34 No print memory	Not enough print memory available.	Check SD assembly on CPU.
35 Printhead open	At start of a print order the printhead is open.	Close the printhead and start print order anew.
36 BCD invalid format	BCD error Invalid format for the calculation of Euro variable.	Check entered format.
37 BCD overflow	BCD error Invalid format for the calculation of Euro variable.	Check entered format.
38 BCD division	BCD error Invalid format for the calculation of Euro variable.	Check entered format.
39 FLASH ERROR	Flash component error.	Run a software update. Change CPU.
40 Length command	Invalid length of the received command statement.	Check data sent. Check connection PC - printer.
41 No drive	SD card not found / not correctly inserted.	Insert SD card correctly.
42 Drive error	Impossible to read SD card (faulty).	Check SD card, if necessary change it.
43 Unformatted	SD Card not formatted.	Format SD card.

Error message	Cause	Remedy
44 Delete directory	Attempt to delete the actual directory.	Change directory.
45 Invalid path	Too long indication of path.	Indicate a shorter path.
46 Drive write-protected	Memory card is write-protected.	Deactivate write protection.
47 Directory not file	Attempt to indicate a directory as file name.	Correct your entry.
48 File already open	Attempt to change a file during an access is active.	Select another file.
49 No file/directory	File does not exist on SD card.	Check file name.
50 Invalid file name	File name contains invalid characters.	Correct entry of name, remove special characters.
51 Internal file error	Internal file system error.	Please contact your distributor.
52 Root full	The max. number (64) of main directory entries is reached.	Delete at least one main directory entry and create subdirectories.
53 Drive full	Maximum SD capacity is reached.	Use new SD Card, delete no longer required files.
54 File/directory exists	The selected file/directory already exists.	Check name, select a different name.
55 File too large	During copying procedure not enough memory space onto target drive available.	Use a larger target card.
56 No update file	Errors in update file of firmware.	Start update file anew.
57 Invalid graphic file	The selected file does not contain graphic data.	Check file name.
58 Directory not empty	Attempt to delete a not empty directory.	Delete all files and sub-directories in the desired directory.
59 No SD interface	No SD card drive found.	Check connection of SD card drive. Contact your distributor
60 No media	No SD card is inserted.	Insert SD card in the slot.
61 Webserver error	Error at start of web server.	Please contact your distributor.

Error message	Cause	Remedy
62 Wrong PH FPGA	The direct print module is equipped with the wrong FPGA.	Please contact your distributor.
63 End position	The label length is too long. The number of labels per cycle is too much.	Check label length res. the number of labels per cycle.
64 Zero point	Defective photocell.	Change photocell.
65 Compressed air	Pressure air is not connected.	Check pressure air.
66 External release	External print release signal is missing.	Check input signal.
67 Column too wide	Wrong definition of column width res. number of columns.	Reduce the column width res. correct the number of columns.
68 Scanner	The connected bar code scanner signals a device error.	Check the connection scanner/printer. Check scanner (dirty).
69 Scanner NoRead	Bad print quality. Printhead completely soiled or defective. Print speed too high.	Increase contrast. Clean printhead or replace (if necessary). Reduce print speed.
70 Scanner data	Scanned data does not correspond to the data which is to print.	Replace printhead.
71 Invalid page	As page number either 0 or a number > 9 is selected.	Select a number between 1 and 9.
72 Page selection	A page which is not available is selected.	Check the defined pages.
73 Undefined page	The page is not defined.	Check the print definition.
74 Format user guiding	Wrong format for customized entry.	Check the format string.
75 Format date/time	Wrong format for date/time.	Check the format string.
76 Hotstart SD	No SD card found.	If option hotstart was activated, a SD card must be inserted. Switch off the printer before inserting the memory card.
77 Flip/Rotate	Selection of print of several columns and also mirror/rotate.	It is only possible to select one of both functions.

Error message	Cause	Remedy
78 System file	Loading of temporary hotstart files.	Not possible.
79 Shift variable	Faulty definition of shift times (overlapping times).	Check definition of shift times.
80 GS1 Databar	General GS1 Databar error.	Check definition and parameter of GS1 Databar code.
81 IGP error	Protocol error IGP.	Check sent data.
82 Time generation	Printing creation was still active at print start.	Reduce print speed. Use printers' output signal for synchronization. Use bitmap fonts to reduce generating time.
83 Transport protection	Both DPM position sensors (start/end) are active.	Displace zero point sensor Check sensors in service functions menu
84 No font data	Font and web data is missing.	Run a software update.
85 No layout ID	Layout ID definition is missing.	Define layout ID onto the label.
86 Layout ID	Scanned data does not correspond to defined ID.	Wrong label loaded from SD card.
87 RFID no label	RFID unit cannot recognize a label.	Displace RFID unit or use an offset.
88 RFID verify	Error while checking programmed data.	Faulty RFID label. Check RFID definitions
89 RFID timeout	Error at programming the RFID label.	Label positioning. Faulty label.
90 RFID data	Faulty or incomplete definition of RFID data.	Check RFID data definitions.
91 RFID tag type	Definition of label data does not correspond with the used label.	Check storage partitioning of used label type
92 RFID lock	Error at programming the RFID label (locked fields).	Check RFID data definitions. Label was already programmed.
93 RFID programming	Error at programming the RFID label.	Check RFID definitions.

Error message	Cause	Remedy
94 Scanner timeout	The scanner could not read the bar code within the set timeout time. Defective printhead. Wrinkles in transfer ribbon. Scanner wrong positioned. Timeout time too short.	Check printhead. Check transfer ribbon. Position scanner correctly, corresponding to the set feeding. Select longer timeout time.
95 Scanner layout difference	Scanner data does not correspond to bar code data.	Check adjustment of scanner. Check scanner settings / connection.
96 COM break	Serial interface error.	Check settings for serial data transmission as well as cable (printer-PC).
97 COM general	Serial interface error.	Check settings for serial data transmission as well as cable (printer-PC).
98 No software printhead FPGA	No printhead-FPGA data available.	Please contact your responsible distributor.
99 Load software printhead FPGA	Error when programming printhead-FPGA.	Please contact your responsible distributor.
100 Upper position	Option applicator: Sensor signal up is missing.	Check input signals / compressed-air supply.
101 Lower position	Option applicator: Sensor signal down is missing.	Check input signals / compressed-air supply.
102 Vacuum plate empty	Option applicator: Sensor does not recognize a label at vacuum plate.	Check input signals / compressed-air supply.
103 Start signal	Print order is active but device not ready to process it.	Check start signal.
104 No print data	Print data outside the defined label. Selection of wrong module type (design software).	Check selected module type. Check selection of left/right version.
105 Printhead	No original printhead is used.	Check the used printhead. Contact your distributor.

Error message	Cause	Remedy
106 Invalid Tag type	Wrong Tag type. Tag data do not match the Tag type in the printer.	Adapt data or use the correct Tag type.
107 RFID inactive	RFID module is not activated. No RFID data can be processed.	Activate RFID module or remove RFID data from label data.
108 GS1-128 invalid	Transferred GS1-128 bar code is invalid.	Verify bar code data (see GS1-128 bar code specification).
109 EPC parameter	Error at EPC calculation.	Verify data (see EPC specification).
110 Housing open	When starting the print order the housing cover is not closed.	Close the housing cover and start the print order anew.
111 EAN.UCC code	Transferred EAN.UCC code is invalid.	Verify bar code data (see corresponding specification).
112 Print carriage	Printing carriage does not move.	Check gear belt (possibly broken).
113 Applicator error	Option applicator: Error while using applicator.	Check applicator.
114 Left position	Option applicator: Left final position switch is not in correct position.	Check LEFT final position switch for correct function and position. Check function of pneumatics for cross traverse.
115 Right position	Option applicator: Right final position switch is not in correct position.	Check RIGHT final position switch for correct function and position. Check function of pneumatics for cross traverse.
116 Print position	Option applicator: The applicator is not in the print position when trying to print a label.	Check TOP and RIGHT final position switch for correct function and position. Check pneumatics for function
117 XML parameter	The parameters in the XML file are not correct.	Please contact your responsible distributor.
118 Invalid variable	Transferred variable is invalid with customized entry.	Select correct variable without customized entry and transfer it.

Error message	Cause	Remedy
119 No ribbon	During the print order the ribbon roll becomes empty (rear printhead). Defect at the transfer ribbon photocell (rear photocell).	Change transfer ribbon. Check transfer ribbon photocell (service functions).
120 Wrong directory	Invalid target directory when copying.	Target directory must not be within the source directory. Check target directory.
121 No label PH2	No label found at the rear printhead (DuoPrint). Soiled label photocell. Labels not inserted correctly.	Insert new label roll. Clean the label photocell. Check if labels are inserted correctly.
122 IP occupied	The IP address was already assigned.	Assign a new IP address.
123 Print asynchronous	The label photocell do not work in the order as it is expected according to print data. The settings of the photocell are not correct. Settings of label size and gap size are not correct. No label found at the rear printhead. Soiled label photocell. Labels not inserted correctly.	Check label size and gap size. Check label photocell settings. Check correct loading of label material. Insert new label roll. Clean the label photocell. Check if labels are inserted correctly.
124 Speed too low	The print speed is too slow.	Increase the speed of customers' machine.
125 DMA buffer	Communication problem HMI.	Restart the printer.
126 UID conflict	Configuration RFID programming faulty.	Run RFID initialising.
127 Module not found	RFID module not available.	Check the RFID module connection. Please contact your responsible distributor.
128 No release signal	No print release by higher-level control (customer machine).	Activate release signal at the higher-level control.

Error message	Cause	Remedy
129 Wrong firmware	Firmware does not match the used printer type.	Use firmware that fits to the printer type. Please contact your responsible distributor.
130 Language missing	Language file for the set printer language is not available.	Please contact your responsible distributor.
131 Wrong material	Label material does not fit to printing data.	User label material with suitable label and/or gap length.
132 Invalid mark-up tag	Invalid mark-up formatting characters in text.	Correct the formatting characters in the text.
133 Script not found	LUA script file not found.	Check the file name.
134 Script failure	LUA script is incorrect.	Check the script.
135 Script user error	Error in LUA script user input.	Correct the input value.
136 No reprint available	No label data for reprinting available.	Send new label data to the printer.
137 Printhead short circuit	Electrical short at the printhead.	Check the used printhead. Please contact your distributor.
138 Too less ribbon	Transfer ribbon ends.	Change transfer ribbon.
139 Rewinder error	Label band is torn	Load a new label roll. Stick together the label band.
140 Rewinder motor blocked	External rewinder motor is blocked.	Switch off the printing system and check mechanical resistance. Change the full label roll.
141 Hardware error	A hardware component could not be found.	Please contact your responsible distributor.
142 No print mechanics	No print mechanics connected.	Check connection (print mechanics – control unit)
143 Printhead sensor	No signal change at the printhead photocell.	Check printhead photocell for proper functioning.
144 FreeType error	Problem with generating TrueType text.	Check print data.


Error message	Cause	Remedy
145 -	Reserved	reserved
146 Unknown (see Log)	Internal error.	Check log files or send them to support.
147 Upper sensor	Upper limit sensor defective.	Check or replace the upper limit sensor.
148 Parameter	Parameter incorrectly formatted.	Check parameters.
149 QR code invalid	Invalid QR code parameters.	Check QR code parameters.
150 Short PH motor	Short circuit in the printhead motor.	Check printhead motor.
151 Wire PH motor	Wire break at the printhead motor.	Check the printhead motor connection.
152 Short TR motor	Short circuit in the transfer ribbon motor.	Check transfer ribbon motor.
153 Wire TR motor	Wire break at the transfer ribbon motor.	Check the transfer ribbon motor connection.

11 Additional information

11.1 Column Printing


With this printer several columns can be printed, i.e. the information of one column can be printed several times (depending on its width) on a label. Caused by this the use of the complete print width is possible and the generating time is enormously reduced.


For example four columns with a width of 25 mm or two columns with a width of 50 mm can be printed onto a label with a width of 100 mm. Please note that the first label is always the one with the largest x coordinate, i.e. it has the largest distance to the printhead.

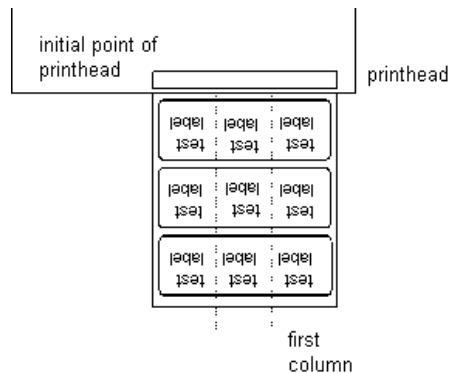




Setting the print of several columns



Press the key **F** to access the function menu.



Press the key  until the menu *Label layout* is displayed.


Press the key  to confirm the selection.

Press the key  until the menu item *Width/Columns* is displayed.

Press the keys  and  to set the label width. The *Width* is the width of one column, e.g. 20.0 mm.

Press the keys  and  to move to the *Column* input field.

Press the keys  and  to change the number of columns, e.g. four columns with a label width of 20.0 mm.

Press the key  to start the print with input of number of labels and number of lines. The number of labels corresponds to the number of labels that should be printed.
e.g. Columns: 3, Items: 4

label 6	label 5	label 4
label 3	label 2	label 1

The first four labels were printed but not label 5 and 6.

11.2 Hotstart



NOTICE!

The data is saved onto SD card. Therefore the SD card is a condition for the *Hotstart* menu item.

The function *Hotstart* contains e.g. that in case of a power failure the currently loaded label can be further processed without any loss of data. Moreover a print order can be interrupted and to be continued after switching on the printer anew.



NOTICE!

At an active *Hotstart* all necessary data is stored on the SD card therefore do not remove the card during operation. When removing during operation, this causes the loss of all data on the SD card.

Save current label

In case the *Hotstart* function is set to on, at the start of a print order the data of the current label is saved to the corresponding directory of the SD card.

However the following conditions have to be fulfilled:

- SD card inserted in drive A.
- Enough free storage space onto SD card.

An error message appears in case these conditions are not fulfilled.

Save print order state

At switching off the printer the state of the current print order is saved to the corresponding directory of the SD card.

However the following conditions have to be fulfilled:

- SD card inserted in drive A.
- Enough free storage space onto SD card.

Load label and print order state

When restarting the label printer (if the function *Hotstart* is activated) the saved label data and the status of print order were loaded from the corresponding file on the SD card. Because of this reason, when switching on the label printer a SD card has to be inserted in the appropriate drive. If the data cannot be loaded an error message appears.

Start print order

In case at switching off the label printer a print order was active, then a print start is released automatically and the required res. actual number of printed labels is refreshed.
In case the print order was stopped at switching off the label printer, it is again set to the stopped mode after switching on the label printer anew.
In case a customized entry was active during switching off the label printer, the window for the first customized variable is displayed.

Refresh variable counter

As in the intended file only the start values of the counter are saved, they are refreshed at a new start of the print order by means of the number of printed labels. Each counter is counted corresponding from its start value. Afterwards the position of the current and the next counter update are correctly set by means of the update intervals.

**NOTICE!**

Make sure that in case graphics are onto the label they have to be saved onto SD card.

11.3 Backfeed/Delay

Backfeed modes

In continuous dispenser mode (IO dynamic continuous, IO static continuous, IO photocell continuous) no optimised backfeed is possible. Because of the fact when changing the print order, then the current label in the offset sector is already printed from the old print order.

In the sector that is printed when preprint the following label, no date/time variable should be existing, because this could be refreshed before the next start impulse.

Standard

Dispenser: After printing the label, it is driven into the dispenser offset and waited there, until the label was removed (photocell) or a new start signal is given (IO dynamic). Afterwards it is again backtracked to the beginning of label and then the next label is printed.

Cutter: After printing the label, it is driven into the cutter offset; the label is cut and then backtracked immediately to the beginning of label (if an operating mode with backfeed is selected). Afterwards the next label is printed, if necessary.

Tear-off edge: After printing the last label of a print order it is driven into the tear-off offset and the label res. labels can be taken away. When starting a new print order, first it is backtracked again to the beginning of label and then the next label is printed.
If a following print order is available before driving into the tear-off offset, then it is not driven into tear-off offset but the following label is directly printed.

Automatic

Dispenser: After printing the label it is driven into the dispenser offset and then backtracked to the beginning of label either immediately or after the set delay time. When releasing a new start signal (IO dynamic) the next label is immediately printed.

Cutter: This is the same function as for 'backfeed standard' as it is always backtracked immediately to the beginning of label.

Tear-off edge: After printing the last label of a print order it is driven into the tear-off offset and then backtracked to the beginning of label either immediately or after the set delay time. When starting a new print order then the next label is immediately printed.
If a following print order is available before driving into the tear-off offset, then it is not driven into tear-off offset but the following label is directly printed.

No backfeed**Dispenser:**

After printing the label it is driven into the dispenser offset and there waited. When releasing a new start signal (IO dynamic) then the next label is immediately printed. Because of the fact that the label is already in the offset, the label is only printed from beginning of offset position, i.e. at the definition of label an accordingly large range must be left free at the top margin of label, because these data are otherwise not printed.

Cutter:

This is the same function as for 'backfeed standard' as it is always backtracked after cutting immediately to the beginning of label.

Tear-off edge:

After printing the last label of a print order it is driven into the tear-off offset. When starting a new print order, the next label is immediately printed. Because of the fact that the label is already in the offset, the label is only printed from beginning of offset position, i.e. at the definition of label an accordingly large range must be left free at the top margin of label, because these data are otherwise not printed.

If a following print order is available before driving into the tear-off offset, then it is not driven into tear-off offset but the following label is directly printed.

Optimised backfeed**Dispenser:**

After printing the label, during driving into dispenser offset the following label is 'pre-printed', if this is already available (generated). When releasing a new start signal (IO dynamic) the already 'pre-printed' label is printed to the end and when driving into the dispenser offset the following label is again 'pre-printed'. In case the following label is not yet available or at the last label of a print order, the dispenser offset is driven as until now, and then for the next label before printing the backfeed to the beginning of label is executed.

Cutter:

After printing the label, during driving into the cutter offset the following label is 'pre-printed', if this is already available (generated). After the cut it is not backtracked but the already 'pre-printed' label is printed to the end and when driving into the cutter offset the following label is again 'pre-printed'. If the following label is not yet available or at the last label of a print order, the cutter offset is driven as until now, then cut and afterwards the backfeed to the beginning of label is executed.

Tear-off edge:

This is the same function as for 'backfeed standard' as it is only driven into the tear-off offset at the last label of a print order, if no following print order is available.

11.4 Photocells



NOTICE!

When using reflection photocells you should observe that the label printer cover is closed and in this way other light (e.g. working lamp) on the photocell is prevented.

Transmission photocell normal

For this photocell type the transmitter is at the top res. the receiver at the bottom, i.e. the infra-red light is sent from the top. In this way the label detection is also from the top. This photocell type is used for standard adhesive labels with gap.

Reflexion photocell normal

For this photocell type the transmitter and receiver are at the bottom, i.e. the light is reflected by the label and taken over from the receiver. This photocell type is used for white (light) continuous labels with a black (dark) bar. The bar is the separator, i.e. it indicates the position of gap and in this way the label start.

Transmission photocell inverse

For this photocell type the transmitter is at the top res. the receiver at the bottom, i.e. the infra-red light is sent from the top. The label detection is, same as for the **transmission photocell normal**, from the top. However, it is printed differently as for normal photocells, in the translucent place; the label printer recognizes the opaque place as gap. This photocell type is used frequently when printing foils.

Reflexion photocell inverse

For this photocell type the transmitter and receiver are at the bottom, i.e. the light is reflected by the label and taken over from the receiver. This photocell type is used for black (dark) continuous labels with a white (light) bar. This bar is the separator, i.e. it indicates the position of gap and in this way the start of label.




NOTICE!


When using transmission photocells inverse, the label printer must measure a difference of 2.5 V and for reflection photocells inverse 1 V between translucent and opaque material. Otherwise the label printer does not recognize a difference between label and gap (bar).


12 Touch-Screen Display


12.1 Menu Structure

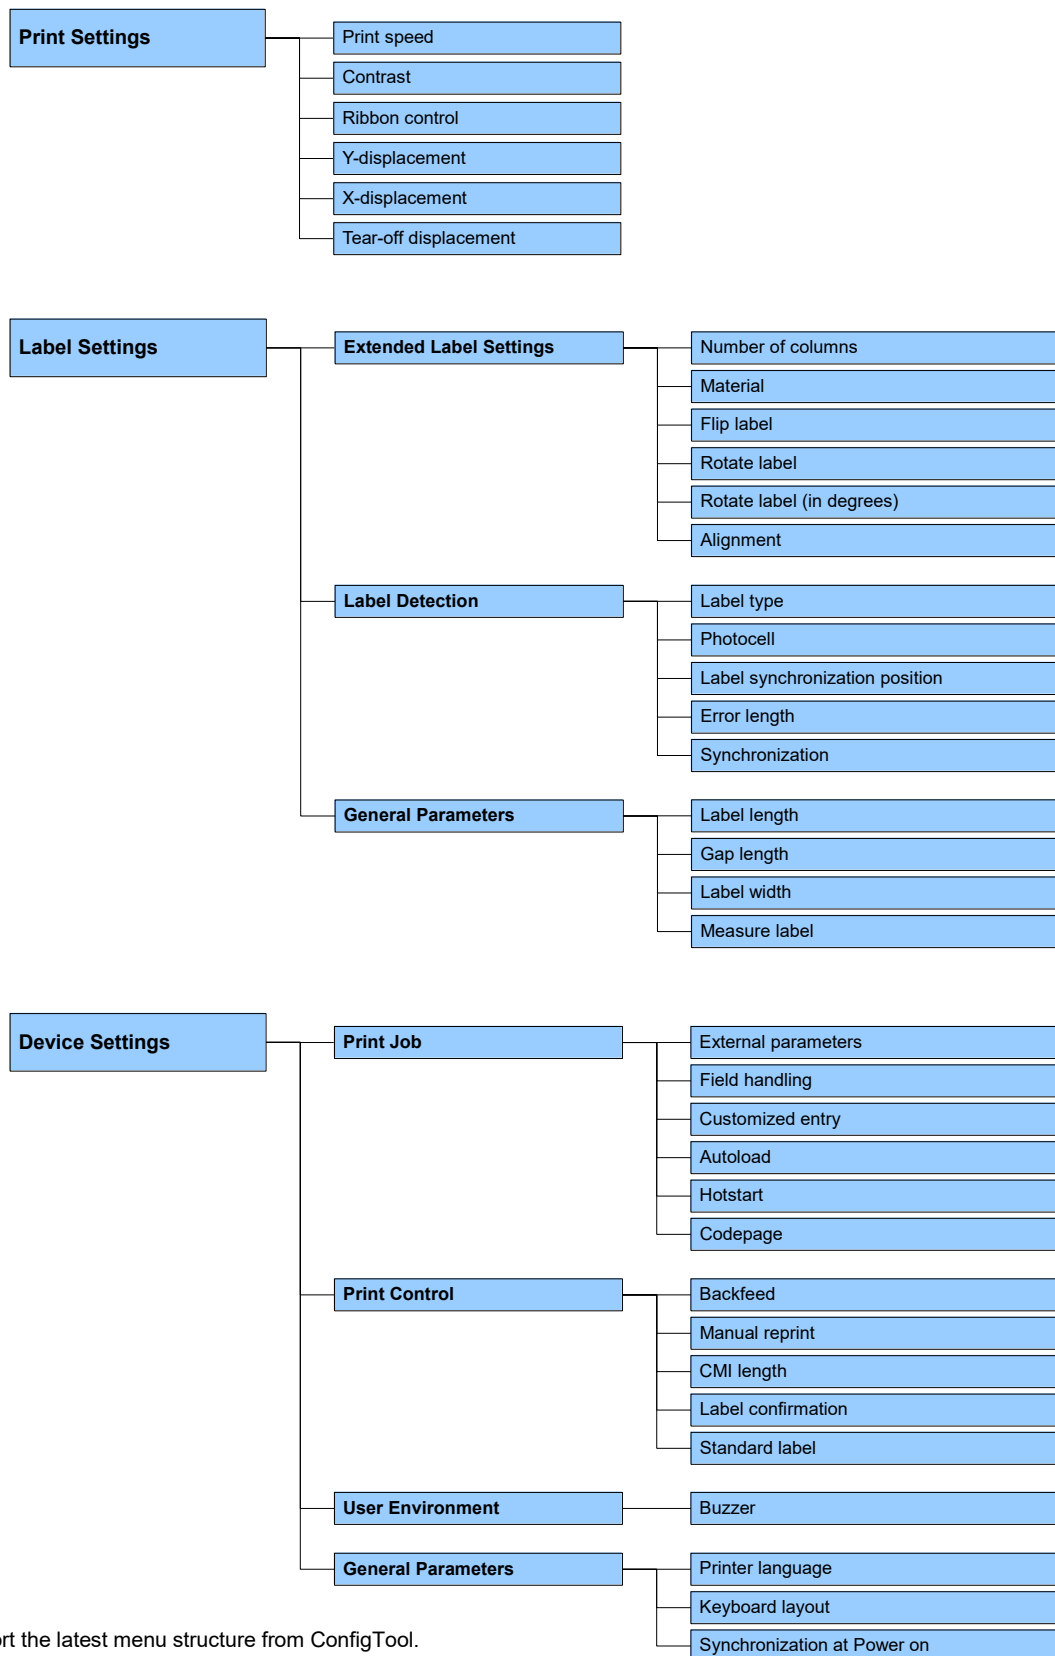



Export the latest menu structure from ConfigTool.
Printer settings --> Configuration --> Export

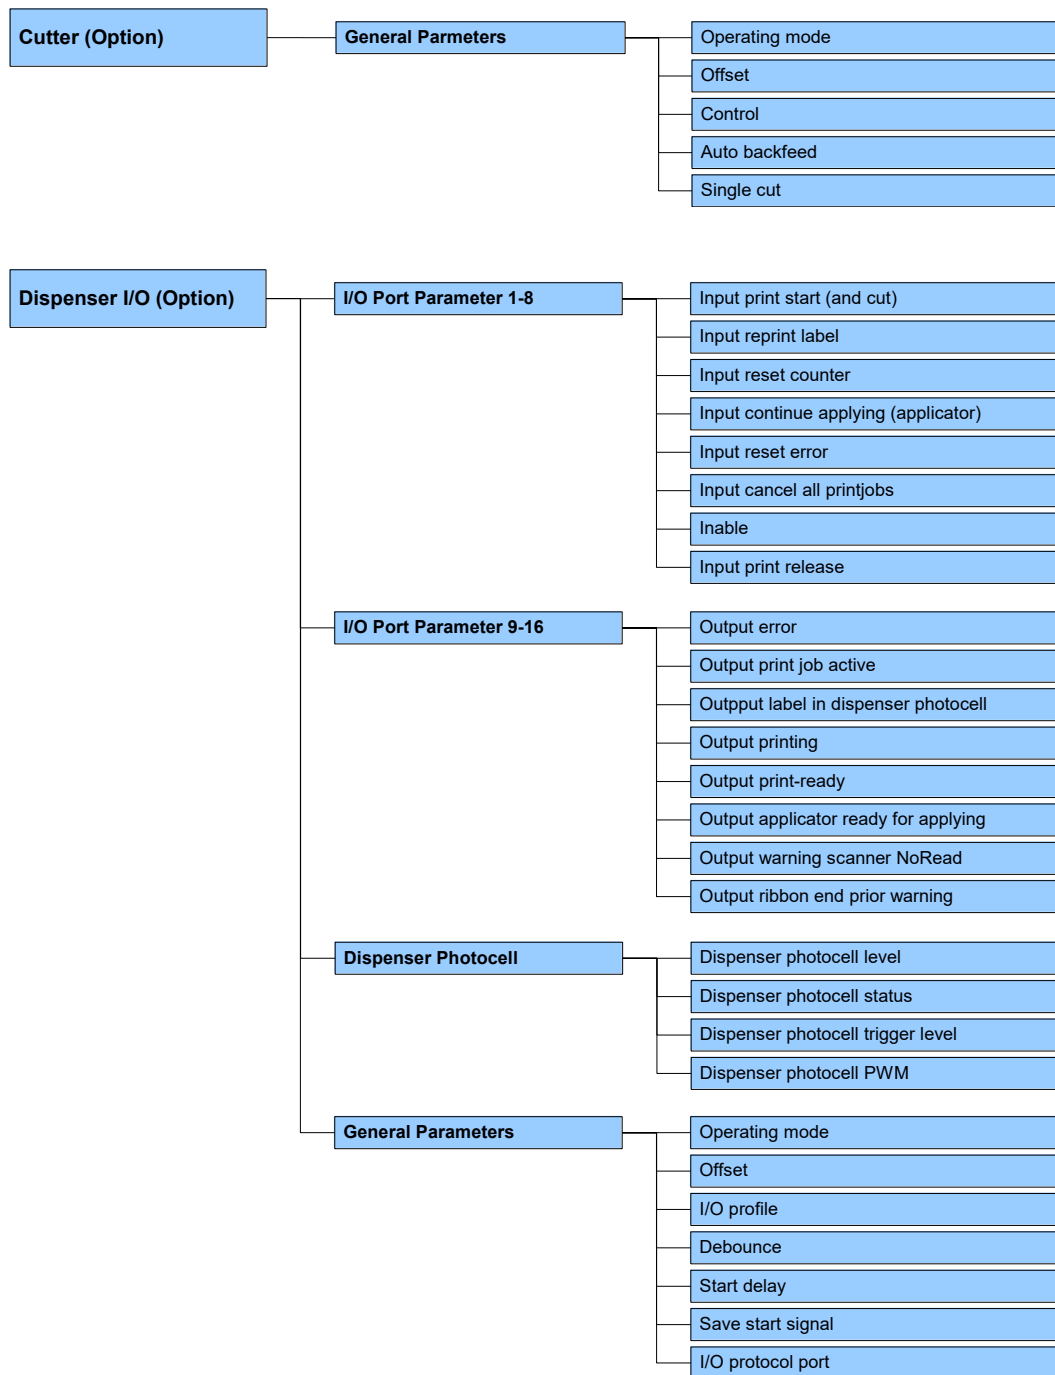

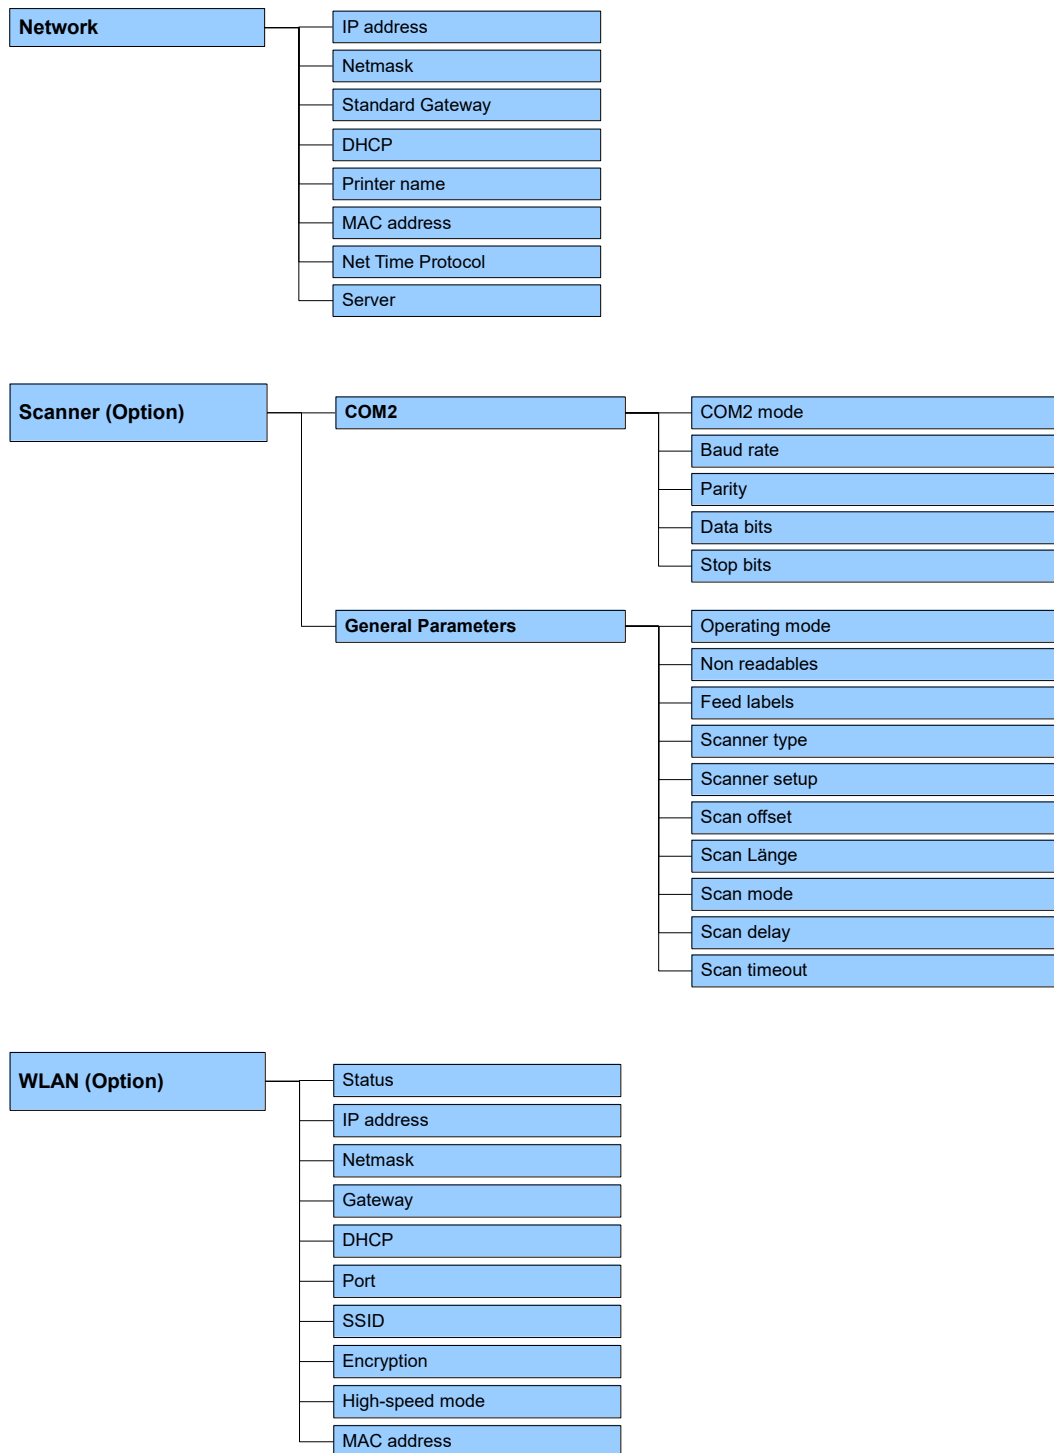

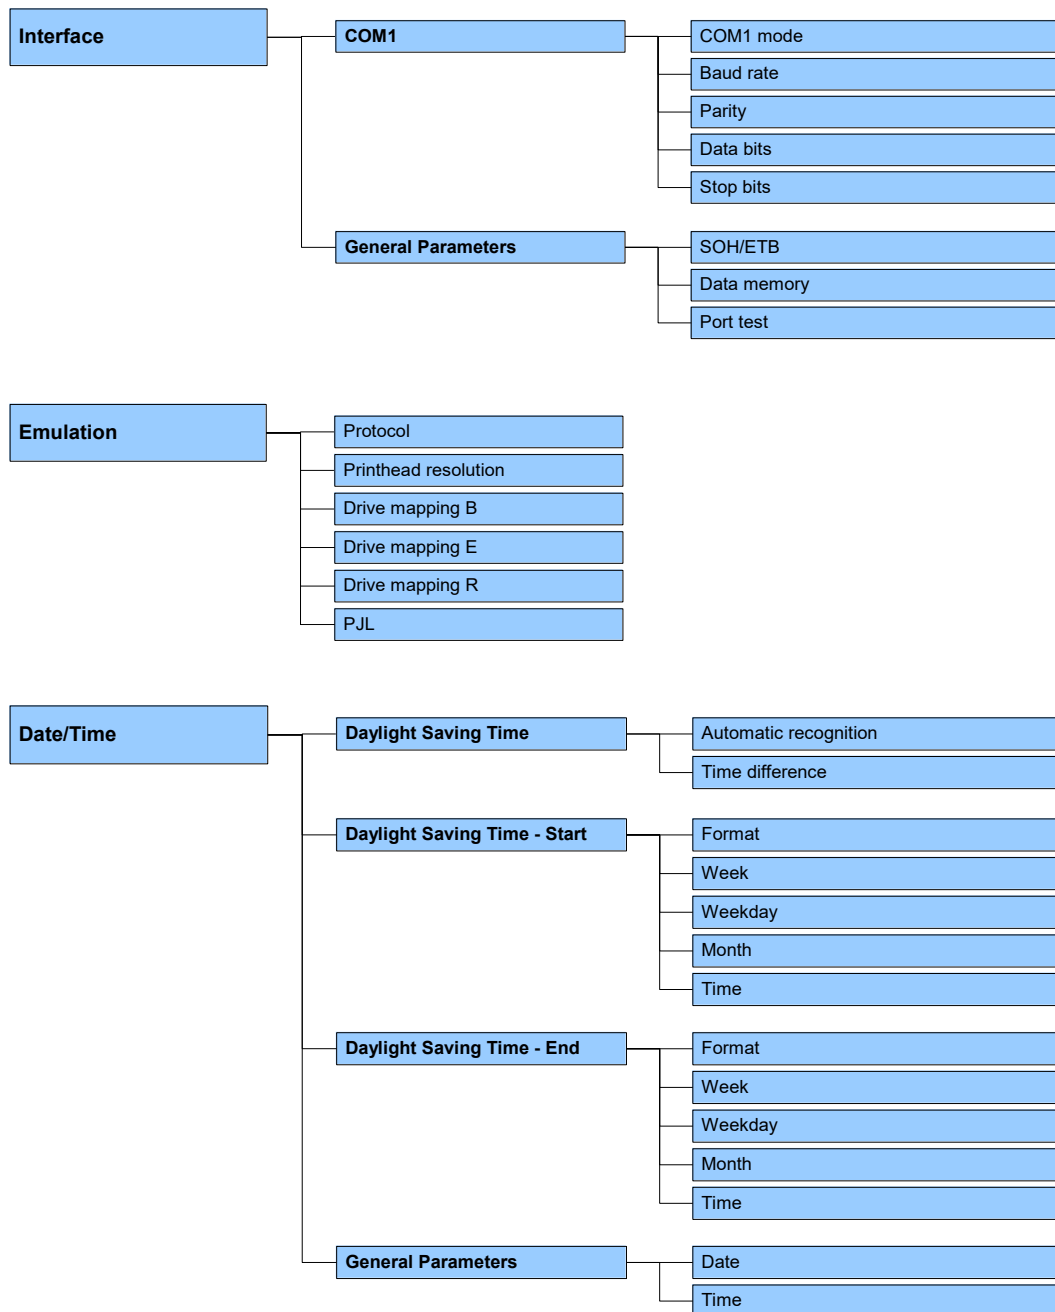

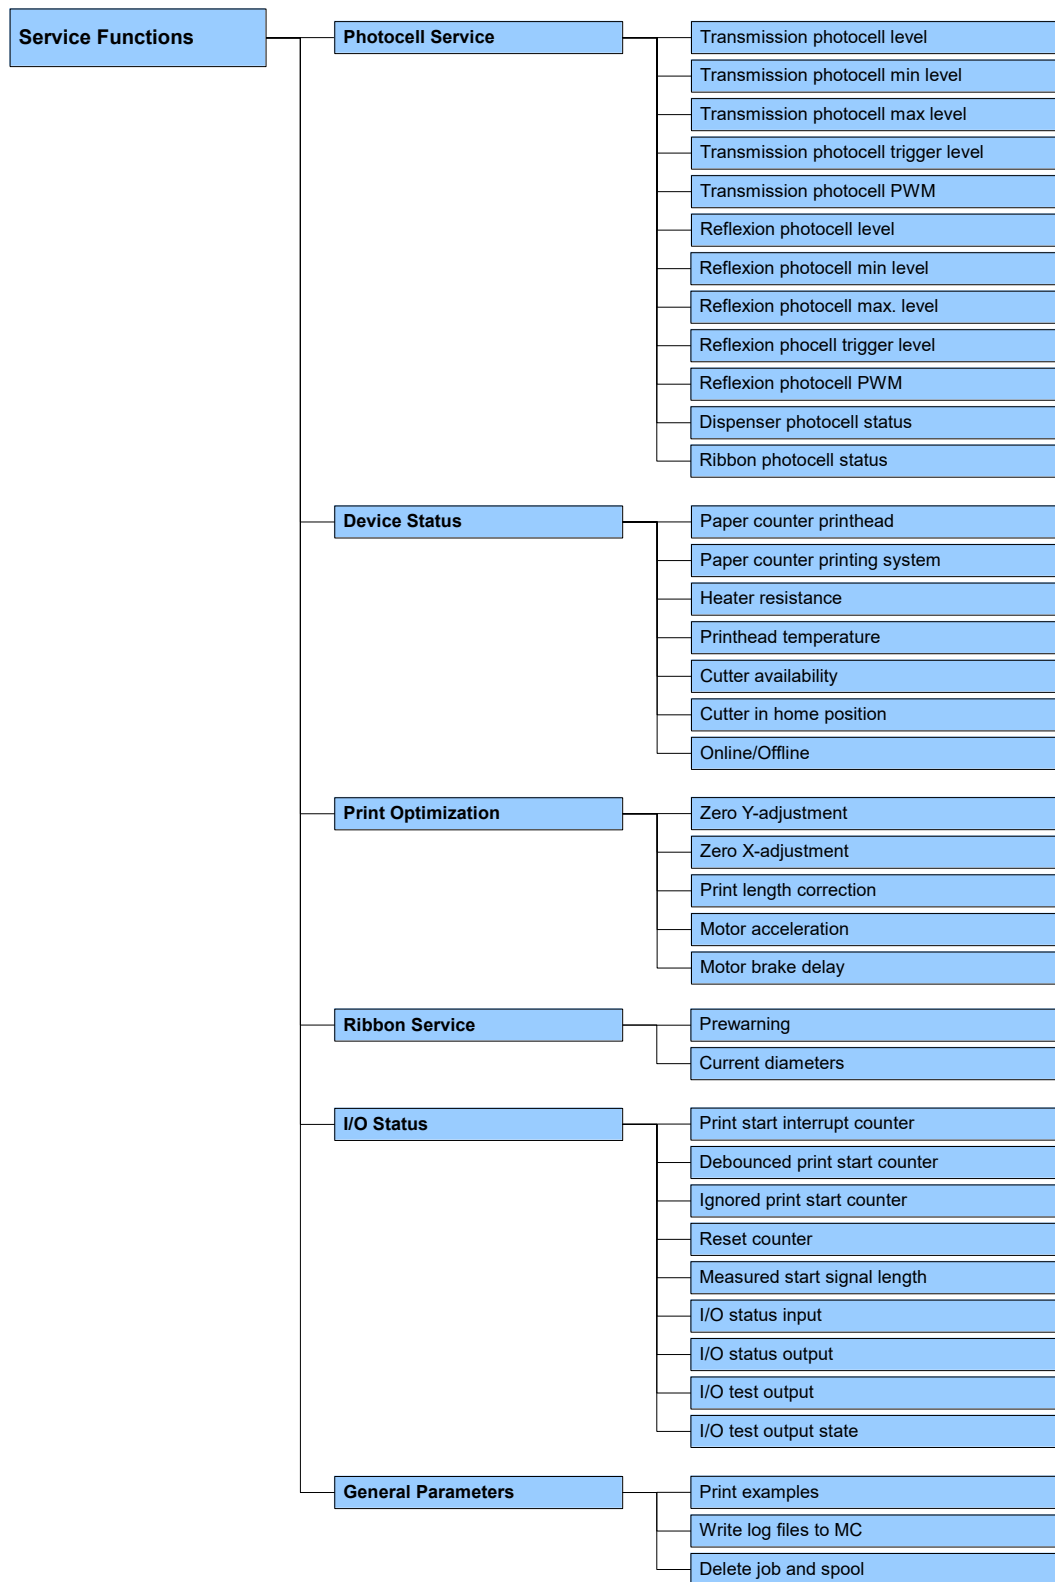

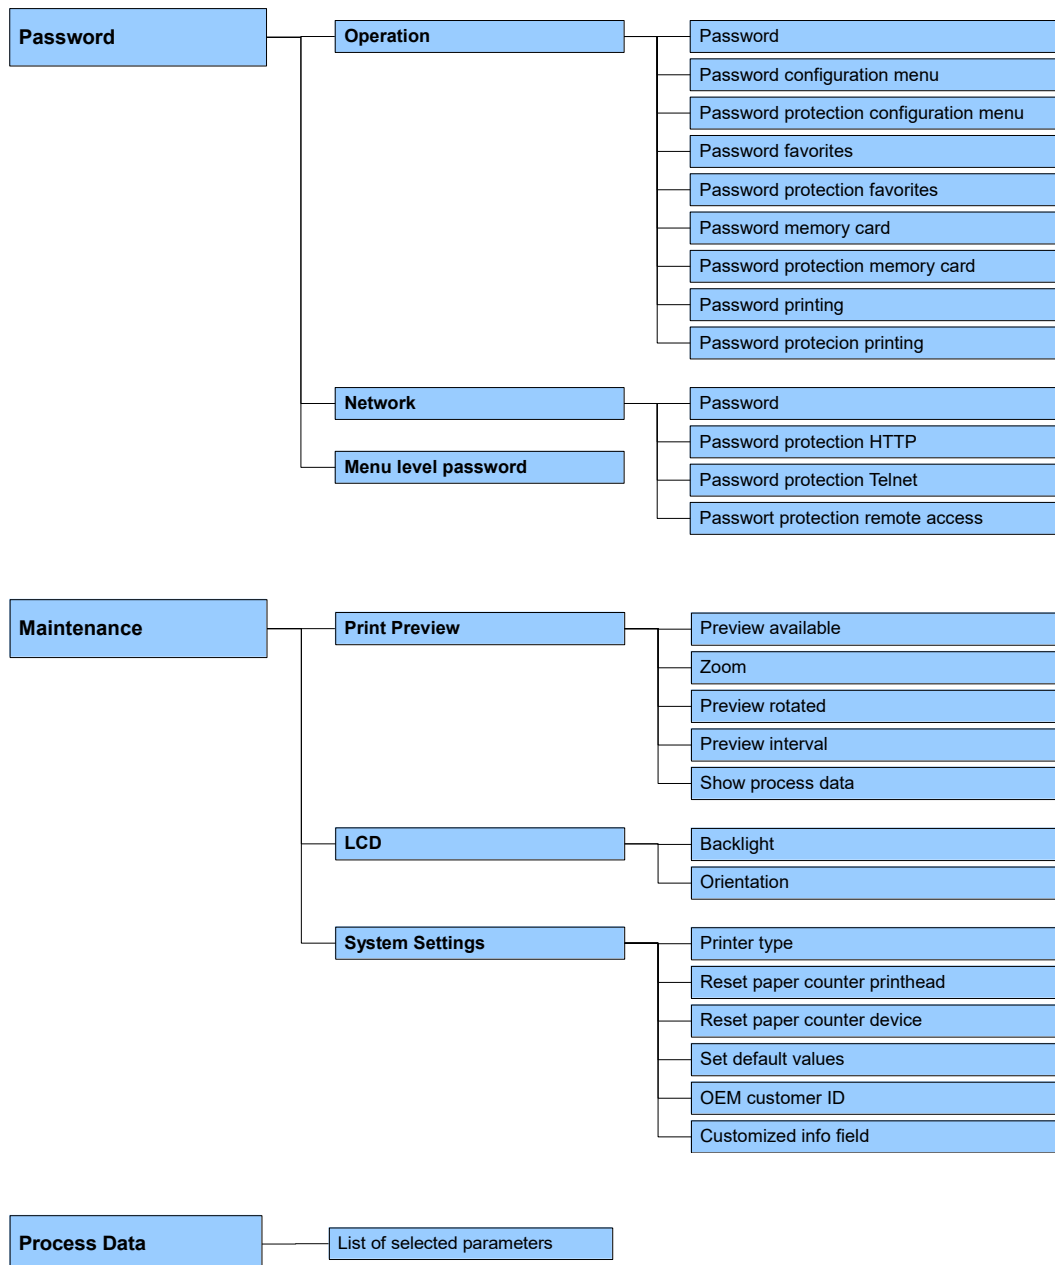

12.2 Touch-Screen Display Structure

The touch-screen display shows an intuitive graphic user interface with well-defined symbols and buttons.

The touch-screen display informs about the current device status and status of the print order, alerts in case of an error and indicates the device settings in the menu.

The desired settings are made by selecting the buttons on the touch-screen display.

Current date & time
Printer name (in the
network parameters)

Transfer ribbon status


Customized info field

The screenshot shows the Vario V touch-screen interface. At the top, there's a header with the 'CV valentin DRUCKSYSTEME' logo and three main menu buttons: 'Favourites', 'Configuration', and 'Memory Card'. Below this, the main display area is divided into sections. On the left, a blue box shows 'LabelPrt01', 'Vario V 104/8', and '10.102.3.74'. Below this is a green ribbon status icon and a '1/1' page indicator. Further down is a blue link icon. At the bottom left, a grey box shows 'IDLE'. The central part of the screen displays 'Iso-Propanol' with its chemical formula $\text{CH}_3\text{CH}_2(\text{OH})\text{CH}_3$ and hazard symbols for flammable and irritant. It includes a 'Gefahr' (Danger) section with 'Gefahrenhinweise' (Hazard statements) and 'Sicherheitshinweise' (Safety instructions). A barcode is shown with the weight 'Gewicht: 500ml'. At the bottom right, there are four buttons: 'Print', 'Test Print', 'Formfeed', and 'Info'.

Favorites	Display favorites list
Configuration	Select parameter settings
Memory Card	Access to memory card menu
Print	Start print job
Test print	Start test print
Formfeed	Start layout feed
Info	List of the installed components

12.3 Indication of Menus

Indication of main menus

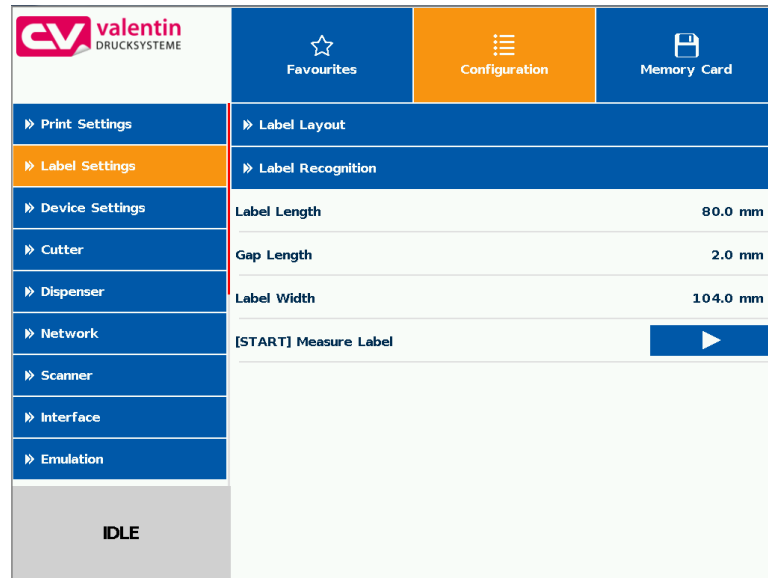


The selected (active) menu is highlighted on orange background.

If a selected menu contains so-called submenus, these are blue highlighted.

Indication of submenus

Different parameters are combined in a submenu.

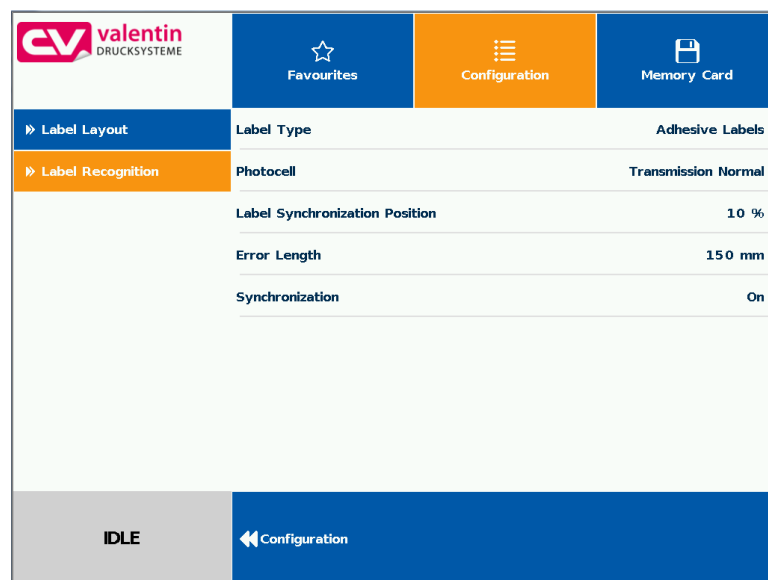


The left display side shows the available submenus. The currently selected (active) submenu is highlighted on orange background.


Press  to return one level.

12.4 User-Defined Info Field


From the predefined contents, the user can define the display of the user-defined info field (green).

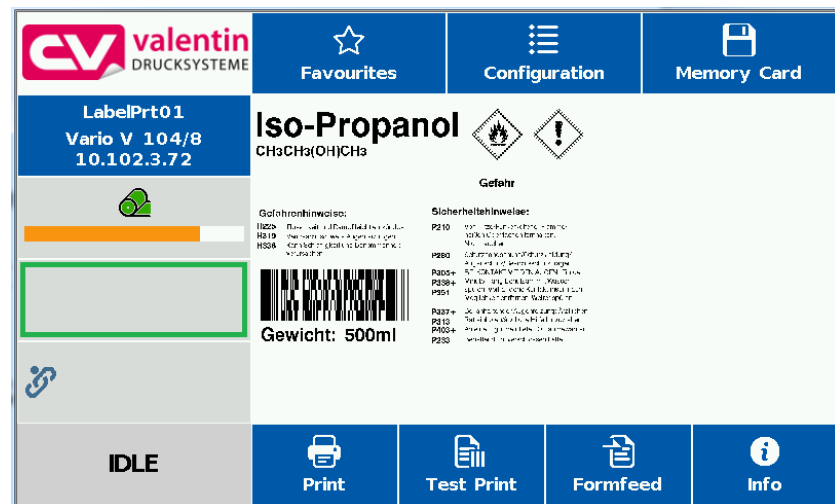

Select menu *Maintenance/System settings/User-defined info field* to specify what is to be displayed in the user-defined info field.

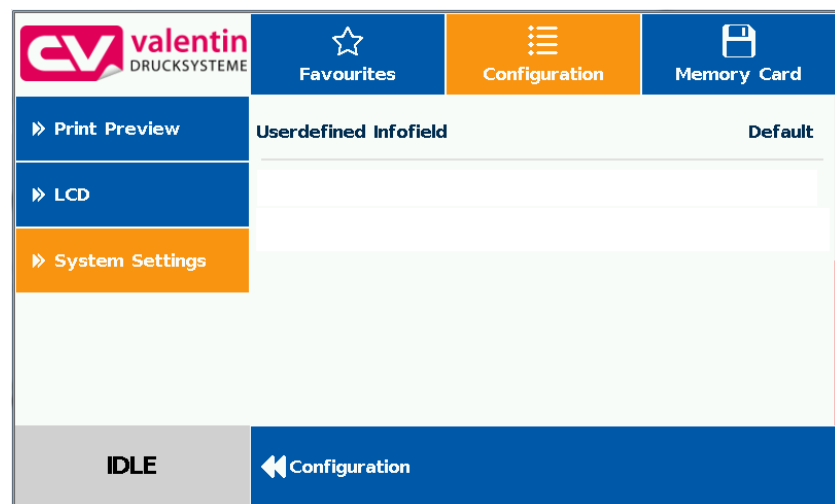

Selection of parameters

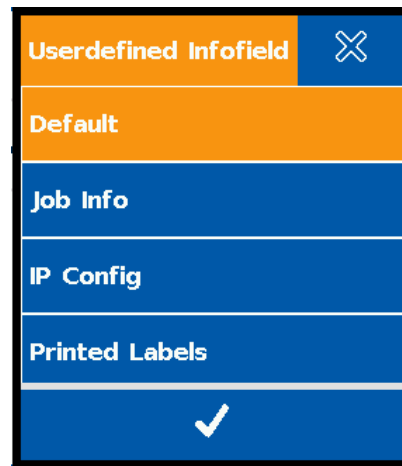

Standard:

Horizontale display orientation:
Empty info field

Vertical display orientation:

Indication of job info (label name and number
of printed labels)

Job info:

Indication of label names and the number of
already printed


IP configuration:

Indication of IP address and MAC address of
printing system

Printed labels:


Indication of printed labels as enlarged text
output

Display of predefined configuration

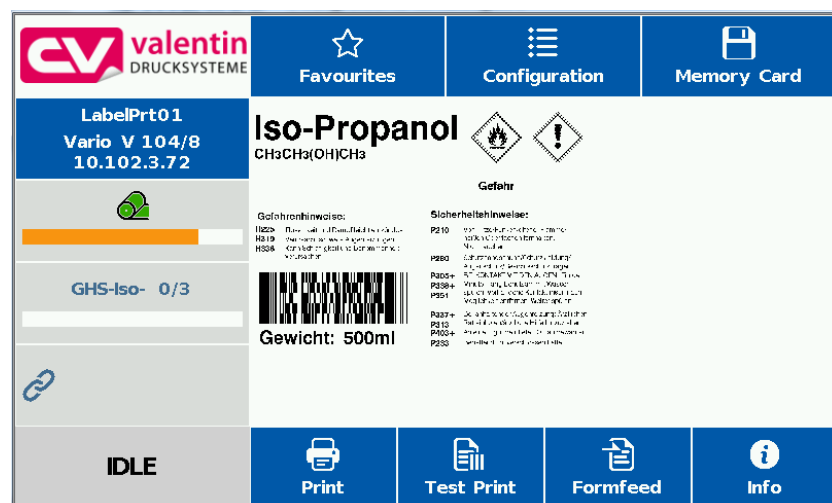


12.5 Favorites List


Add parameters to favorites

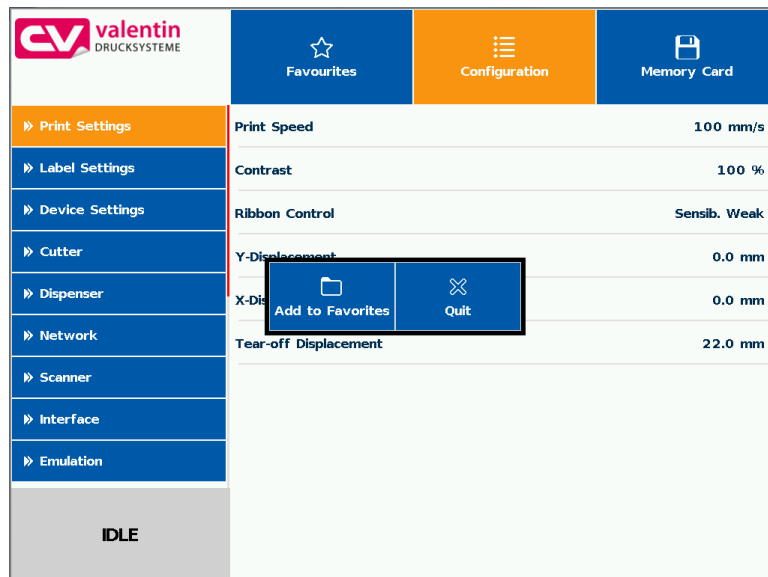

Press long (2 s) on a parameter (e.g. print speed) to display the appropriate selection.

Press *Add to favorites* to add the selected parameter to the favorites list.

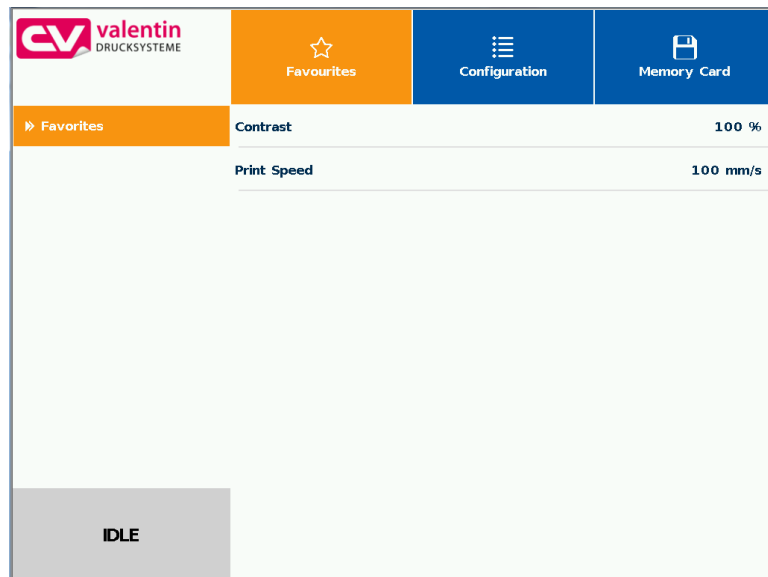

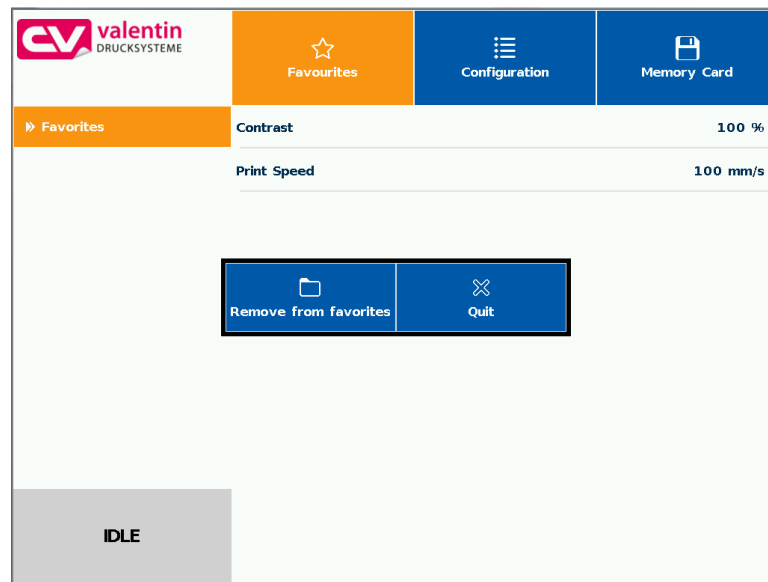



**Remove parameters
from favorites**





Press long (2 s) on a parameter (e.g. print speed) to display the appropriate selection. Press *Remove from favorites* to remove the selected parameter from the favorites list.


12.6 Parameter Input


Parameter input

		 Favourites	 Configuration	 Memory Card
» Print Settings	Print Speed	100 mm/s		
» Label Settings	Contrast	100 %		
» Device Settings	Ribbon Control	Sensib. Weak		
» Cutter	Y-Displacement	0.0 mm		
» Dispenser	X-Displacement	0.0 mm		
» Network	Tear-off Displacement	22.0 mm		
» Scanner				
» Interface				
» Emulation				
IDLE				


Numeric input


		 Favourites	 Configuration	 Memory Card
» Print Settings	Print Speed	100 mm/s		
» Label Settings	Print Speed [50...250 mm/s]	100 %		
» Device Settings		Sensib. Weak		
» Cutter		0.0 mm		
» Dispenser		0.0 mm		
» Network		22.0 mm		
» Scanner				
» Interface				
» Emulation				
IDLE				

Print Speed [50...250 mm/s]				
1	2	3	▲ +10	
4	5	6	150	
7	8	9	▼ -10	
	0	del		
✓				


In the header of input dialog the name of the parameter and the permissible value range are shown. The input is checked for validity. If the entered value not permissible, the button  is blocked.


Selection from list

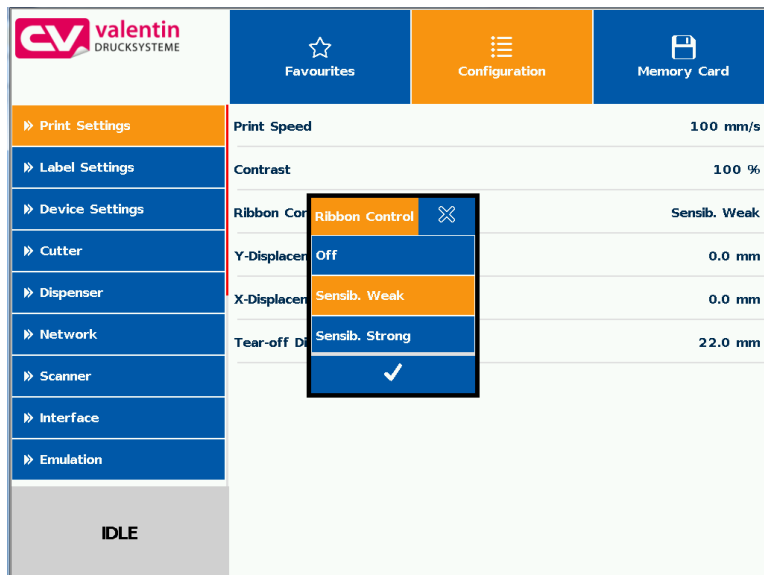



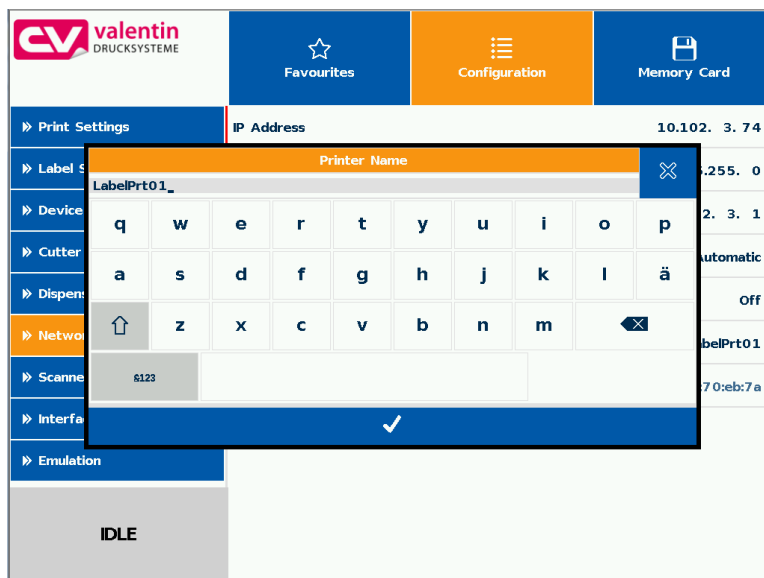

Select the parameter for which you want to change the selection.
The currently selected value is highlighted on orange background.
Press  to confirm the selection.

Alphanumeric input



The alphanumeric input is shown in the header of input dialog.
Press  to confirm the selection.

12.7 Navigation Zones

	 Favourites	 Configuration	 Memory Card
» Print Settings	Print Speed 100 mm/s		
» Label Settings	Contrast 100 %		
» Device Settings	Ribbon Control Sensib. Weak		
» Cutter	Y-Displacement 0.0 mm		
» Dispenser	X-Displacement 0.0 mm		
» Network	Tear-off Displacement 22.0 mm		
» Scanner			
» Interface			
» Emulation			
IDLE			

The respective navigation zone can be moved with an appropriate swipe movement from top to bottom or from the bottom up.



NOTICE!


With the used resistive touch screen variant a certain pressure on the display is needed.
It is not possible to navigate on the display with the swipe movement to the left and right with a finger (well-known from smartphones).

The position indications signalise the detail of the total list currently visible. If no position indication is visible then the total list can be displayed on the display. A swipe movement from top to bottom and/or from the bottom up is not possible.

12.8 Maintenance Zone

Different settings for the display indication can be done.

Maintenance - Print preview

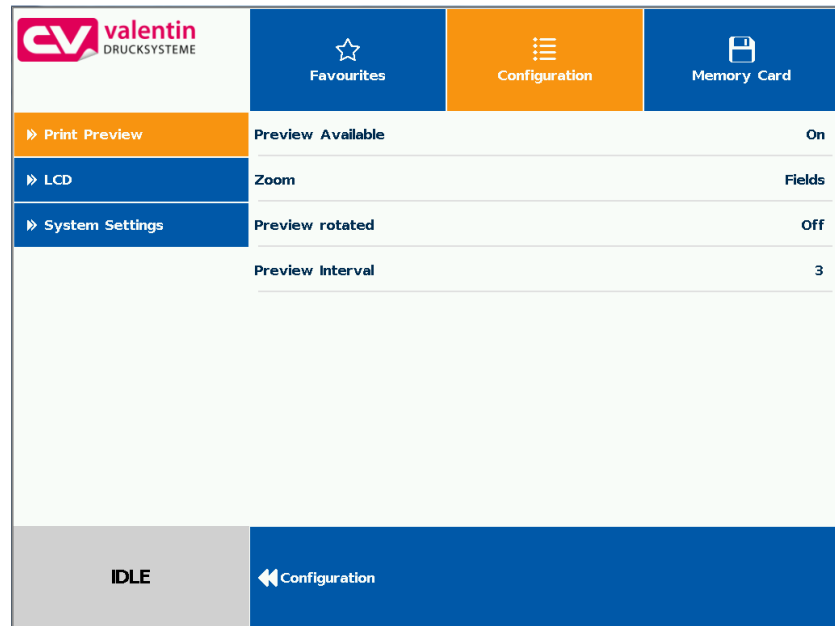


Print preview activated On/Off

With activated print preview a picture of the currently printed layout is shown on the display. If the function is not activated, the field remains empty.



Print preview – Zoom

Selection of a certain zoom value for the representation of print preview.

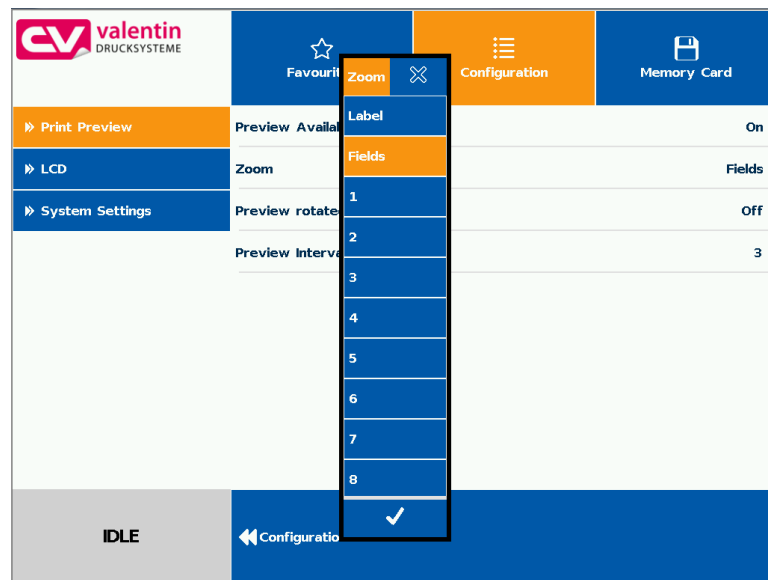


Label: The complete layout is fit to the indication zone.

Fields: Only the print range is fit to the indication zone.

1 .. 8: Manual zoom factor to scale the complete layout down.

Print preview – Preview rotated

The display of label preview can be rotated on the touch-screen display.

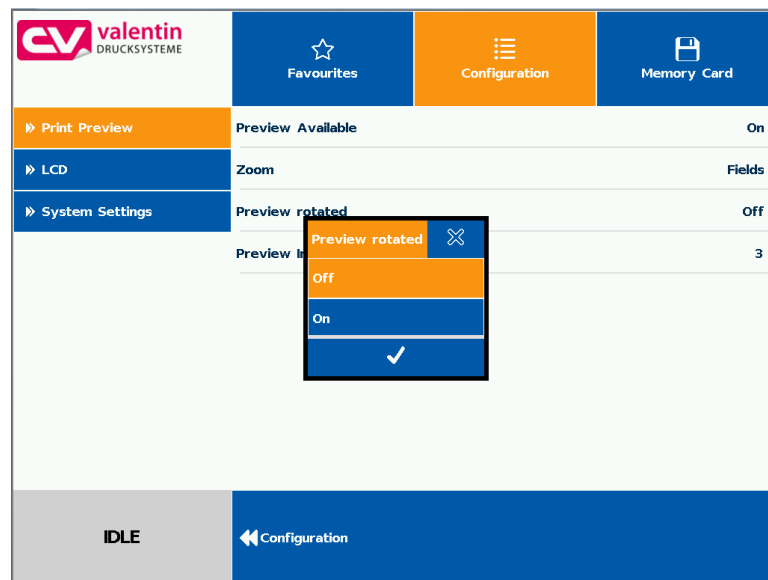


On: The label preview is shown rotated by 180° on the display.

Off: The label preview is represented in read direction.

Print preview – Interval


During a running print order the preview is refreshed in the set interval.

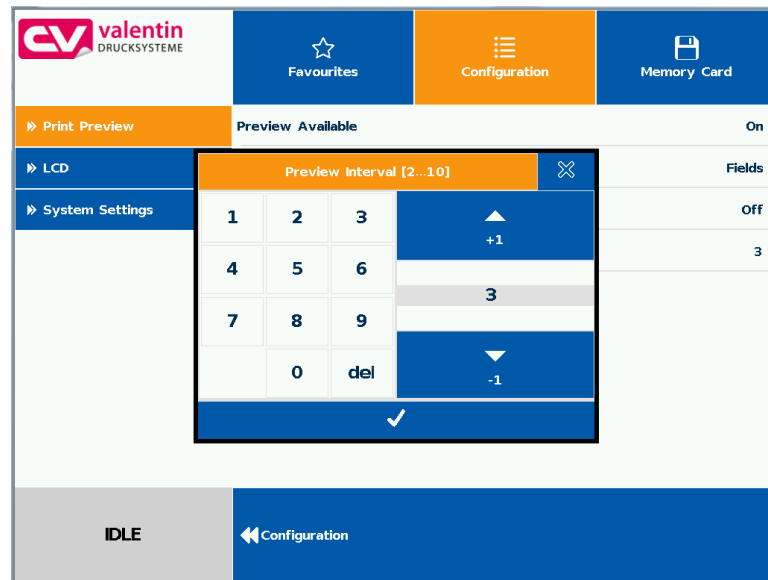


Value range: 0 .. 10 seconds

Maintenance - LCD

In the LCD maintenance sector, different parameters to the touch-screen display can be set.

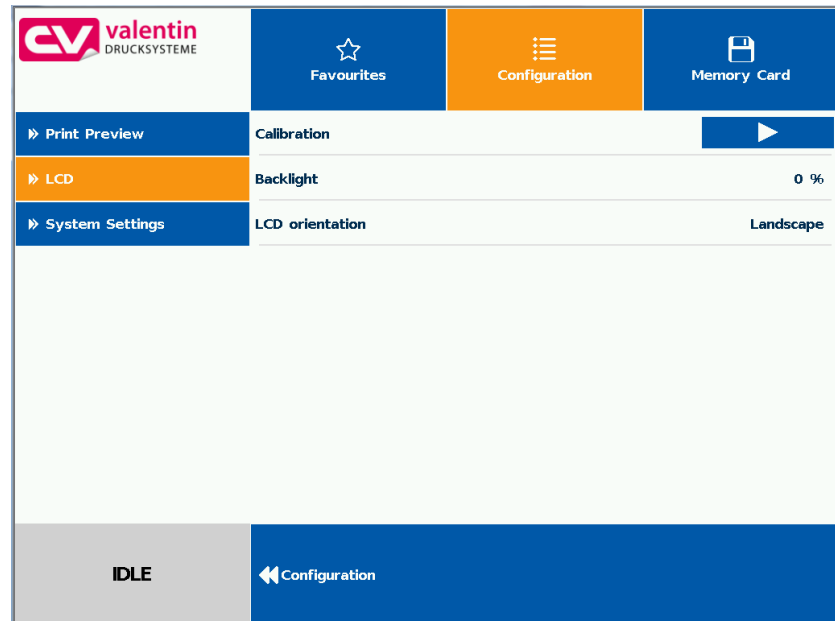


LCD - Backlight

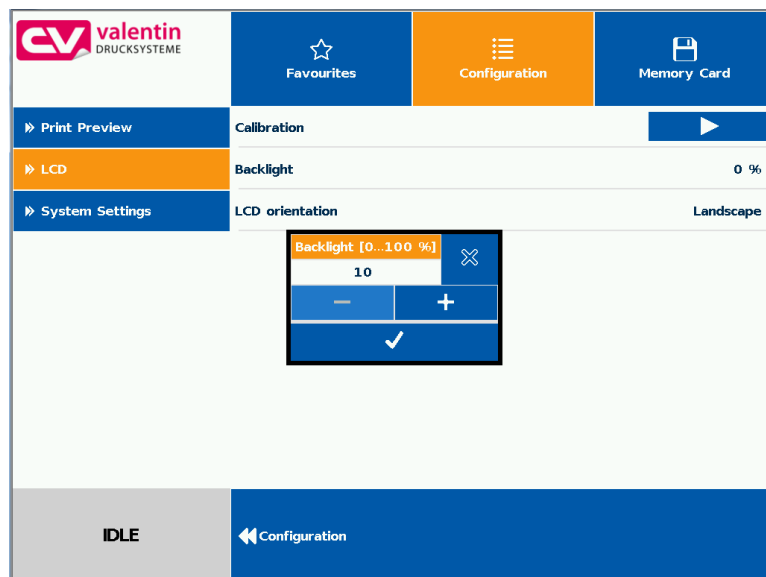

Value range: 0 .. 100 %.

LCD - Orientation

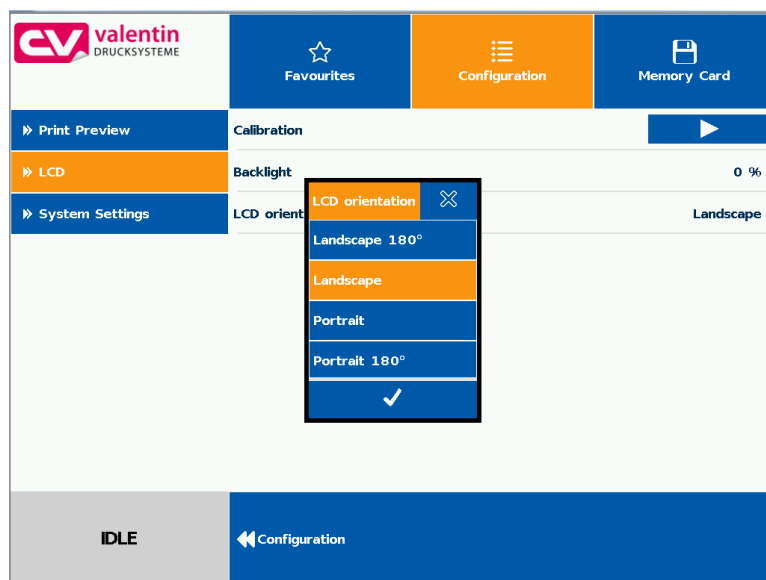


Landscape 180°: The display is represented turned by 180 degrees to the function 'Landscape'.

Landscape: The display is represented turned by 90 degrees to the reading direction.

Portrait: The display is represented in reading direction.


Portrait 180°: The display is represented turned by 180 degrees.

Maintenance - System settings

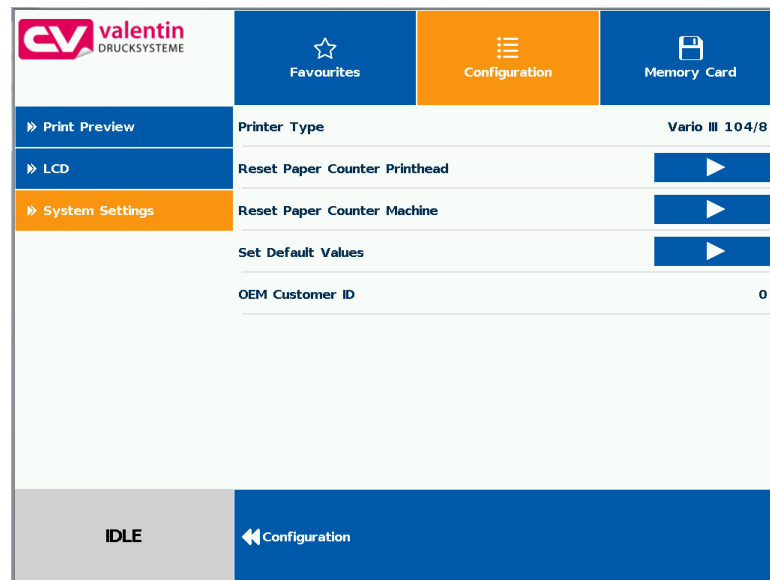


Different system settings such as set printer type, reset paper counter etc. can be made.

However, for the settings the corresponding password is necessary.

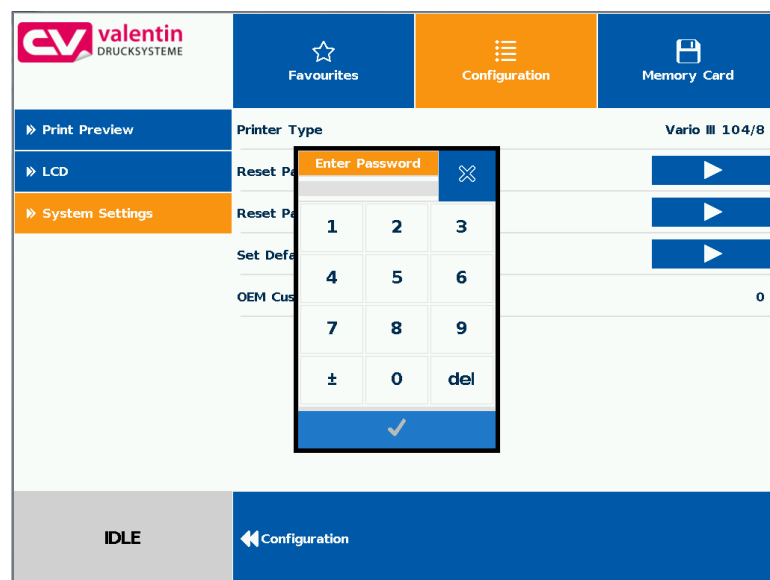


12.9 Process Data

Activation of display for process data

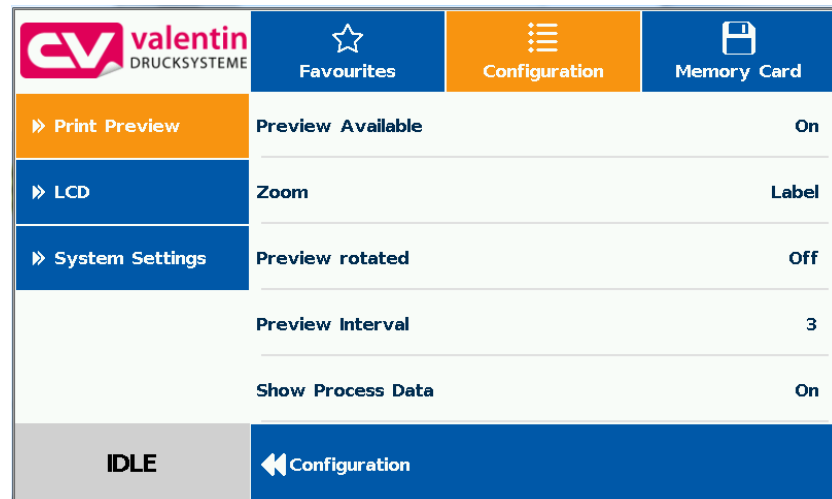


In order to show the process data, the parameter must be activated before in the menu *Maintenance/Print preview*.

Add parameter to process data

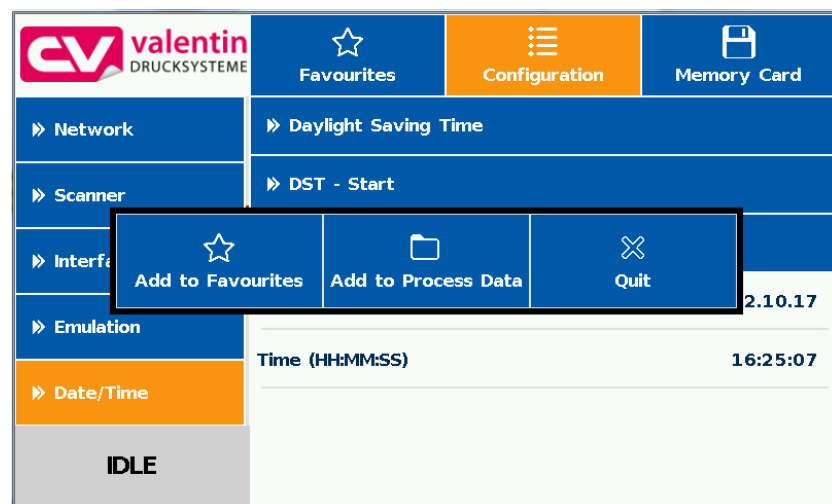


Press long (2 s) on a parameter (e.g. current time) to display the appropriate selection.

Press *Add to process data* to add the selected parameter to the process data list.

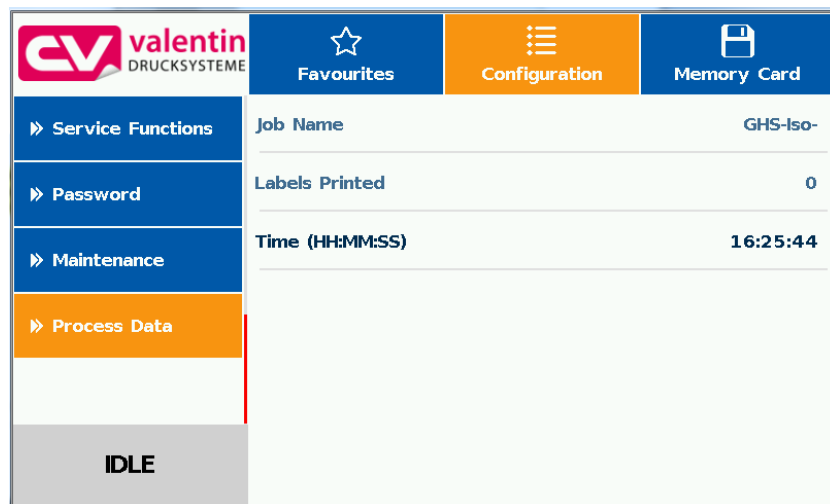

Remove parameter from process data

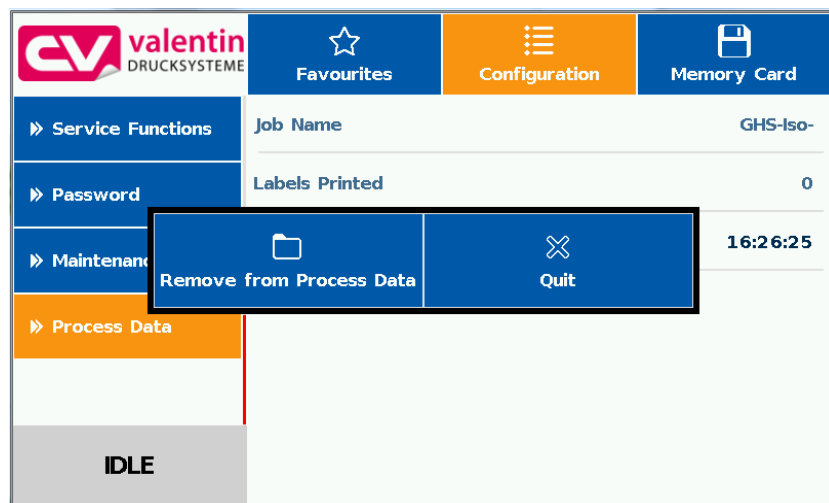

Press long (2 s) on a parameter (e.g. current time) to display the appropriate selection. Press *Remove from process data* to remove the selected parameter from the process data list.

Change of display vies Process data – Print preview

With activated print preview, the display shows a picture of the currently printed layout. The change to the process data view is effected by wiping to the right.


With activated print preview on the display a picture of the up-to-date printed layout is shown.

12.10 Memory Menu

SD Card


On the left side, the content of the currently selected directory is shown one below the other.

The preview zone in on the right side is. If available, the preview of the selected layout is shown.

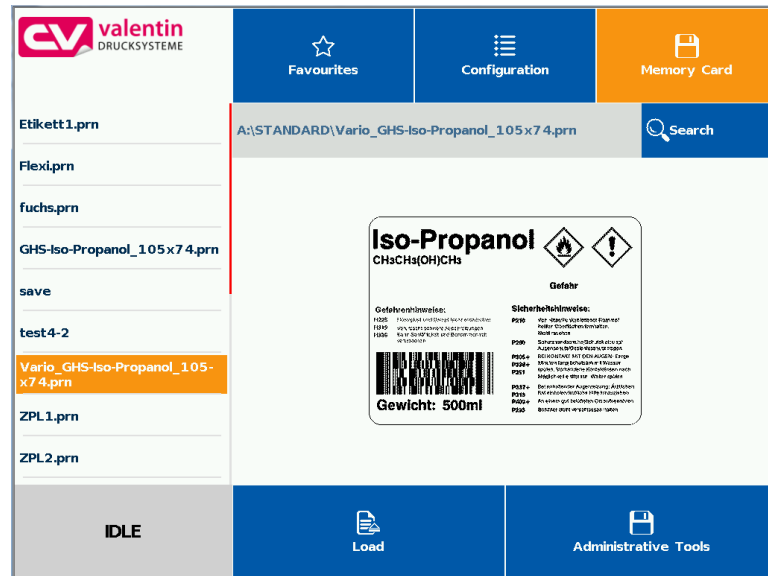


Load: The selected layout is loaded. After the number of copies have been entered, the print order is started.


Administrative tools: Switching to the file manager (File Explorer).

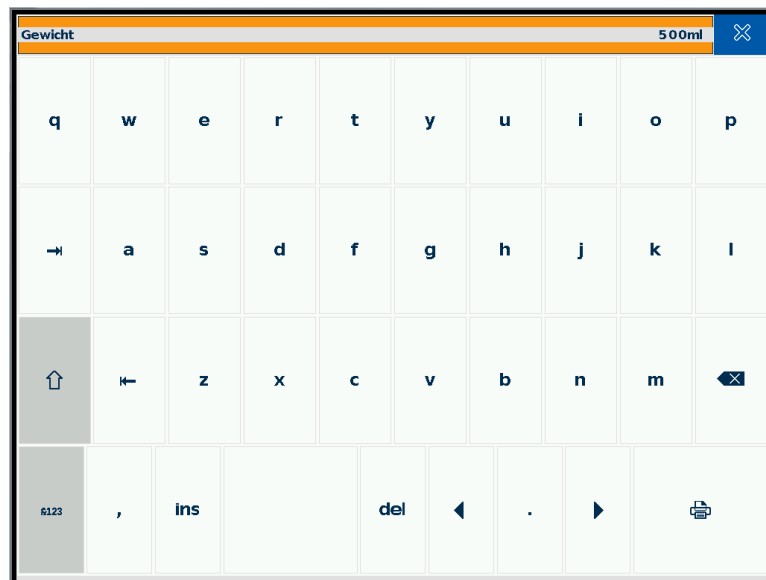

The user query can be entered at the cursor position.

Press  to change to the input of number of copies.

Number of copies

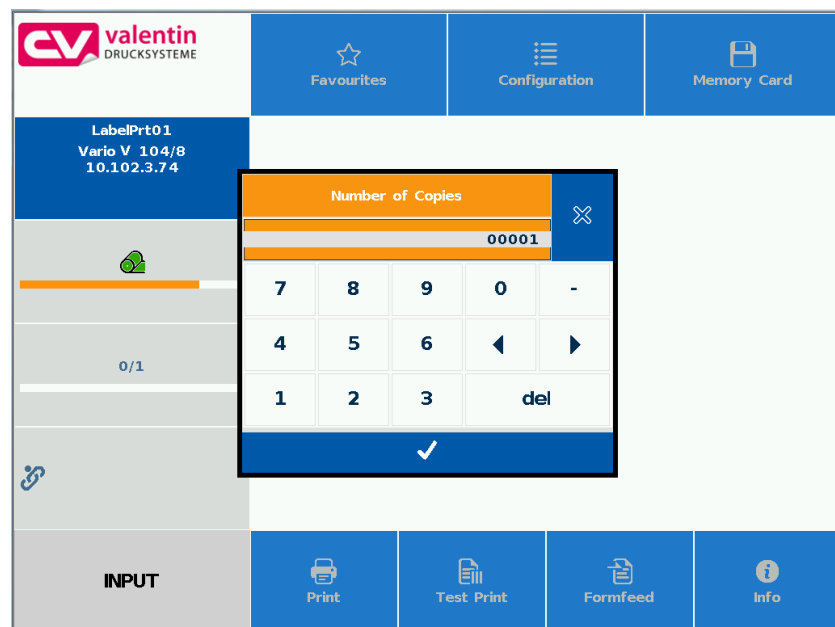

Enter the number of layouts to be printed.

12.11 Information Zone




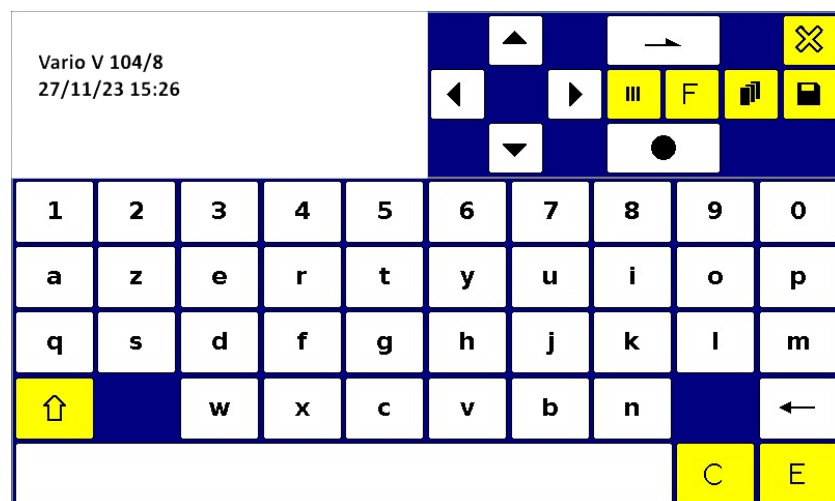
By pressing the **Info** button the versions of the installed components are displayed.

By pressing the **Info** button once more, the Home view is again displayed.

12.12 Change to Foil Keyboard


Press long (> 3 s) on the company logo left above, and the display changes to the indication of a conventionalize foil keyboard. The settings can be done by the standard operating panel (see page 39).

Press  to change to the previous view.



For more information about the use of printer and its foil keyboard can be found in chapter 6.1.

13 Environmentally-Friendly Disposal

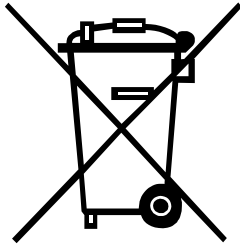

Manufacturers of B2B equipment are obliged to take back and dispose of old equipment that was manufactured after 13 August 2005. As a principle, this old equipment may not be delivered to communal collecting points. It may only be organised, used and disposed of by the manufacturer. Valentin products accordingly labelled can therefore be returned to Carl Valentin GmbH.

This way, you can be sure your old equipment will be disposed of correctly.

Carl Valentin GmbH thereby fulfils all obligations regarding timely disposal of old equipment and facilitates the smooth reselling of these products. Please understand that we can only take back equipment that is sent free of carriage charges.

The electronics board of the printing system is equipped with a battery. This must only be discarded in battery collection containers or by public waste management authorities.

Further information on the WEEE directive is available on our website www.carl-valentin.de.

14 Index

B

backfeed/delay 106, 107

C

column printing 103
 connecting printer 28
 connector pin assignment, printer rear 7
 control inputs and outputs 21, 22, 23
 control inputs/control outputs 18, 19, 20, 24, 25

E

environmentally-friendly disposal 135
 error messages/error corrections 91, 92, 93, 94, 95, 96, 97, 98, 99,
 100, 101

F

function menu
 date/time 58
 device settings 49, 50, 51, 52
 emulation 57
 interface 56
 label layout 47, 48
 main menu 63
 menu structure 42, 43, 44, 45
 network 53, 54
 password 54, 55
 print setting 46
 service functions 59, 60, 61, 62

H

hotstart 104, 105

I

initial operation 29
 installation 27
 instructions 5
 intended use 5, 6

K

keyboard, customized mode 40, 41

L

loading media
 cutter mode 33
 dispenser mode 34
 rewind mode 31
 tear-off mode 32
 transfer ribbon 35, 36

M

maintenance/cleaning	
general cleaning	84
label photocell cleaning	87
maintenance schedule	83
pressure roller cleaning	85
printhead adjusting	90
printhead cleaning	86
printhead replacing	88, 89
ribbon drawing roller, cleaning	84

O

operating conditions	10, 11, 12, 13
operation panel	39
options	
cutter	65, 66
dispenser I/O	67, 68, 69
scanner	70, 71
touch-screen display	115, 133
WLAN	69

P

photocells	108
printhead	
parallelism adjustment	90
pressure adjustment	90
Replacing	89
product description	6

S

safety Instructions	9
SD	
copying	81
SD card	
change directory	77
define user directory	75, 76
delete file	79
display structure	73
filter	82
firmware update	82
formatting	80
load file	78
load layout	76
navigation	74
save configuration	79
save layout	78
setting up printer	27
switching on/off printer	28

T

technical data	15, 16, 17
touch-screen display	
alphanumeric input	122
favorites list	119, 120
foil keyboard display	133

information zone	133
main menus	116
maintenance zone	124, 125, 126, 127, 128
memory menu	131, 132
menu structure	109, 110, 111, 112, 113, 114
navigation zones	123
numeric input	121
parameter input	121
process data	129, 130
submenus	116
user-defined info field	117, 118
transfer ribbon loading	35, 36

U

USB stick	
change directory	77
copying	81
delete file	79
display structure	73
filter	82
firmware update	82
load file	78
load layout	76
navigation	74
save configuration	79
save layout	78



Carl Valentin GmbH
Neckarstraße 78 – 86 u. 94
78056 Villingen-Schwenningen
Phone +49 7720 9712-0
info@carl-valentin.de
www.carl-valentin.de

